


- c. Mount right-angle end of internal interface cable connector to connector panel with two standoffs (PN 90-08451) supplied. Tighten sockets using small slotted screwdriver.

CONNECTING A TK50-R OR TK50-D TO HOST (FIGURE 2-9)

1. Connect the FCC cable assembly (PN 17-00484-01) to the J1 connector of the TK50-R (or TK50-D).
2. Connect the FCC cable assembly to the 50-pin connector on the I/O distribution panel.

Refer to Chapter 5, Technical Description, for considerations when installing multiple TK50-R or TK50-D tape drives.

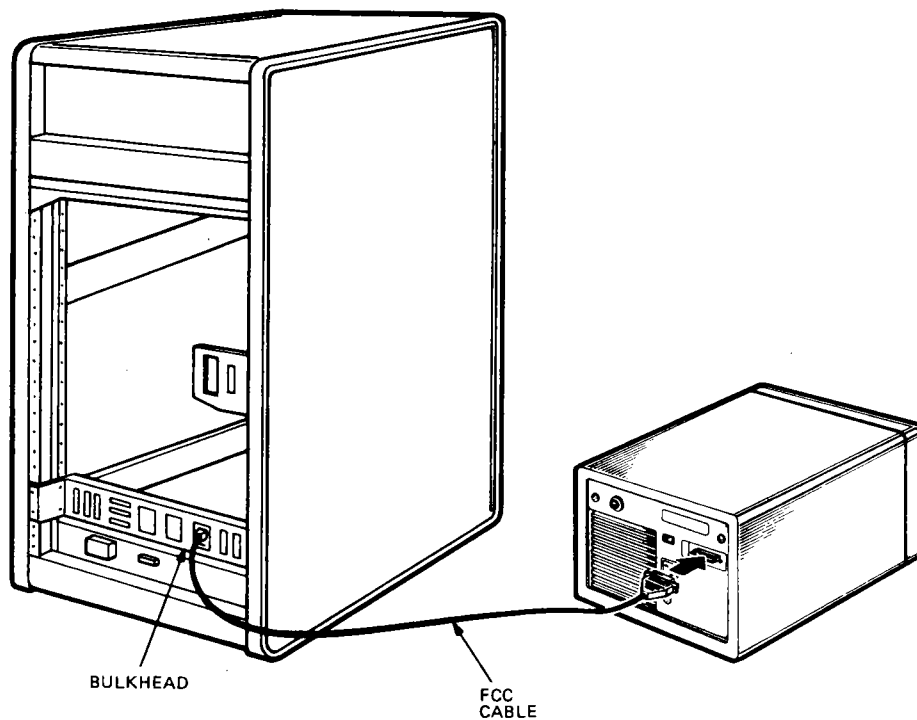

SHR-0401.85

Figure 2-9 External Drive Cable Installation