


5. Press the latch with the eraser end of a pencil and slide the tape drive forward (Figure 6-3).

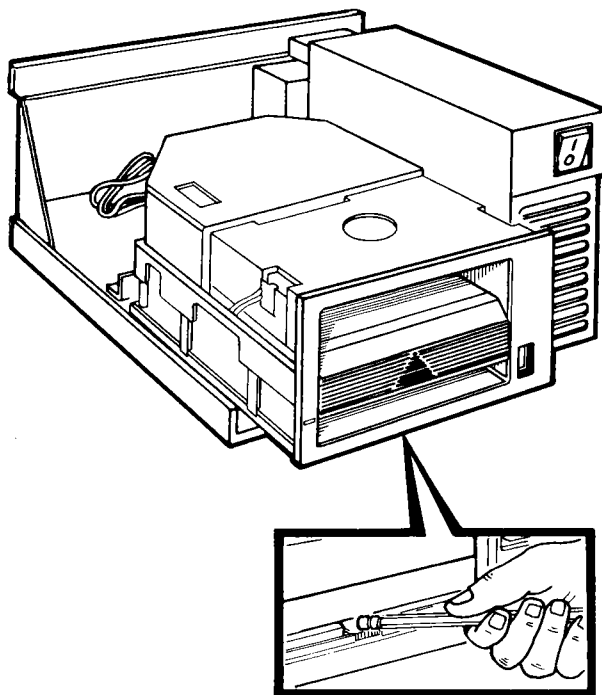

MR-15362
SHR-0414-85

Figure 6-3 Sliding the Tape Drive Forward