

CONTENTS

CHAPTER 1 INTRODUCTION TO THE TK50

About the Tape Cartridge	1-4
Terms Used in This Manual	1-5

CHAPTER 2 INSPECTING AND LOADING A TAPE CARTRIDGE

Inspect the Tape Cartridge	2-1
Label the Tape Cartridge	2-2
Write Protect the Tape Cartridge (To Protect Data)	2-2
Inspect the Take-up Leader Inside the TK50	2-3
Set the LOAD/UNLOAD Switch to UNLOAD	2-4
Watch the Lights and Turn on the Power	2-5
When the Green Light Goes On, Lift the Cartridge Insert/Release Handle	2-6
Smoothly and Completely Insert the Tape Cartridge	2-7
Lower the Cartridge Insert/Release Handle to Locked Position	2-8
Set the LOAD/UNLOAD Switch to LOAD (In Position)	2-9
A Running TK50	2-10
Lights	2-10

CHAPTER 3 UNLOADING THE TAPE CARTRIDGE

Set the LOAD/UNLOAD Switch to UNLOAD	3-1
After the Red Light Goes Off and the Green Light Goes On, Lift the Cartridge Insert/Release Handle	3-2
Remove the Cartridge and Return it to its Protective Case ...	3-3
Turn the Power Switch Off and Push the Cartridge Insert/Release Handle Down	3-4

CHAPTER 4 USES FOR THE TK50

As a Back-up Device	4-1
As a Software Distribution Medium	4-1
As a "Journaling" Device	4-2

CHAPTER 5 SOLVING PROBLEMS

TK50 Subsystem Failures	5-1
Diagnostic Failure with a Tape Cartridge Inserted	5-2
Read/Write Errors	5-2
System Problems Caused by TK50	5-3

CHAPTER 6 PROGRAMMING

CHAPTER 7 SERVICING

APPENDIX A TK50 TAPE DRIVE SPECIFICATIONS