



# AlphaPC 264DP

---

## User's Manual

Order Number: EC-RB0BA-TE

**Revision/Update Information:** This is a new document.

# Preliminary

Compaq Computer Corporation

---

**February 1999**

The information in this publication is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN, NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL. THIS INFORMATION IS PROVIDED "AS IS" AND COMPAQ COMPUTER CORPORATION DISCLAIMS ANY WARRANTIES, EXPRESS, IMPLIED OR STATUTORY AND EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, GOOD TITLE AND AGAINST INFRINGEMENT.

This publication contains information protected by copyright. No part of this publication may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

©1999 Digital Equipment Corporation.

All rights reserved. Printed in U.S.A.

COMPAQ, the Compaq logo, the Digital logo, and DIGITAL Registered in United States Patent and Trademark Office.

AlphaPC, DECchip, DECnet, DIGITAL UNIX, OpenVMS, ThinWire, and Tru64 are trademarks of Compaq Computer Corporation.

Microsoft, MS-DOS, Windows, Windows NT, and Windows 95 are registered trademarks of Microsoft Corporation.

Other product names mentioned herein may be the trademarks of their respective owners.

---

# Contents

## 1 About This Manual

|     |                                              |     |
|-----|----------------------------------------------|-----|
| 1.1 | Manual Conventions and Terminology . . . . . | 1-1 |
|-----|----------------------------------------------|-----|

## 2 Features of the AlphaPC 264DP

|       |                                                                 |      |
|-------|-----------------------------------------------------------------|------|
| 2.1   | Power Requirements . . . . .                                    | 2-6  |
| 2.2   | Environmental Requirements . . . . .                            | 2-6  |
| 2.3   | Physical Parameters . . . . .                                   | 2-7  |
| 2.3.1 | AlphaPC 264DP Hole and Connector Specifications. . . . .        | 2-8  |
| 2.3.2 | AlphaPC 264DP Daughtercard Mechanical Control Drawing . . . . . | 2-11 |

## 3 AlphaPC 264DP Switch Configuration

|     |                                 |     |
|-----|---------------------------------|-----|
| 3.1 | Fail-Safe Booter . . . . .      | 3-3 |
| 3.2 | Mini-Debugger . . . . .         | 3-3 |
| 3.3 | Password Bypass . . . . .       | 3-3 |
| 3.4 | Flash Write Protection. . . . . | 3-3 |
| 3.5 | 21272 Speed. . . . .            | 3-4 |

## 4 AlphaPC 264DP Connector Pinouts

|       |                                                        |     |
|-------|--------------------------------------------------------|-----|
| 4.1   | Mainboard Connectors . . . . .                         | 4-1 |
| 4.1.1 | Daughtercard Connector Pinouts . . . . .               | 4-1 |
| 4.1.2 | PCI Bus Connector Pinouts . . . . .                    | 4-3 |
| 4.1.3 | ISA Expansion Bus Connector Pinouts . . . . .          | 4-4 |
| 4.1.4 | IDE Drive Bus Connector Pinouts . . . . .              | 4-5 |
| 4.1.5 | Ultra SCSI Bus Connector Pinouts . . . . .             | 4-6 |
| 4.1.6 | SDRAM DIMM Connector Pinouts. . . . .                  | 4-6 |
| 4.1.7 | Diskette (Floppy) Drive Bus Connector Pinouts. . . . . | 4-8 |
| 4.1.8 | Parallel Bus Connector Pinouts . . . . .               | 4-8 |

|        |                                                                    |      |
|--------|--------------------------------------------------------------------|------|
| 4.1.9  | COM1/COM2 Serial Line Connector Pinouts . . . . .                  | 4-9  |
| 4.1.10 | Keyboard/Mouse Connector Pinouts . . . . .                         | 4-9  |
| 4.1.11 | +3-V Power Connector Pinouts . . . . .                             | 4-10 |
| 4.1.12 | +5-V Power Connector Pinouts . . . . .                             | 4-10 |
| 4.1.13 | Fan Box Power Connector Pinouts . . . . .                          | 4-10 |
| 4.1.14 | Speaker Connector Pinouts . . . . .                                | 4-11 |
| 4.1.15 | Halt Button Connector Pinouts . . . . .                            | 4-11 |
| 4.1.16 | Reset Button Connector Pinouts . . . . .                           | 4-11 |
| 4.1.17 | System Power Button Connector Pinouts . . . . .                    | 4-11 |
| 4.1.18 | Ultra SCSI Hard Drive LED Connector Pinouts . . . . .              | 4-12 |
| 4.1.19 | Power LED Connector Pinouts . . . . .                              | 4-12 |
| 4.2    | Daughtercard Connectors . . . . .                                  | 4-12 |
| 4.2.1  | Microprocessor Fan Power Connector Pinouts . . . . .               | 4-12 |
| 4.2.2  | SRAM Test Data Input Connector Pinouts . . . . .                   | 4-13 |
| 4.2.3  | AlphaPC 264DP Daughtercard Connector Pinouts . . . . .             | 4-13 |
| 4.2.4  | AlphaPC 264DP Daughtercard Input Power Connector Pinouts . . . . . | 4-15 |

## 5 Memory Configuration

|     |                                    |     |
|-----|------------------------------------|-----|
| 5.1 | Memory Subsystem . . . . .         | 5-1 |
| 5.2 | Configuring SDRAM Memory . . . . . | 5-2 |

## 6 Firmware Introduction

|       |                                                             |     |
|-------|-------------------------------------------------------------|-----|
| 6.1   | Firmware Overview . . . . .                                 | 6-1 |
| 6.1.1 | Power-Up . . . . .                                          | 6-1 |
| 6.1.2 | Switching From One Firmware to the Other . . . . .          | 6-2 |
| 6.2   | Preparing Diskettes . . . . .                               | 6-2 |
| 6.3   | Fail-Safe Booter Utility . . . . .                          | 6-3 |
| 6.4   | Updating Firmware From AlphaBIOS . . . . .                  | 6-4 |
| 6.5   | Updating Firmware From Alpha SRM Console with LFU . . . . . | 6-4 |
| 6.5.1 | Starting LFU . . . . .                                      | 6-4 |
| 6.5.2 | LFU Commands . . . . .                                      | 6-5 |

## 7 AlphaBIOS

|       |                                                |      |
|-------|------------------------------------------------|------|
| 7.1   | AlphaBIOS Conventions . . . . .                | 7-2  |
| 7.2   | AlphaBIOS Setup Program . . . . .              | 7-3  |
| 7.2.1 | Displaying Your System Configuration . . . . . | 7-4  |
| 7.2.2 | Upgrading AlphaBIOS . . . . .                  | 7-7  |
| 7.2.3 | Setting Up Your Hard Disk . . . . .            | 7-8  |
| 7.2.4 | Performing CMOS Setup Tasks . . . . .          | 7-9  |
| 7.2.5 | Running a Maintenance Program . . . . .        | 7-11 |

|       |                                                      |      |
|-------|------------------------------------------------------|------|
| 7.3   | Installing the Windows NT Operating System . . . . . | 7-13 |
| 7.3.1 | Requirements . . . . .                               | 7-13 |
| 7.3.2 | Before Installing Windows NT . . . . .               | 7-14 |
| 7.3.3 | Starting Windows NT Setup . . . . .                  | 7-14 |

## 8 Alpha SRM Console Firmware

|        |                                                        |      |
|--------|--------------------------------------------------------|------|
| 8.1    | Alpha SRM Console Firmware Conventions . . . . .       | 8-1  |
| 8.2    | Basic Alpha SRM Console Command Descriptions . . . . . | 8-3  |
| 8.3    | Displaying System Parameters . . . . .                 | 8-18 |
| 8.3.1  | Displaying the System Configuration . . . . .          | 8-18 |
| 8.3.2  | Displaying the Number of CPUs . . . . .                | 8-20 |
| 8.3.3  | Displaying System Devices . . . . .                    | 8-20 |
| 8.3.4  | Displaying the Memory Configuration . . . . .          | 8-21 |
| 8.3.5  | Displaying PALcode Revision Information . . . . .      | 8-22 |
| 8.3.6  | Displaying Console Revision Information . . . . .      | 8-22 |
| 8.4    | Environment Variables . . . . .                        | 8-22 |
| 8.4.1  | Environment Variable Summary . . . . .                 | 8-24 |
| 8.5    | Initializing the System . . . . .                      | 8-28 |
| 8.6    | Making the System Secure . . . . .                     | 8-28 |
| 8.6.1  | Set Password Command . . . . .                         | 8-29 |
| 8.6.2  | Set Secure Command . . . . .                           | 8-30 |
| 8.6.3  | Login Command . . . . .                                | 8-31 |
| 8.6.4  | Clear Password Command . . . . .                       | 8-32 |
| 8.7    | Examine and Deposit Commands . . . . .                 | 8-33 |
| 8.8    | Creating a Power-Up Script . . . . .                   | 8-35 |
| 8.9    | Starting and Stopping CPUs . . . . .                   | 8-36 |
| 8.10   | Getting Help . . . . .                                 | 8-37 |
| 8.11   | Upgrading the System . . . . .                         | 8-38 |
| 8.12   | Booting the Operating System . . . . .                 | 8-40 |
| 8.13   | Installing the Tru64 UNIX Operating System . . . . .   | 8-44 |
| 8.13.1 | Requirements . . . . .                                 | 8-44 |

## 9 Troubleshooting

|     |                              |     |
|-----|------------------------------|-----|
| 9.1 | Password Bypass . . . . .    | 9-1 |
| 9.2 | Hardware Startup . . . . .   | 9-2 |
| 9.3 | Daughtercard LEDs . . . . .  | 9-2 |
| 9.4 | Beep Codes . . . . .         | 9-3 |
| 9.5 | Post Codes . . . . .         | 9-3 |
| 9.6 | Fail-Safe Booter . . . . .   | 9-4 |
| 9.7 | Windows NT Startup . . . . . | 9-5 |

**A    Support, Products, and Documentation**

|       |                                    |     |
|-------|------------------------------------|-----|
| A.1   | Customer Support . . . . .         | A-1 |
| A.2   | Supporting Products . . . . .      | A-2 |
| A.2.1 | Memory . . . . .                   | A-2 |
| A.2.2 | Power Supply . . . . .             | A-2 |
| A.2.3 | Enclosure . . . . .                | A-2 |
| A.3   | Associated Documentation . . . . . | A-3 |

## Figures

|      |                                                                          |      |
|------|--------------------------------------------------------------------------|------|
| 2-1  | AlphaPC 264DP Mainboard Switch/Connector/Component Location . . . . .    | 2-3  |
| 2-2  | AlphaPC 264DP Daughtercard Switch/Connector/Component Location . . . . . | 2-5  |
| 2-3  | AlphaPC 264DP Mainboard Hole Specifications . . . . .                    | 2-8  |
| 2-4  | AlphaPC 264DP Mainboard Connector Specifications . . . . .               | 2-9  |
| 2-5  | AlphaPC 264DP Mainboard I/O Connector Specifications . . . . .           | 2-10 |
| 2-6  | AlphaPC 264DP Daughtercard Mechanical Control Drawing . . . . .          | 2-11 |
| 3-1  | Mainboard Switchpack 2 . . . . .                                         | 3-1  |
| 3-2  | Mainboard Switchpack 3 . . . . .                                         | 3-2  |
| 3-3  | Daughtercard Switchpack 2 . . . . .                                      | 3-2  |
| 5-1  | AlphaPC 264DP Memory Subsystem . . . . .                                 | 5-1  |
| 5-2  | AlphaPC 264DP DIMM Connectors . . . . .                                  | 5-2  |
| 6-1  | Example of Running LFU . . . . .                                         | 6-4  |
| 7-1  | AlphaBIOS Boot Screen . . . . .                                          | 7-3  |
| 7-2  | AlphaBIOS Setup Screen . . . . .                                         | 7-3  |
| 7-3  | Systemboard Configuration Screen . . . . .                               | 7-4  |
| 7-4  | Hard Disk Configuration Screen . . . . .                                 | 7-5  |
| 7-5  | Memory Configuration Screen . . . . .                                    | 7-6  |
| 7-6  | Setup Screen Selecting AlphaBIOS Upgrade . . . . .                       | 7-7  |
| 7-7  | Hard Disk Setup Screen . . . . .                                         | 7-8  |
| 7-8  | Standard CMOS Setup Screen . . . . .                                     | 7-9  |
| 7-9  | Advanced CMOS Setup Screen . . . . .                                     | 7-10 |
| 7-10 | Run Maintenance Program Submenu . . . . .                                | 7-11 |
| 7-11 | Entering the Program Name . . . . .                                      | 7-12 |
| 8-1  | Example of Show Config Command . . . . .                                 | 8-19 |
| 8-2  | Example of Show CPU Command . . . . .                                    | 8-20 |
| 8-3  | Example of Show Device Command . . . . .                                 | 8-21 |
| 8-4  | Example of Show Memory Command . . . . .                                 | 8-21 |
| 8-5  | Example of Show PAL Command . . . . .                                    | 8-22 |
| 8-6  | Example of Show Version Command . . . . .                                | 8-22 |
| 8-7  | Example of Set Envar and Show Envar Commands . . . . .                   | 8-23 |
| 8-8  | Example of Initialize Command . . . . .                                  | 8-28 |
| 8-9  | Examples of Set Password Command . . . . .                               | 8-29 |
| 8-10 | Examples of Set Secure Command . . . . .                                 | 8-30 |
| 8-11 | Examples of Login Command . . . . .                                      | 8-31 |
| 8-12 | Examples of Clear Password Command . . . . .                             | 8-32 |
| 8-13 | Examples of Deposit Command . . . . .                                    | 8-34 |
| 8-14 | Examples of Examine Command . . . . .                                    | 8-34 |
| 8-15 | Example of Editing the nvram Script . . . . .                            | 8-36 |
| 8-16 | Example of Clearing the nvram Script . . . . .                           | 8-36 |
| 8-17 | Example of Halt and Continue Commands . . . . .                          | 8-37 |
| 8-18 | Example of Help Command . . . . .                                        | 8-38 |
| 8-19 | Example of Lfu Command . . . . .                                         | 8-39 |
| 8-20 | Example of Boot Command . . . . .                                        | 8-41 |

## Tables

|      |                                                                                      |      |
|------|--------------------------------------------------------------------------------------|------|
| 2-1  | AlphaPC 264DP Features . . . . .                                                     | 2-1  |
| 2-2  | AlphaPC 264DP Mainboard Switch/Connector/Component List . . . . .                    | 2-4  |
| 2-3  | AlphaPC 264DP Daughtercard Switch/Connector/Component List . . . . .                 | 2-5  |
| 2-4  | Power Supply DC Current Requirements . . . . .                                       | 2-6  |
| 2-5  | AlphaPC 264DP Environmental Requirements . . . . .                                   | 2-7  |
| 4-1  | Daughtercard Connector Pinouts (J18, J23) . . . . .                                  | 4-1  |
| 4-2  | PCI Bus Connector Pinouts (J35, J40–J42, J44, J46) . . . . .                         | 4-3  |
| 4-3  | ISA Expansion Bus Connector Pinouts (J47) . . . . .                                  | 4-4  |
| 4-4  | IDE Drive Bus Connector Pinouts (J45) . . . . .                                      | 4-5  |
| 4-5  | Ultra SCSI Bus Connector Pinouts (J34, J38) . . . . .                                | 4-6  |
| 4-6  | SDRAM DIMM Connector Pinouts (J1, J5, J6, J9, J11, J13, J14, J16, J25–J32) . . . . . | 4-6  |
| 4-7  | Diskette (Floppy) Drive Bus Connector Pinouts (J43) . . . . .                        | 4-8  |
| 4-8  | Parallel Bus Connector Pinouts (J17) . . . . .                                       | 4-8  |
| 4-9  | COM1/COM2 Serial Line Connector Pinouts (J19) . . . . .                              | 4-9  |
| 4-10 | Keyboard/Mouse Connector Pinouts (J21) . . . . .                                     | 4-9  |
| 4-11 | +3-V Power Connector Pinouts (J3) . . . . .                                          | 4-10 |
| 4-12 | +5-V Power Connector Pinouts (J33) . . . . .                                         | 4-10 |
| 4-13 | Fan Box Power Connector Pinouts (J2, J15, J22, J24) . . . . .                        | 4-10 |
| 4-14 | Speaker Connector Pinouts (J39) . . . . .                                            | 4-11 |
| 4-15 | Halt Button Connector Pinouts (J12) . . . . .                                        | 4-11 |
| 4-16 | Reset Button Connector Pinouts (J8) . . . . .                                        | 4-11 |
| 4-17 | System Power Button Connector Pinouts (J7) . . . . .                                 | 4-11 |
| 4-18 | Ultra SCSI Hard Drive LED Connector Pinouts (J10) . . . . .                          | 4-12 |
| 4-19 | Power LED Connector Pinouts (J36) . . . . .                                          | 4-12 |
| 4-20 | Microprocessor Fan Power Connector Pinouts (J1) . . . . .                            | 4-12 |
| 4-21 | SROM Test Data Input Connector Pinouts (J2) . . . . .                                | 4-13 |
| 4-22 | Daughtercard Connector Pinouts (J3) . . . . .                                        | 4-13 |
| 4-23 | Input Power Connector Pinouts (J4) . . . . .                                         | 4-15 |
| 5-1  | AlphaPC 264DP SDRAM Memory Configurations . . . . .                                  | 5-3  |
| 6-1  | LFU Commands . . . . .                                                               | 6-5  |
| 7-1  | Action Keys . . . . .                                                                | 7-2  |
| 7-2  | CMOS Setup Tasks . . . . .                                                           | 7-9  |
| 8-1  | Device Naming Convention . . . . .                                                   | 8-20 |
| 8-2  | Architecture-Required Environment Variables . . . . .                                | 8-24 |
| 8-3  | System-Defined Environment Variables . . . . .                                       | 8-25 |
| 9-1  | AlphaPC 264DP Daughtercard LEDs . . . . .                                            | 9-2  |
| 9-2  | Beep Codes . . . . .                                                                 | 9-3  |
| 9-3  | Post Codes . . . . .                                                                 | 9-3  |



# 1

---

## About This Manual

This manual describes the AlphaPC 264DP, a board for computing systems based on the Alpha 21264 microprocessor and the companion 21272 core logic chipset. It describes both the mainboard's and the daughtercard's features and how to set the configuration switches. This manual helps users to install and populate the AlphaPC 264DP mainboard with memory boards and peripheral cards.

### 1.1 Manual Conventions and Terminology

The following conventions are used in this manual.

**Caution:** Cautions indicate potential damage to equipment, software, or data.

**Extents:** Extents are specified by a single number or a pair of numbers in brackets ( [ ] ) separated by a colon (:), and are inclusive. For example, bits [7:3] specify an extent including bits 7, 6, 5, 4, and 3. Multiple bit fields are shown as extents.

**Italic Type:** *Italic* type emphasizes important information and indicates complete titles of documents.

**Note:** Notes provide additional information about a topic.

**Numbering:** All numbers are decimal or hexadecimal unless otherwise indicated. In case of ambiguity, a subscript indicates the radix of nondecimal numbers. For example, 19 is a decimal number, but 19<sub>16</sub> and 19A are hexadecimal numbers.

**Register Figures:** Register figures have bit and field position numbering starting at the right (low-order) and increasing to the left (high-order).

**Signal Names:** All signal names are printed in **boldface** type. Signal names that originate in an industry-standard specification, such as PCI or IDE, are printed in the case as found in the specification (usually uppercase). Active low signals have either a pound sign “#” appended, or a “not” overscore bar; for example, **DEVSEL#** and **RESET**.

## Manual Conventions and Terminology

**Terms:** The following terms are used in this manual:

| This term...                            | Refers to...                                                                                                       |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Microsoft Windows NT installation guide | The Microsoft <i>Windows NT Workstation Installation Guide</i> and the <i>Windows NT Server Installation Guide</i> |
| Windows NT                              | The Microsoft Windows NT Workstation and Windows NT Server operating systems                                       |
| Alpha SRM console                       | The Alpha SRM console firmware                                                                                     |
| AlphaBIOS                               | The AlphaBIOS firmware                                                                                             |
| Tru64 UNIX                              | COMPAQ'S 64-bit UNIX operating system, replacing DIGITAL UNIX.                                                     |

# 2

## Features of the AlphaPC 264DP

The AlphaPC 264DP system (AlphaPC 264DP) consists of an AlphaPC 264DP mainboard (a planar board, referred to as the mainboard throughout this document), and one or two AlphaPC 264DP daughtercards (daughtercard). The daughtercard consists of the 21264 microprocessor, L2 cache, reset FPGA, and power converters for 2.2 volts and 1.5 volts.

Table 2–1 provides an overview of the AlphaPC 264DP's features.

**Table 2–1 AlphaPC 264DP Features**

| Feature                         | Description                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Mainboard</b>                |                                                                                                                                                                                                   |
| Daughtercards                   | Support for two daughtercards, each containing an Alpha 21264 microprocessor (64-bit RISC) operating at 500 MHz, and a 2MB, 128-bit L2 cache with late-write HSTL synchronous static RAM (SSRAM). |
| Core logic chipset              | 21272 core logic chipset, comprising 11 chips (8 Dchips, 2 Pchips, and 1 Cchip) that provide an interface to system memory and the PCI bus.                                                       |
| Synchronous DRAM (SDRAM) memory | 128MB to 4GB memory complement, with 72-bit ECC — four memory arrays, each consisting of four 200-pin buffered DIMMs, with qualified 100-MHz SDRAMs.                                              |

**Table 2–1 AlphaPC 264DP Features (Continued)**

| Feature                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| I/O and miscellaneous support | The AlphaPC 264DP mainboard has the following support: <ul style="list-style-type: none"><li>• Two 64-bit, 33-MHz PCI buses</li><li>• Six 64-bit PCI expansion slots (one shared with ISA)</li><li>• Cypress CY82C693UB chip, providing support for PCI-to-ISA bridge, IDE bus, keyboard, mouse, and time-of-year clock<ul style="list-style-type: none"><li>– ISA expansion bus, with one ISA expansion slot (shared with PCI)</li><li>– IDE bus (Note: Only CD-ROM drives are supported. The maximum supported cable length is 12 inches.)</li><li>– SMC FDC37C669 combination controller chip provides control for diskettes, two UARTs with modem control, and a parallel port</li></ul></li><li>• Adaptec AIC7895 chip, providing integrated dual-port, ultrawide SCSI</li></ul> |
| Firmware                      | Windows NT AlphaBIOS and Alpha SRM console.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Daughtercard</b>           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Microprocessor                | Alpha 21264 microprocessor (64-bit RISC)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Synchronous L2 cache          | Onboard 2MB, direct-mapped, late-write SSRAM cache with 128-bit data path                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| I/O and miscellaneous support | The AlphaPC 264DP daughtercard has the following support: <ul style="list-style-type: none"><li>• 270-pin interface to mainboard</li><li>• SROM support using 512KB flash ROM</li><li>• Linear regulator, providing 3.3 V dc to 1.5 V dc conversion</li><li>• dc-to-dc converter, providing 5 V dc to 2.2 V dc</li><li>• Reset/configuration FPGA</li><li>• Presence detect logic, for cache configuration and CPU speed</li><li>• SROM test port</li><li>• 18-pin power connector</li></ul>                                                                                                                                                                                                                                                                                          |

Figure 2–1 shows the mainboard and its components.

**Figure 2–1 AlphaPC 264DP Mainboard Switch/Connector/Component Location**

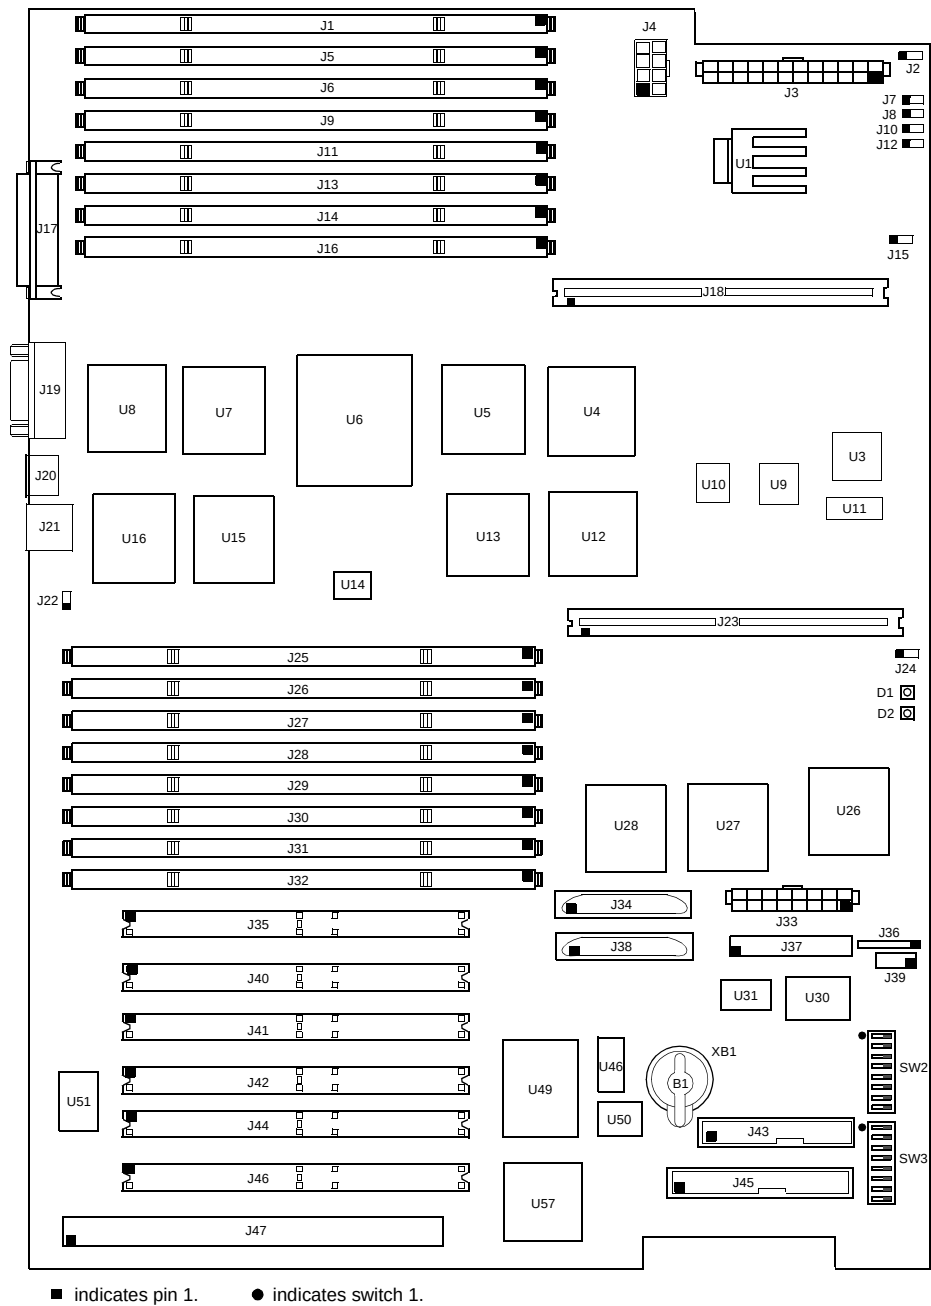


Table 2–2 describes the mainboard components.

**Table 2–2 AlphaPC 264DP Mainboard Switch/Connector/Component List**

| Item No.                                          | Description                             | Item No.                                    | Description                     |
|---------------------------------------------------|-----------------------------------------|---------------------------------------------|---------------------------------|
| XB1                                               | RTC battery (CR2032)                    | J45                                         | IDE bus connector               |
| J1, J5, J6, J9,<br>J11, J13, J14,<br>J16, J25-J32 | Memory connectors                       | J47                                         | ISA bus connector               |
| J2, J15, J22,<br>J24                              | Fan box power connector                 | D1, D2                                      | LEDs                            |
| J3                                                | +3-V power connector                    | SW2, SW3                                    | Switchpacks                     |
| J4                                                | Reserved                                | U1                                          | MIC29502                        |
| J7                                                | Power button connector                  | U3                                          | MC12439                         |
| J8                                                | Reset button connector                  | U4, U5,<br>U7, U8,<br>U12, U13,<br>U15, U16 | DC4047 Dchips                   |
| J10                                               | SCSI LED connector                      | U6                                          | DC1046 Cchip                    |
| J12                                               | Halt button connector                   | U9, U10                                     | 100LVE222                       |
| J17                                               | Parallel I/O connector                  | U11                                         | MC100LVEL37                     |
| J18, J23                                          | Daughtercard connectors                 | U14                                         | MPC951                          |
| J19                                               | COM1/COM2 (DB9) connectors <sup>1</sup> | U26                                         | TIGbus FPGA                     |
| J20                                               | Reserved                                | U27, U28                                    | DC1048 Pchips                   |
| J21                                               | Keyboard/mouse connector <sup>2</sup>   | U30                                         | AlphaBIOS flash ROM             |
| J33                                               | +5-V power connector                    | U31                                         | I <sup>2</sup> C bus controller |
| J34, J38                                          | SCSI connectors                         | U46                                         | SRAM for SCSI                   |
| J35, J40-J42,<br>J44, J46                         | PCI bus connectors                      | U49                                         | AIC7895                         |
| J36                                               | Power LED connector                     | U50                                         | SCSI BIOS flash ROM             |
| J37                                               | Reserved                                | U51                                         | Super I/O (FDC37C669)           |
| J39                                               | Speaker connector                       | U57                                         | Southbridge (CY82C693UB)        |
| J43                                               | Floppy drive connector                  |                                             |                                 |


<sup>1</sup> COM1 is the top connector, COM2 is the bottom one.

<sup>2</sup> Mouse connector is on the top, keyboard connector is on the bottom.

Figure 2–2 shows the daughtercard and its components, and Table 2–3 describes these components.

**Figure 2–2 AlphaPC 264DP Daughtercard Switch/Connector/Component Location**

Side 1—Component Side

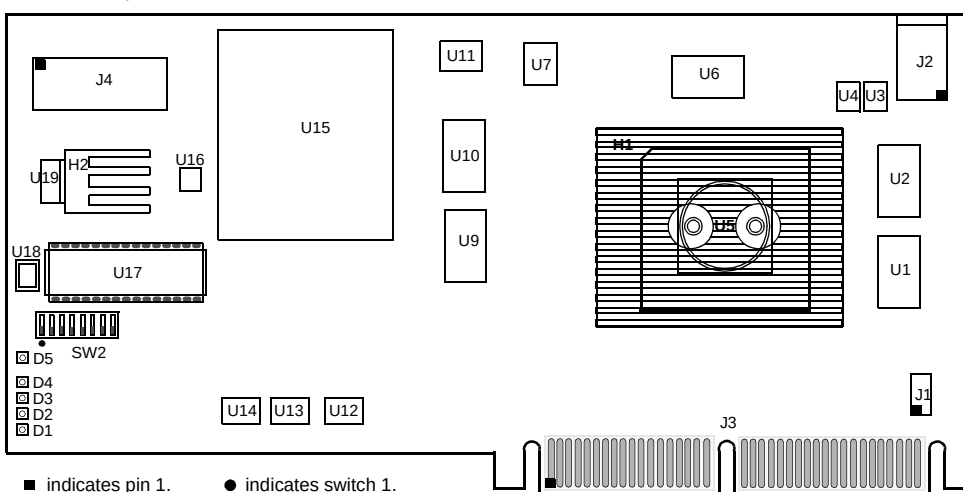

**Table 2–3 AlphaPC 264DP Daughtercard Switch/Connector/Component List**

| Item No.        | Description                  | Item No.      | Description                            |
|-----------------|------------------------------|---------------|----------------------------------------|
| J1              | Fan power                    | U5            | Microprocessor, socketed (Alpha 21264) |
| J2              | SROM debug connector         | U6            | Bcache tag SSRAM                       |
| J3              | Daughtercard data connector  | U7            | Reset FPGA                             |
| J4              | Daughtercard power connector | U11, U13, U14 | lcx38                                  |
| H1              | 21264 heat sink              | U12           | 8582 EEPROM                            |
| H2              | +1.5-V regulator heat sink   | U15           | 5-V to 2.2-V converter                 |
| D1-D5           | LEDs                         | U16           | tl7702b supervisor                     |
| SW2             | Switchpack                   | U17           | 512K×8 flash ROM, socketed             |
| U1, U2, U9, U10 | Bcache data SSRAMs           | U18           | 74f151 multiplexer                     |
| U3              | 1489                         | U19           | mic29302 3.3-V to 1.5-V regulator      |
| U4              | 1488                         |               |                                        |

## Power Requirements

### 2.1 Power Requirements

The mainboard has a maximum total power dissipation of 215 W, excluding any disk drives. Each daughtercard has a maximum total power dissipation of 129 W. Table 2–4 lists the current requirement for each dc supply voltage.

**Table 2–4 Power Supply DC Current Requirements**

| Voltage/Tolerance    | Current |
|----------------------|---------|
| <b>Mainboard</b>     |         |
| +3.3 V dc, $\pm 5\%$ | 30.0 A  |
| +5 V dc, $\pm 5\%$   | 20.0 A  |
| 5 VSB dc, $\pm 5\%$  | 1.0 A   |
| +12 V dc, $\pm 5\%$  | 0.8 A   |
| –12 V dc, $\pm 5\%$  | 0.1 A   |
| <b>Daughtercard</b>  |         |
| +3.3 V dc, $\pm 5\%$ | 5.0 A   |
| +5 V dc, $\pm 5\%$   | 22.0 A  |
| +12 V dc, $\pm 5\%$  | 0.1 A   |
| –12 V dc, $\pm 5\%$  | 0.05 A  |

**Caution:** **Fan sensor required.** The 21264 microprocessor cooling fan *must* have a built-in sensor that will drive a signal if the airflow stops. The sensor is connected to power connector J1. When the signal is generated, it resets the system.

### 2.2 Environmental Requirements

The 21264 microprocessor is cooled by a small fan blowing directly into the chip's heat sink. The daughtercard is designed to run efficiently by using only this fan. Additional fans may be necessary depending upon cabinetry and the requirements of plug-in cards.



## Physical Parameters

The mainboard and daughtercard are specified to run within the environment listed in Table 2–5.

**Table 2–5 AlphaPC 264DP Environmental Requirements**

| Parameter                             | Specification                                                                             |
|---------------------------------------|-------------------------------------------------------------------------------------------|
| Operating temperature                 | 10°C to 40°C (50°F to 104°F)                                                              |
| Storage temperature                   | –55°C to 125°C (–67°F to 257°F)                                                           |
| Relative humidity                     | 10% to 90% with maximum wet bulb temperature 28°C (82°F) and minimum dew point 2°C (36°F) |
| Rate of (dry bulb) temperature change | 11°C/hour $\pm$ 2°C/hour (20°F/hour $\pm$ 4°F/hour)                                       |

### 2.3 Physical Parameters

The AlphaPC 264DP mainboard is a printed-wiring board (PWB) with the following dimensions:

- Length: 42.11 cm (16.58 in  $\pm$ 0.0005 in)
- Width: 33.02 cm (13.0 in  $\pm$ 0.0005 in)
- Height: 3.81 cm (1.5 in)

The AlphaPC 264DP daughtercard is a PWB with the following dimensions:


- Length: 30.48 cm (12.0 in  $\pm$ 0.0005 in)
- Width: 14.99 cm (5.905 in  $\pm$ 0.0005 in)
- Height: 6.40 cm (2.52 in  $\pm$ 0.0005 in)

## Physical Parameters

### 2.3.1 AlphaPC 264DP Hole and Connector Specifications

Figure 2–3 shows the mainboard’s hole specifications.


**Figure 2–3 AlphaPC 264DP Mainboard Hole Specifications**

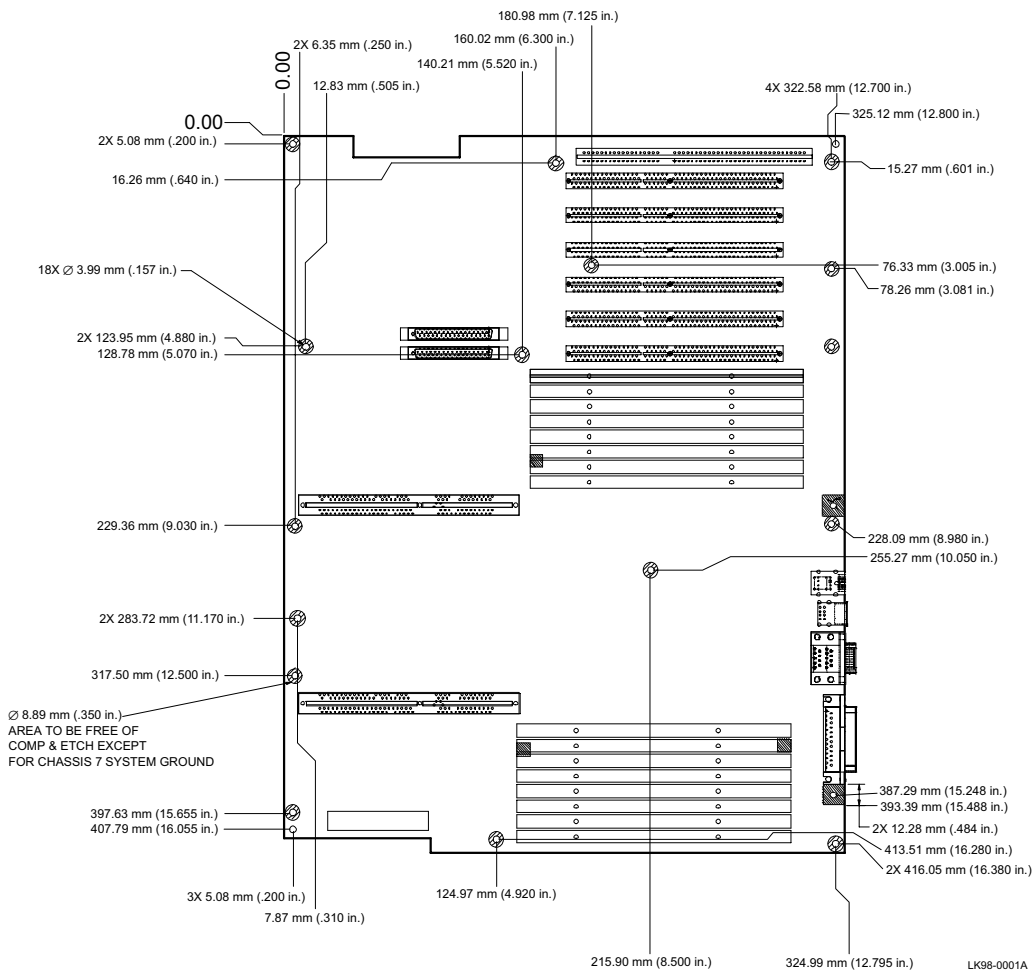

## Physical Parameters

Figure 2–4 shows the mainboard's connector specifications.


**Figure 2–4 AlphaPC 264DP Mainboard Connector Specifications**

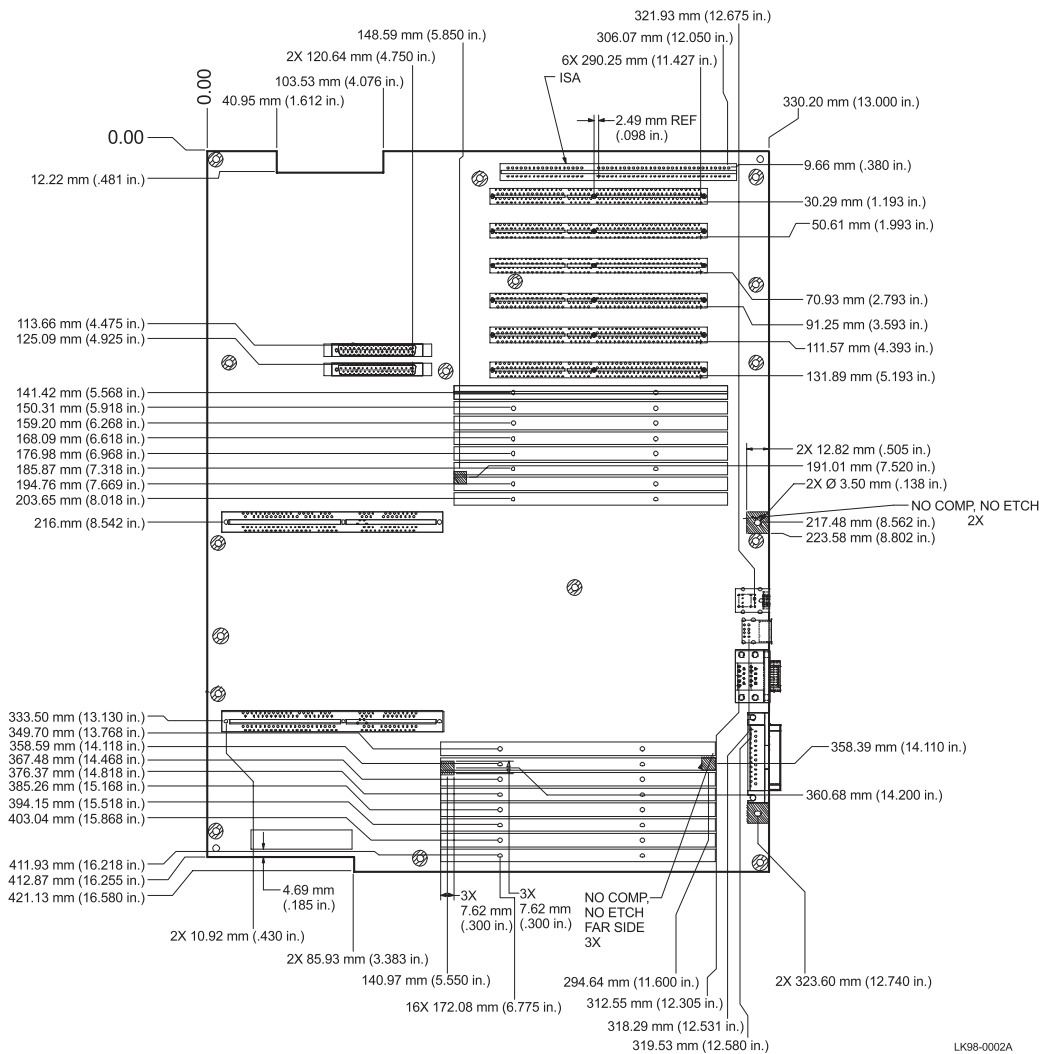

## Physical Parameters

Figure 2-5 shows the top and side views of the mainboard's I/O connectors.

### Figure 2-5 AlphaPC 264DP Mainboard I/O Connector Specifications

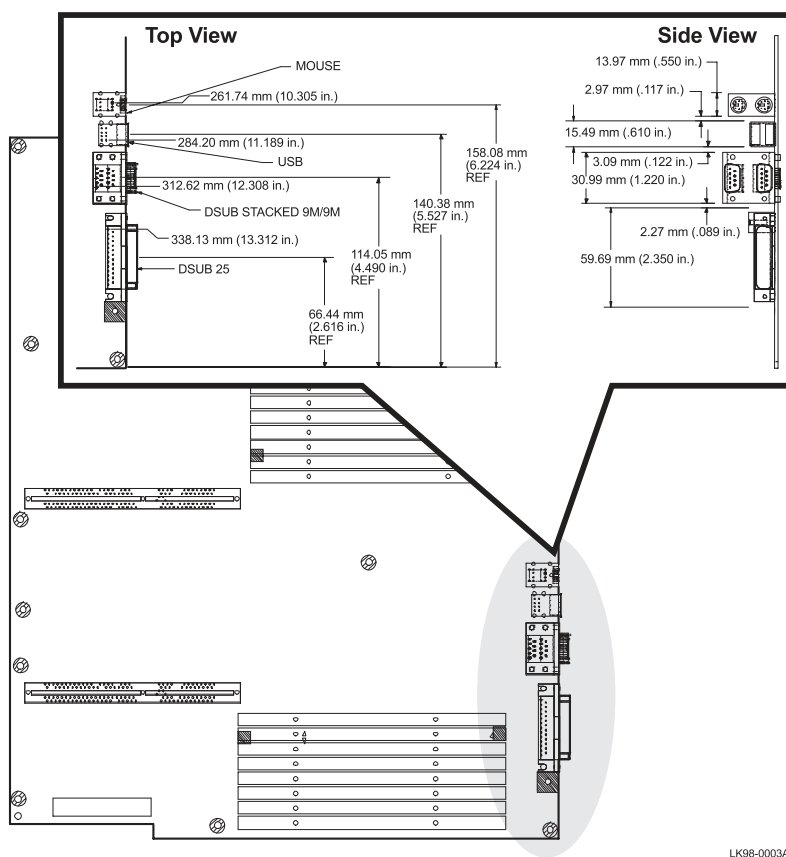


## Physical Parameters

### 2.3.2 AlphaPC 264DP Daughtercard Mechanical Control Drawing

Figure 2–6 shows the mechanical control drawing for the AlphaPC 264DP daughter-card.

**Figure 2–6 AlphaPC 264DP Daughtercard Mechanical Control Drawing**

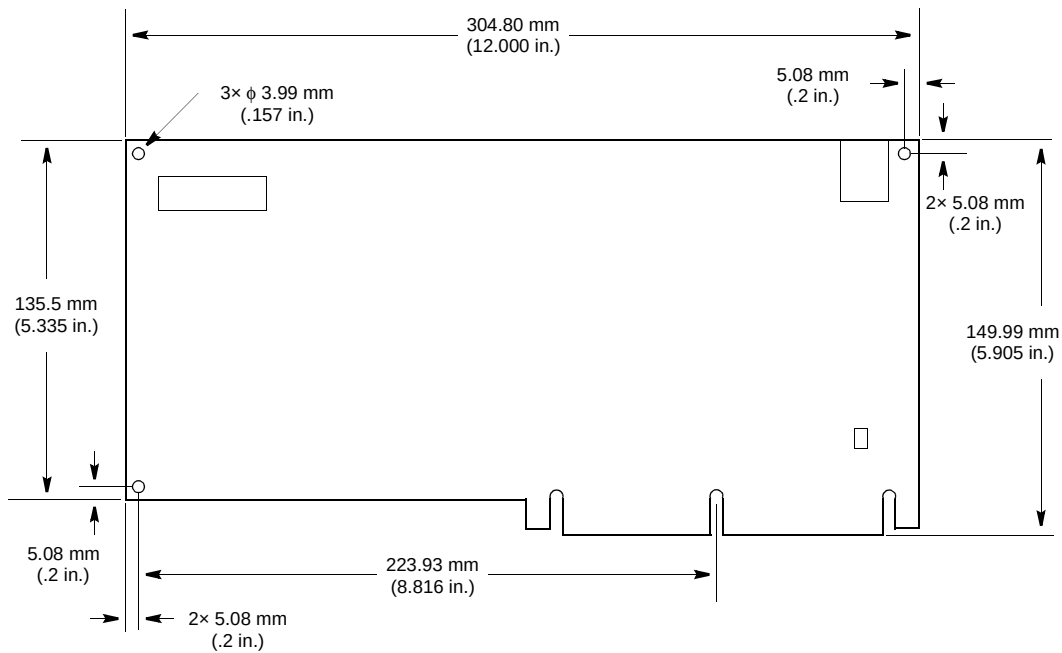




## AlphaPC 264DP Switch Configuration

The AlphaPC 264DP mainboard has two sets of programmable switches, located at SW2 and SW3, as shown in Figure 2–1. The AlphaPC 264DP daughtercard has one switchpack, located at SW2, as shown in Figure 2–2. These switches set the hardware configuration.


**Note:** There are no switchpacks SW1 on production mainboards or daughtercards. Onboard resistors set the configuration (debug use on the mainboard; cache size, CPU speed, and flash ROM use on the daughtercard) to the default state.

Figures 3–1 and 3–2 reflect the mainboard switches, and Figure 3–3 shows the daughtercard switch configurations.


**Figure 3–1 Mainboard Switchpack 2**

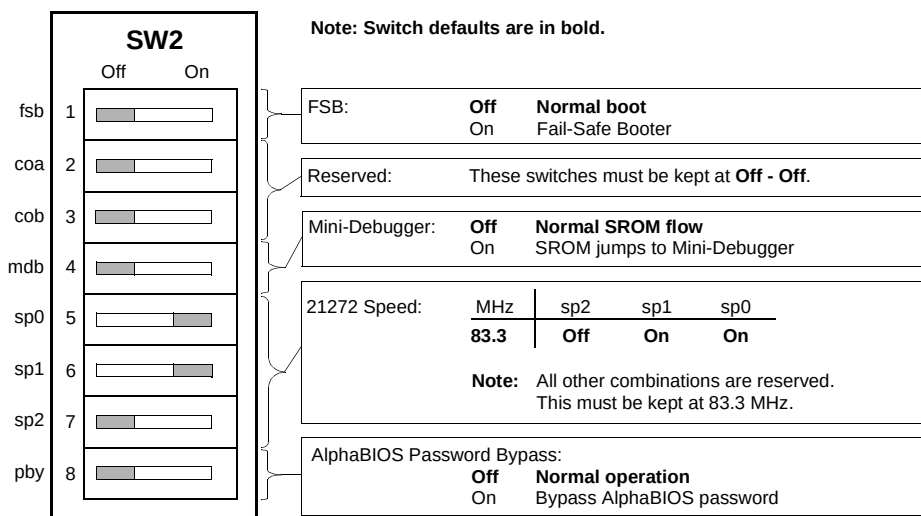

**Figure 3–2 Mainboard Switchpack 3**

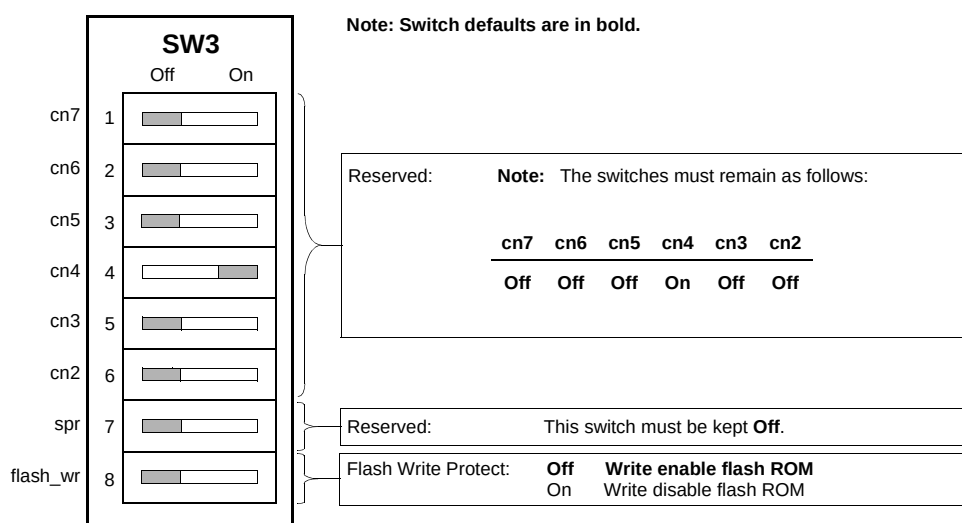

**Figure 3–3 Daughtercard Switchpack 2**

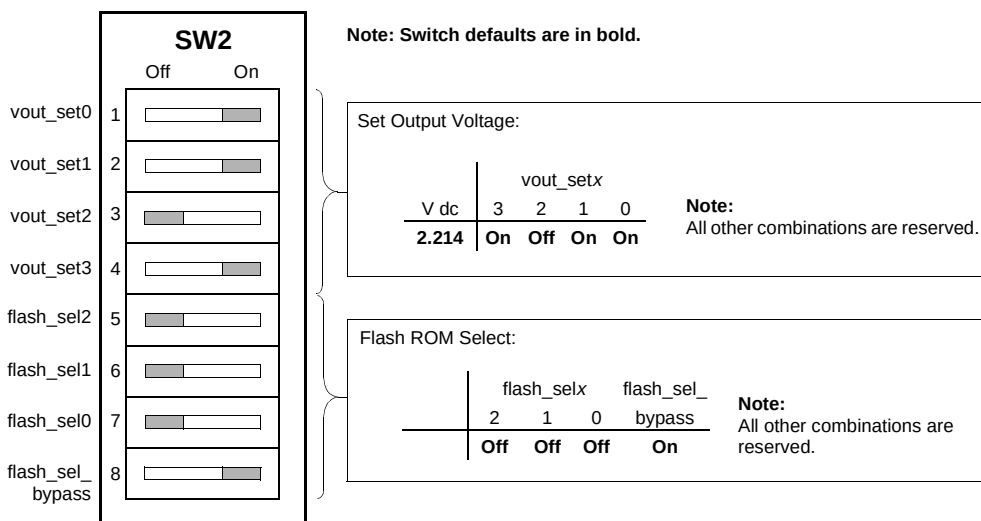



## Fail-Safe Booter

### 3.1 Fail-Safe Booter

The Fail-Safe Booter (FSB) utility provides an emergency recovery mechanism when the primary firmware image contained in flash memory has been corrupted. When flash memory has been corrupted, and no image can be loaded safely from the flash ROM, you can run the FSB and boot another image from a diskette that is capable of reprogramming the flash ROM. Refer to Chapter 6 for more information.

### 3.2 Mini-Debugger

The Alpha SROM Mini-Debugger is stored in the flash ROM and is enabled/disabled by switch 4 of SW2 on the mainboard (see Figure 3–1). The default position for this switch is off. When this switch is on, it causes the SROM initialization to trap to the Mini-Debugger after all initialization is complete, but before starting the execution of the system flash ROM code.

### 3.3 Password Bypass

AlphaBIOS provides password protection. However, if the use of passwords has been enabled and you have forgotten the current password, password bypass is provided through the use of switch 8 (pby) of SW2 on the mainboard.

Normal operation, with switch 8 in the off position (see Figure 3–1), requires a password. The password bypass function is enabled by setting the switch to the on position. This disables the AlphaBIOS password verification and enables the user to set up or start up their system without the AlphaBIOS password. Password bypass also clears the password.

After this function has been enabled, to disable it and require a password, set switch 8 to the off position.

### 3.4 Flash Write Protection

The AlphaPC 264DP provides write protection for the firmware flash ROM. By default, writing to the flash ROM is allowed, that is, switch 8 (flash\_wr) of SW3 on the mainboard is off (see Figure 3–2). To enable the flash write protection function, set switch 8 to the on position.

**Note:** The AlphaPC 264DP will not function if switch 8 is in the on position.

## **21272 Speed**

### **3.5 21272 Speed**

The speed of the 21272 core logic chipset is determined by switches 5–7 of SW2 on the mainboard. The default positions are 5 and 6 on, 7 off. These switches must be kept in the default position.

# 4

## AlphaPC 264DP Connector Pinouts

This chapter lists the pinouts of the AlphaPC 264DP connectors.

### 4.1 Mainboard Connectors

Tables 4–1 through 4–19 show the mainboard connector pinouts. See Figure 2–1 for connector locations.

#### 4.1.1 Daughtercard Connector Pinouts

Table 4–1 shows the daughtercard connector pinouts.

**Table 4–1 Daughtercard Connector Pinouts (J18, J23)**

| Pin | Signal        | Pin | Signal           | Pin | Signal           | Pin | Signal         |
|-----|---------------|-----|------------------|-----|------------------|-----|----------------|
| 1   | vdd_3v        | 2   | vdd_3v           | 3   | vdd_3v           | 4   | vdd_3v         |
| 5   | vdd_3v        | 6   | vdd_3v           | 7   | vdd_3v           | 8   | vdd_3v         |
| 9   | sysdata2_l    | 10  | sysdata0_l       | 11  | sysdata5_l       | 12  | sysdata3_l     |
| 13  | syscheck0_l   | 14  | sysdata9_l       | 15  | sysdata10_l      | 16  | sysdata13_l    |
| 17  | sysdata14_l   | 18  | sysdataoutclk1_l | 19  | sysdata16_l      | 20  | syscheck20_l   |
| 21  | sysdata17_l   | 22  | sysdata18_l      | 23  | sysdataoutclk2_l | 24  | sysdata21_l    |
| 25  | sda           | 26  | Gnd              | 27  | Gnd              | 28  | cpu_slot       |
| 29  | sysdata26_l   | 30  | sysdata25_l      | 31  | sysdatainclk3_l  | 32  | sysdata28_l    |
| 33  | sysdata30_l   | 34  | syscheck3_l      | 35  | clkfwdreset_h    | 36  | irq_0_h        |
| 37  | irq_2_h       | 38  | irq_4_h          | 39  | 2v_pwrgood_h     | 40  | tsu_speed0     |
| 41  | tsu_speed1    | 42  | clk_rdy_h        | 43  | tsu_speed2       | 44  | sysfillvalid_l |
| 45  | sysaddin13_l  | 46  | sysaddin8_l      | 47  | sysaddin9_l      | 48  | sysaddinclk_l  |
| 49  | sysaddout13_l | 50  | sysaddin7_l      | 51  | sysaddin1_l      | 52  | sysaddin3_l    |
| 53  | sysaddout14_l | 54  | sysaddout12_l    | 55  | sysaddout10_l    | 56  | sysaddoutclk_l |
| 57  | sysaddout6_l  | 58  | sysaddout0_l     | 59  | sysaddout2_l     | 60  | syscheck7_l    |
| 61  | sysaddout1_l  | 62  | sysdata60_l      | 63  | sysdatainclk7_l  | 64  | sysdata52_l    |

## Mainboard Connectors

**Table 4–1 Daughtercard Connector Pinouts (J18, J23) (Continued)**

| Pin       | Signal           | Pin | Signal           | Pin       | Signal           | Pin | Signal            |
|-----------|------------------|-----|------------------|-----------|------------------|-----|-------------------|
| 65        | sysdata54_l      | 66  | sysdata57_l      | 67        | sysdataoutclk6_l | 68  | sysdata51_l       |
| 69        | sysdata49_l      | 70  | syscheck5_l      | 71        | sysdata46_l      | 72  | sysdata47_l       |
| 73        | sysdata45_l      | 74  | sysdata42_l      | 75        | sysdatainclk5_l  | 76  | sysdata41_l       |
| 77        | sysdataoutclk4_l | 78  | sysdata37_l      | 79        | sysdata36_l      | 80  | sysdata35_l       |
| 81        | sysdata32_l      | 82  | Gnd              | 83        | bc_config1       | 84  | bc_config3        |
| 85        | cpu_speed1       | 86  | +12v_mod         | 87        | vdd_2v_term      | 88  | vdd_2v_term       |
| 89        | vdd_2v_term      | 90  | vdd_2v_term      | 91        | vdd_3v           | 92  | vdd_3v            |
| 93        | vdd_3v           | 94  | vdd_3v           | 95        | vdd_3v           | 96  | vdd_3v            |
| 97        | vdd_3v           | 98  | vdd_3v           | 99        | sysdatainclk0_l  | 100 | sysdata6_l        |
| 101       | sysdata1_l       | 102 | sysdataoutclk0_l | 103       | sysdata4_l       | 104 | sysdata7_l        |
| 105       | sysdata8_l       | 106 | sysdatainclk1_l  | 107       | sysdata11_l      | 108 | sysdata12_l       |
| 109       | sysdata15_l      | 110 | sysdata19_l      | 111       | sysdatainclk2_l  | 112 | sysdata20_l       |
| 113       | sysdata22_l      | 114 | sysdata23_l      | 115       | pllbyypass_h     | 116 | srom_en_l         |
| 117       | sclk             | 118 | syscheck2_l      | 119       | sysdata24_l      | 120 | sysdata27_l       |
| 121       | sysdataoutclk3_l | 122 | sysdata29_l      | 123       | sysdata31_l      | 124 | sysdataoutvalid_l |
| 125       | Gnd              | 126 | Gnd              | 127       | fan_ok_l         | 128 | irq_1_h           |
| 129       | irq_3_h          | 130 | irq_5_h          | 131       | mod_reset_l      | 132 | sysaddin11_l      |
| 133       | sysaddin14_l     | 134 | sysdatainvalid_l | 135       | sysaddin10_l     | 136 | sysaddin12_l      |
| 137       | sysaddin4_l      | 138 | sysaddin5_l      | 139       | sysaddin2_l      | 140 | sysaddin6_l       |
| 141       | sysaddout11_l    | 142 | sysaddin0_l      | 143       | sysaddout7_l     | 144 | sysaddout9_l      |
| 145       | sysaddout8_l     | 146 | sysaddout5_l     | 147       | sysaddout4_l     | 148 | sysaddout3_l      |
| 149       | sysdata63_l      | 150 | sysdata62_l      | 151       | sysdata61_l      | 152 | sysdata59_l       |
| 153       | sysdataoutclk7_l | 154 | sysdata53_l      | 155       | syscheck6_l      | 156 | sysdata55_l       |
| 157       | sysdata56_l      | 158 | sysdata58_l      | 159       | sysdatainclk6_l  | 160 | sysdata50_l       |
| 161       | sysdata48_l      | 162 | sysdata44_l      | 163       | sysdataoutclk5_l | 164 | sysdata43_l       |
| 165       | sysdata40_l      | 166 | sysdata38_l      | 167       | syscheck4_l      | 168 | sysdata39_l       |
| 169       | sysdata34_l      | 170 | sysdatainclk4_l  | 171       | sysdata33_l      | 172 | bc_config0        |
| 173       | bc_config2       | 174 | cpu_speed0       | 175       | cpu_speed2       | 176 | -12v_mod          |
| 177       | vdd_2v_term      | 178 | vdd_2v_term      | 179       | vdd_2v_term      | 180 | vdd_2v_term       |
| 181       | Gnd              | 212 | pecl_clkin_h     | 213       | pecl_clkin_l     | 214 | Gnd               |
| to<br>211 |                  |     |                  |           |                  |     |                   |
| 215       | frameclk_h       | 216 | frameclk_l       | 217       | Gnd              |     |                   |
|           |                  |     |                  | to<br>270 |                  |     |                   |

## Mainboard Connectors

### 4.1.2 PCI Bus Connector Pinouts

Table 4–2 shows the PCI bus connector pinouts.

**Table 4–2 PCI Bus Connector Pinouts (J35, J40–J42, J44, J46)**

| Pin | Signal   | Pin | Signal   | Pin | Signal   | Pin | Signal   |
|-----|----------|-----|----------|-----|----------|-----|----------|
| A1  | TRST#    | A2  | +12V     | A3  | TMS      | A4  | TDI      |
| A5  | Vdd      | A6  | INTA     | A7  | INTC     | A8  | Vdd      |
| A9  | —        | A10 | Vdd      | A11 | —        | A12 | Gnd      |
| A13 | Gnd      | A14 | —        | A15 | RST#     | A16 | Vdd      |
| A17 | GNT#     | A18 | Gnd      | A19 | —        | A20 | AD[30]   |
| A21 | +3V      | A22 | AD[28]   | A23 | AD[26]   | A24 | Gnd      |
| A25 | AD[24]   | A26 | IDSEL    | A27 | +3V      | A28 | AD[22]   |
| A29 | AD[20]   | A30 | Gnd      | A31 | AD[18]   | A32 | AD[16]   |
| A33 | +3V      | A34 | FRAME#   | A35 | Gnd      | A36 | TRDY#    |
| A37 | STOP#    | A38 | STOP#    | A39 | +3V      | A40 | SDONE    |
| A41 | SBO#     | A42 | Gnd      | A43 | PAR      | A44 | AD[15]   |
| A45 | +3V      | A46 | AD[13]   | A47 | AD[11]   | A48 | Gnd      |
| A49 | AD[09]   | A50 | Not used | A51 | Not used | A52 | C/BE#[0] |
| A53 | +3V      | A54 | AD[06]   | A55 | AD[04]   | A56 | Gnd      |
| A57 | AD[02]   | A58 | AD[00]   | A59 | Vdd      | A60 | REQ64#   |
| A61 | Vdd      | A62 | Vdd      | B1  | -12V     | B2  | TCK      |
| B3  | Gnd      | B4  | TDO      | B5  | Vdd      | B6  | Vdd      |
| B7  | INTB     | B8  | INTD     | B9  | PRSNT1#  | B10 | —        |
| B11 | PRSNT2#  | B12 | Gnd      | B13 | Gnd      | B14 | —        |
| B15 | Gnd      | B16 | CLK      | B17 | Gnd      | B18 | REQ#     |
| B19 | Vdd      | B20 | AD[31]   | B21 | AD[29]   | B22 | Gnd      |
| B23 | AD[27]   | B24 | AD[25]   | B25 | +3V      | B26 | C/BE#[3] |
| B27 | AD[23]   | B28 | Gnd      | B29 | AD[21]   | B30 | AD[19]   |
| B31 | +3V      | B32 | AD[17]   | B33 | C/BE#[2] | B34 | Gnd      |
| B35 | IRDY#    | B36 | +3V      | B37 | DEVSEL#  | B38 | Gnd      |
| B39 | LOCK#    | B40 | PERR#    | B41 | +3V      | B42 | SERR#    |
| B43 | +3V      | B44 | C/BE#[1] | B45 | AD[14]   | B46 | Gnd      |
| B47 | AD[12]   | B48 | AD[10]   | B49 | Gnd      | B50 | Not used |
| B51 | Not used | B52 | AD[08]   | B53 | AD[07]   | B54 | +3V      |
| B55 | AD[05]   | B56 | AD[03]   | B57 | Gnd      | B58 | AD[01]   |
| B59 | Vdd      | B60 | ACK64#   | B61 | Vdd      | B62 | Vdd      |

## Mainboard Connectors

**Table 4–2 PCI Bus Connector Pinouts (J35, J40–J42, J44, J46) (Continued)**

| Pin | Signal | Pin | Signal   | Pin | Signal   | Pin | Signal   |
|-----|--------|-----|----------|-----|----------|-----|----------|
| A63 | Gnd    | A64 | C/BE#[7] | A65 | C/BE#[5] | A66 | Vdd      |
| A67 | PAR64  | A68 | D[62]    | A69 | Gnd      | A70 | D[60]    |
| A71 | D[58]  | A72 | Gnd      | A73 | D[56]    | A74 | D[54]    |
| A75 | Vdd    | A76 | D[52]    | A77 | D[50]    | A78 | Gnd      |
| A79 | D[48]  | A80 | D[46]    | A81 | Gnd      | A82 | D[44]    |
| A83 | D[42]  | A84 | Vdd      | A85 | D[40]    | A86 | D[38]    |
| A87 | Gnd    | A88 | D[36]    | A89 | D[34]    | A90 | Gnd      |
| A91 | D[32]  | A92 | —        | A93 | Gnd      | A94 | —        |
| B63 | —      | B64 | Gnd      | B65 | C/BE#[6] | B66 | C/BE#[4] |
| B67 | Gnd    | B68 | D[63]    | B69 | D[61]    | B70 | Vdd      |
| B71 | D[59]  | B72 | D[57]    | B73 | Gnd      | B74 | D[55]    |
| B75 | D[53]  | B76 | Gnd      | B77 | D[51]    | B78 | D[49]    |
| B79 | Vdd    | B80 | D[47]    | B81 | D[45]    | B82 | Gnd      |
| B83 | D[43]  | B84 | D[41]    | B85 | Gnd      | B86 | D[39]    |
| B87 | D[37]  | B88 | Vdd      | B89 | D[35]    | B90 | D[33]    |
| B91 | Gnd    | B92 | —        | B93 | —        | B94 | Gnd      |

### 4.1.3 ISA Expansion Bus Connector Pinouts

Table 4–3 shows the ISA expansion bus connector pinouts.

**Table 4–3 ISA Expansion Bus Connector Pinouts (J47)**

| Pin | Signal   | Pin | Signal  | Pin | Signal  | Pin | Signal  |
|-----|----------|-----|---------|-----|---------|-----|---------|
| 1   | Gnd      | 2   | IOCHCK# | 3   | RSTDRV  | 4   | SD7     |
| 5   | Vdd      | 6   | SD6     | 7   | IRQ9    | 8   | SD5     |
| 9   | –5V      | 10  | SD4     | 11  | DRQ2    | 12  | SD3     |
| 13  | –12V     | 14  | SD2     | 15  | ZEROWS# | 16  | SD1     |
| 17  | +12V     | 18  | SD0     | 19  | Gnd     | 20  | IOCHRDY |
| 21  | SMEMW#   | 22  | AEN     | 23  | SMEMR#  | 24  | SA19    |
| 25  | IOW#     | 26  | SA18    | 27  | IOR#    | 28  | SA17    |
| 29  | DACK3#   | 30  | SA16    | 31  | DRQ3    | 32  | SA15    |
| 33  | DACK1#   | 34  | SA14    | 35  | DRQ1    | 36  | SA13    |
| 37  | REFRESH# | 38  | SA12    | 39  | SYCLK   | 40  | SA11    |
| 41  | IRQ7     | 42  | SA10    | 43  | IRQ6    | 44  | SA9     |
| 45  | IRQ5     | 46  | SA8     | 47  | IRQ4    | 48  | SA7     |

## Mainboard Connectors

**Table 4–3 ISA Expansion Bus Connector Pinouts (J47) (Continued)**

| Pin | Signal  | Pin | Signal | Pin | Signal   | Pin | Signal |
|-----|---------|-----|--------|-----|----------|-----|--------|
| 49  | IRQ3    | 50  | SA6    | 51  | DACK2#   | 52  | SA5    |
| 53  | TC      | 54  | SA4    | 55  | BALE     | 56  | SA3    |
| 57  | Vdd     | 58  | SA2    | 59  | OSC      | 60  | SA1    |
| 61  | Gnd     | 62  | SA0    | 63  | MEMCS16# | 64  | SBHE#  |
| 65  | IOCS16# | 66  | LA23   | 67  | IRQ10    | 68  | LA22   |
| 69  | IRQ11   | 70  | LA21   | 71  | IRQ12    | 72  | LA20   |
| 73  | IRQ15   | 74  | LA19   | 75  | IRQ14    | 76  | LA18   |
| 77  | DACK0#  | 78  | LA17   | 79  | DRQ0     | 80  | MEMR#  |
| 81  | DACK5#  | 82  | MEMW#  | 83  | DRQ5     | 84  | SD8    |
| 85  | DACK6#  | 86  | SD9    | 87  | DRQ6     | 88  | SD10   |
| 89  | DACK7#  | 90  | SD11   | 91  | DRQ7     | 92  | SD12   |
| 93  | Vdd     | 94  | SD13   | 95  | MASTER#  | 96  | SD14   |
| 97  | Gnd     | 98  | SD15   | —   | —        | —   | —      |

### 4.1.4 IDE Drive Bus Connector Pinouts

Table 4–4 shows the IDE drive bus connector pinouts.

**Table 4–4 IDE Drive Bus Connector Pinouts (J45)**

| Pin | Signal   | Pin | Signal  | Pin | Signal    | Pin | Signal       |
|-----|----------|-----|---------|-----|-----------|-----|--------------|
| 1   | DRST     | 2   | Gnd     | 3   | IDE_D7    | 4   | IDE_D8       |
| 5   | IDE_D6   | 6   | IDE_D9  | 7   | IDE_D5    | 8   | IDE_D10      |
| 9   | IDE_D4   | 10  | IDE_D11 | 11  | IDE_D3    | 12  | IDE_D12      |
| 13  | IDE_D2   | 14  | IDE_D13 | 15  | IDE_D1    | 16  | IDE_D14      |
| 17  | IDE_D0   | 18  | IDE_D15 | 19  | Gnd       | 20  | NC (key pin) |
| 21  | IDE_REQ0 | 22  | Gnd     | 23  | IDE_IOW1# | 24  | Gnd          |
| 25  | IOR#     | 26  | Gnd     | 27  | CHRDY     | 28  | BALE         |
| 29  | MACK     | 30  | Gnd     | 31  | IRQ       | 32  | IOCS16#      |
| 33  | ADDR1    | 34  | NC      | 35  | ADDR0     | 36  | ADDR2        |
| 37  | CS0#     | 38  | CS1#    | 39  | ACT#      | 40  | Gnd          |

## Mainboard Connectors

### 4.1.5 Ultra SCSI Bus Connector Pinouts

Table 4–5 shows the Ultra SCSI bus connector pinouts.

**Table 4–5 Ultra SCSI Bus Connector Pinouts (J34, J38)**

| Pin | Signal  | Pin | Signal  | Pin | Signal  | Pin | Signal  |
|-----|---------|-----|---------|-----|---------|-----|---------|
| 1   | Gnd     | 2   | Gnd     | 3   | Gnd     | 4   | Gnd     |
| 5   | Gnd     | 6   | Gnd     | 7   | Gnd     | 8   | Gnd     |
| 9   | Gnd     | 10  | Gnd     | 11  | Gnd     | 12  | Gnd     |
| 13  | Gnd     | 14  | Gnd     | 15  | Gnd     | 16  | Gnd     |
| 17  | termplr | 18  | termplr | 19  | NC      | 20  | Gnd     |
| 21  | Gnd     | 22  | Gnd     | 23  | Gnd     | 24  | Gnd     |
| 25  | Gnd     | 26  | Gnd     | 27  | Gnd     | 28  | Gnd     |
| 29  | Gnd     | 30  | Gnd     | 31  | Gnd     | 32  | Gnd     |
| 33  | Gnd     | 34  | Gnd     | 35  | scd12   | 36  | scd13   |
| 37  | scd14   | 38  | scd15   | 39  | scdph   | 40  | scd0    |
| 41  | scd1    | 42  | scd2    | 43  | scd3    | 44  | scd4    |
| 45  | scd5    | 46  | scd6    | 47  | scd7    | 48  | scdpl   |
| 49  | Gnd     | 50  | Gnd     | 51  | termplr | 52  | termplr |
| 53  | NC      | 54  | Gnd     | 55  | atn     | 56  | Gnd     |
| 57  | bsy     | 58  | ack     | 59  | reset   | 60  | msg     |
| 61  | sel     | 62  | cd      | 63  | req     | 64  | io      |
| 65  | scd8    | 66  | scd9    | 67  | scd10   | 68  | scd11   |

### 4.1.6 SDRAM DIMM Connector Pinouts

Table 4–6 shows the SDRAM DIMM connector pinouts.

**Table 4–6 SDRAM DIMM Connector Pinouts (J1, J5, J6, J9, J11, J13, J14, J16, J25–J32)**

| Pin | Signal | Pin | Signal | Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|-----|--------|-----|--------|
| 1   | Vdd    | 2   | NC     | 3   | NC     | 4   | NC     |
| 5   | NC     | 6   | NC     | 7   | NC     | 8   | Vss    |
| 9   | dq67   | 10  | dq66   | 11  | Vdd    | 12  | dq65   |
| 13  | dq64   | 14  | Vss    | 15  | dq63   | 16  | dq62   |
| 17  | NC     | 18  | dq61   | 19  | dq60   | 20  | Vdd    |
| 21  | NC     | 22  | NC     | 23  | Vss    | 24  | NC     |
| 25  | NC     | 26  | Vdd    | 27  | dq51   | 28  | dq50   |



## Mainboard Connectors

**Table 4–6 SDRAM DIMM Connector Pinouts (J1, J5, J6, J9, J11, J13, J14, J16, J25–J32)**  
(Continued)

| Pin | Signal | Pin | Signal | Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|-----|--------|-----|--------|
| 29  | Vss    | 30  | dq49   | 31  | dq48   | 32  | Vdd    |
| 33  | dq43   | 34  | dq42   | 35  | Vss    | 36  | dq41   |
| 37  | dq40   | 38  | Vdd    | 39  | a4     | 40  | a5     |
| 41  | Vss    | 42  | a8     | 43  | a9     | 44  | Vdd    |
| 45  | NC     | 46  | cke0   | 47  | Vss    | 48  | cas#   |
| 49  | NC     | 50  | Vdd    | 51  | Vss    | 52  | ras#   |
| 53  | Vss    | 54  | cs2#   | 55  | a11    | 56  | Vdd    |
| 57  | a0     | 58  | a1     | 59  | Vss    | 60  | dq35   |
| 61  | dq34   | 62  | Vdd    | 63  | dq33   | 64  | dq32   |
| 65  | Vss    | 66  | dq27   | 67  | dq26   | 68  | Vdd    |
| 69  | dq25   | 70  | dq24   | 71  | Vss    | 72  | dq19   |
| 73  | dq18   | 74  | Vdd    | 75  | dq17   | 76  | dq16   |
| 77  | Vss    | 78  | NC     | 79  | NC     | 80  | Vdd    |
| 81  | dq15   | 82  | dq14   | 83  | Vss    | 84  | dq13   |
| 85  | dq12   | 86  | Vdd    | 87  | dq7    | 88  | dq6    |
| 89  | Vss    | 90  | dq5    | 91  | dq4    | 92  | Vdd    |
| 93  | NC     | 94  | NC     | 95  | NC     | 96  | NC     |
| 97  | NC     | 98  | scl    | 99  | NC     | 100 | Vss    |
| 101 | NC     | 102 | NC     | 103 | Vss    | 104 | rege   |
| 105 | rfu    | 106 | rfu    | 107 | NC     | 108 | dq71   |
| 109 | dq70   | 110 | Vss    | 111 | dq69   | 112 | dq68   |
| 113 | Vdd    | 114 | NC     | 115 | Vss    | 116 | NC     |
| 117 | dq59   | 118 | dq58   | 119 | Vss    | 120 | dq57   |
| 121 | dq56   | 122 | Vdd    | 123 | dq55   | 124 | dq54   |
| 125 | Vss    | 126 | dq53   | 127 | dq52   | 128 | Vdd    |
| 129 | dq47   | 130 | dq46   | 131 | Vss    | 132 | dq45   |
| 133 | dq44   | 134 | Vdd    | 135 | dq39   | 136 | dq38   |
| 137 | Vss    | 138 | dq37   | 139 | dq36   | 140 | Vdd    |
| 141 | a6     | 142 | a7     | 143 | Vss    | 144 | bs0    |
| 145 | NC     | 146 | Vdd    | 147 | dqm    | 148 | we#    |
| 149 | Vss    | 150 | NC     | 151 | clk0   | 152 | Vdd    |
| 153 | NC     | 154 | cs0#   | 155 | Vss    | 156 | ba1    |
| 157 | a10/ap | 158 | Vdd    | 159 | a2     | 160 | a3     |
| 161 | Vss    | 162 | dq31   | 163 | dq30   | 164 | Vdd    |

## Mainboard Connectors

**Table 4–6 SDRAM DIMM Connector Pinouts (J1, J5, J6, J9, J11, J13, J14, J16, J25–J32)**  
(Continued)

| Pin | Signal      | Pin | Signal      | Pin | Signal      | Pin | Signal      |
|-----|-------------|-----|-------------|-----|-------------|-----|-------------|
| 165 | <b>dq29</b> | 166 | <b>dq28</b> | 167 | <b>Vss</b>  | 168 | <b>dq23</b> |
| 169 | <b>dq22</b> | 170 | <b>Vdd</b>  | 171 | <b>dq21</b> | 172 | <b>dq20</b> |
| 173 | <b>Vss</b>  | 174 | NC          | 175 | NC          | 176 | <b>Vdd</b>  |
| 177 | NC          | 178 | <b>Vss</b>  | 179 | <b>Vss</b>  | 180 | NC          |
| 181 | NC          | 182 | <b>Vdd</b>  | 183 | <b>dq11</b> | 184 | <b>dq10</b> |
| 185 | <b>Vss</b>  | 186 | <b>dq9</b>  | 187 | <b>dq8</b>  | 188 | <b>Vdd</b>  |
| 189 | <b>dq3</b>  | 190 | <b>dq2</b>  | 191 | <b>Vss</b>  | 192 | <b>dq1</b>  |
| 193 | <b>dq0</b>  | 194 | <b>sda</b>  | 195 | <b>sa0</b>  | 196 | <b>sa1</b>  |
| 197 | <b>sa2</b>  | 198 | <b>Vdd</b>  | 199 | NC          | 200 | NC          |

### 4.1.7 Diskette (Floppy) Drive Bus Connector Pinouts

Table 4–7 shows the diskette (floppy) drive bus connector pinouts.

**Table 4–7 Diskette (Floppy) Drive Bus Connector Pinouts (J43)**

| Pin | Signal     | Pin | Signal        | Pin | Signal     | Pin | Signal        |
|-----|------------|-----|---------------|-----|------------|-----|---------------|
| 1   | <b>Gnd</b> | 2   | <b>DRVDE0</b> | 3   | <b>Gnd</b> | 4   | NC            |
| 5   | <b>Gnd</b> | 6   | <b>DRVDE1</b> | 7   | <b>Gnd</b> | 8   | <b>INDEX</b>  |
| 9   | <b>Gnd</b> | 10  | <b>MTR0</b>   | 11  | <b>Gnd</b> | 12  | <b>DS1</b>    |
| 13  | <b>Gnd</b> | 14  | <b>DS0</b>    | 15  | <b>Gnd</b> | 16  | <b>MTR1</b>   |
| 17  | <b>Gnd</b> | 18  | <b>DIR</b>    | 19  | <b>Gnd</b> | 20  | <b>STEP</b>   |
| 21  | <b>Gnd</b> | 22  | <b>WDATA</b>  | 23  | <b>Gnd</b> | 24  | <b>WGATE</b>  |
| 25  | <b>Gnd</b> | 26  | <b>TRK0</b>   | 27  | <b>Gnd</b> | 28  | <b>WRTprt</b> |
| 29  | <b>Gnd</b> | 30  | <b>RDATA</b>  | 31  | <b>Gnd</b> | 32  | <b>HDSEL</b>  |
| 33  | <b>Gnd</b> | 34  | <b>DSKCHG</b> | —   | —          | —   | —             |

### 4.1.8 Parallel Bus Connector Pinouts

Table 4–8 shows the parallel bus connector pinouts.

**Table 4–8 Parallel Bus Connector Pinouts (J17)**

| Pin | Signal      | Pin | Signal      | Pin | Signal       | Pin | Signal     |
|-----|-------------|-----|-------------|-----|--------------|-----|------------|
| 1   | <b>PSTB</b> | 2   | <b>PD0</b>  | 3   | <b>PD1</b>   | 4   | <b>PD2</b> |
| 5   | <b>PD3</b>  | 6   | <b>PD4</b>  | 7   | <b>PD5</b>   | 8   | <b>PD6</b> |
| 9   | <b>PD7</b>  | 10  | <b>PACK</b> | 11  | <b>PBUSY</b> | 12  | <b>PE</b>  |

## Mainboard Connectors

**Table 4–8 Parallel Bus Connector Pinouts (J17) (Continued)**

| Pin | Signal | Pin | Signal | Pin | Signal    | Pin | Signal |
|-----|--------|-----|--------|-----|-----------|-----|--------|
| 13  | PSLCT  | 14  | PAFD   | 15  | PAR_ERROR | 16  | PINIT  |
| 17  | PSLIN  | 18  | Gnd    | 19  | Gnd       | 20  | Gnd    |
| 21  | Gnd    | 22  | Gnd    | 23  | Gnd       | 24  | Gnd    |
| 25  | Gnd    | —   | —      | —   | —         | —   | —      |

### 4.1.9 COM1/COM2 Serial Line Connector Pinouts

Table 4–9 shows the COM1/COM2 serial line connector pinouts.

**Table 4–9 COM1/COM2 Serial Line Connector Pinouts (J19)**

| COM1 Pin<br>(Top) | COM1 Signal | COM2 Pin<br>(Bottom) | COM2 Signal |
|-------------------|-------------|----------------------|-------------|
| 1                 | DCD1        | 10                   | DCD2        |
| 2                 | SIN1        | 11                   | SIN2        |
| 3                 | SOUT1       | 12                   | SOUT2       |
| 4                 | DTR1        | 13                   | DTR2        |
| 5                 | Gnd         | 14                   | Gnd         |
| 6                 | DSR1        | 15                   | DSR2        |
| 7                 | RTS1        | 16                   | RTS2        |
| 8                 | CTS1        | 17                   | CTS2        |
| 9                 | RI1         | 18                   | RI2         |

### 4.1.10 Keyboard/Mouse Connector Pinouts

Table 4–10 shows the keyboard/mouse connector pinouts.

**Table 4–10 Keyboard/Mouse Connector Pinouts (J21)**

| Keyboard<br>Pin (Top) | Keyboard Signal | Mouse Pin<br>(Bottom) | Mouse Signal |
|-----------------------|-----------------|-----------------------|--------------|
| 1                     | KBDATA          | 7                     | MSDATA       |
| 2                     | NC              | 8                     | NC           |
| 3                     | Gnd             | 9                     | Gnd          |
| 4                     | Vdd             | 10                    | Vdd          |
| 5                     | KBCLK           | 11                    | MSCLK        |
| 6                     | NC              | 12                    | NC           |

## Mainboard Connectors

### 4.1.11 +3-V Power Connector Pinouts

Table 4–11 shows the +3-V power connector pinouts.

**Table 4–11 +3-V Power Connector Pinouts (J3)**

| Pin | Voltage  | Pin | Voltage | Pin | Voltage | Pin | Voltage |
|-----|----------|-----|---------|-----|---------|-----|---------|
| 1   | vdd_3v   | 2   | Gnd     | 3   | vdd_3v  | 4   | Gnd     |
| 5   | vdd_3v   | 6   | Gnd     | 7   | vdd_3v  | 8   | Gnd     |
| 9   | vdd_3v   | 10  | Gnd     | 11  | vdd_3v  | 12  | Gnd     |
| 13  | Gnd      | 14  | vdd_3v  | 15  | Gnd     | 16  | vdd_3v  |
| 17  | Gnd      | 18  | vdd_3v  | 19  | Gnd     | 20  | vdd_3v  |
| 21  | +12 V dc | 22  | ps_on   | 23  | pok     | 24  | 5vsb    |

### 4.1.12 +5-V Power Connector Pinouts

Table 4–12 shows the +5-V power connector pinouts.

**Table 4–12 +5-V Power Connector Pinouts (J33)**

| Pin | Voltage | Pin | Voltage | Pin | Voltage  | Pin | Voltage |
|-----|---------|-----|---------|-----|----------|-----|---------|
| 1   | vdd_5v  | 2   | Gnd     | 3   | vdd_5v   | 4   | Gnd     |
| 5   | vdd_5v  | 6   | Gnd     | 7   | vdd_5v   | 8   | Gnd     |
| 9   | Gnd     | 10  | vdd_5v  | 11  | Gnd      | 12  | vdd_5v  |
| 13  | Gnd     | 14  | vdd_5v  | 15  | -12 V dc | 16  | -5 V dc |

### 4.1.13 Fan Box Power Connector Pinouts

Table 4–13 shows the fan box power connector pinouts.

**Table 4–13 Fan Box Power Connector Pinouts (J2, J15, J22, J24)**

| Pin | Voltage | Pin | Voltage  |
|-----|---------|-----|----------|
| 1   | Gnd     | 2   | +12 V dc |

## Mainboard Connectors

### 4.1.14 Speaker Connector Pinouts

Table 4–14 shows the speaker connector pinouts.

**Table 4–14 Speaker Connector Pinouts (J39)**

| Pin | Signal | Description   |
|-----|--------|---------------|
| 1   | spkr   | Speaker input |
| 2   | vdd_5v | —             |
| 3   | Gnd    | —             |
| 4   | vdd_5v | —             |

### 4.1.15 Halt Button Connector Pinouts

Table 4–15 shows the halt button connector pinouts.

**Table 4–15 Halt Button Connector Pinouts (J12)**

| Pin | Signal      | Description                       |
|-----|-------------|-----------------------------------|
| 1   | halt_button | Halt system (for Tru64 UNIX only) |
| 2   | vdd_5v      | —                                 |

### 4.1.16 Reset Button Connector Pinouts

Table 4–16 shows the reset button connector pinouts.

**Table 4–16 Reset Button Connector Pinouts (J8)**

| Pin | Signal       | Description  |
|-----|--------------|--------------|
| 1   | reset_button | Reset system |
| 2   | vdd_5v       | —            |

### 4.1.17 System Power Button Connector Pinouts

Table 4–17 shows the system power button connector pinouts.

**Table 4–17 System Power Button Connector Pinouts (J7)**

| Pin | Signal | Description         |
|-----|--------|---------------------|
| 1   | 5vsb   | System power on/off |
| 2   | Gnd    | —                   |

## Daughtercard Connectors

### 4.1.18 Ultra SCSI Hard Drive LED Connector Pinouts

Table 4–18 shows the ultra SCSI hard drive LED connector pinouts.

**Table 4–18 Ultra SCSI Hard Drive LED Connector Pinouts (J10)**

| Pin | Signal      | Description       |
|-----|-------------|-------------------|
| 1   | scsi_hd_act | Hard drive active |
| 2   | vdd_5v      | —                 |

### 4.1.19 Power LED Connector Pinouts

Table 4–19 shows the power LED connector pinouts.

**Table 4–19 Power LED Connector Pinouts (J36)**

| Pin | Signal    | Description     |
|-----|-----------|-----------------|
| 1   | power_led | Power LED input |
| 2   | Gnd       | —               |
| 3   | NC        | —               |
| 4   | NC        | —               |
| 5   | NC        | —               |

## 4.2 Daughtercard Connectors

Tables 4–20 through 4–23 show the daughtercard connector pinouts. See Figure 2–2 for connector locations.

### 4.2.1 Microprocessor Fan Power Connector Pinouts

Table 4–20 shows the microprocessor fan power connector pinouts.

**Table 4–20 Microprocessor Fan Power Connector Pinouts (J1)**

| Pin | Signal     | Description   |
|-----|------------|---------------|
| 1,6 | +12 V dc   | —             |
| 2,5 | Gnd        | —             |
| 3,4 | fan_conn_1 | Fan connected |

## Daughtercard Connectors

### 4.2.2 SROM Test Data Input Connector Pinouts

Table 4–21 shows the SROM test data input connector pinouts.

**Table 4–21 SROM Test Data Input Connector Pinouts (J2)**

| Pin | Signal        | Description         |
|-----|---------------|---------------------|
| 1   | NC            | —                   |
| 2   | srom_clk_l    | Clock out           |
| 3   | Gnd           | —                   |
| 4   | NC            | —                   |
| 5   | test_srom_d_l | SROM serial data in |
| 6   | NC            | —                   |

### 4.2.3 AlphaPC 264DP Daughtercard Connector Pinouts

Table 4–22 shows the AlphaPC 264DP daughtercard connector pinouts.

**Table 4–22 Daughtercard Connector Pinouts (J3)**

| Pin | Signal        | Pin | Signal           | Pin | Signal           | Pin | Signal         |
|-----|---------------|-----|------------------|-----|------------------|-----|----------------|
| 1   | vdd_3v        | 2   | vdd_3v           | 3   | vdd_3v           | 4   | vdd_3v         |
| 5   | vdd_3v        | 6   | vdd_3v           | 7   | vdd_3v           | 8   | vdd_3v         |
| 9   | sysdata2_l    | 10  | sysdata0_l       | 11  | sysdata5_l       | 12  | sysdata3_l     |
| 13  | syscheck0_l   | 14  | sysdata9_l       | 15  | sysdata10_l      | 16  | sysdata13_l    |
| 17  | sysdata14_l   | 18  | sysdataoutclk1_l | 19  | sysdata16_l      | 20  | syscheck20_l   |
| 21  | sysdata17_l   | 22  | sysdata18_l      | 23  | sysdataoutclk2_l | 24  | sysdata21_l    |
| 25  | sda           | 26  | Gnd              | 27  | Gnd              | 28  | cpu_slot       |
| 29  | sysdata26_l   | 30  | sysdata25_l      | 31  | sysdatainclk3_l  | 32  | sysdata28_l    |
| 33  | sysdata30_l   | 34  | syscheck3_l      | 35  | clkfwdreset_h    | 36  | irq_0_h        |
| 37  | irq_2_h       | 38  | irq_4_h          | 39  | 2v_pwrgood_h     | 40  | tsu_speed0     |
| 41  | tsu_speed1    | 42  | clk_rdy_h        | 43  | tsu_speed2       | 44  | sysfillvalid_l |
| 45  | sysaddin13_l  | 46  | sysaddin8_l      | 47  | sysaddin9_l      | 48  | sysaddinclk_l  |
| 49  | sysaddout13_l | 50  | sysaddin7_l      | 51  | sysaddin1_l      | 52  | sysaddin3_l    |
| 53  | sysaddout14_l | 54  | sysaddout12_l    | 55  | sysaddout10_l    | 56  | sysaddoutclk_l |
| 57  | sysaddout6_l  | 58  | sysaddout0_l     | 59  | sysaddout2_l     | 60  | syscheck7_l    |
| 61  | sysaddout1_l  | 62  | sysdata60_l      | 63  | sysdatainclk7_l  | 64  | sysdata52_l    |
| 65  | sysdata54_l   | 66  | sysdata57_l      | 67  | sysdataoutclk6_l | 68  | sysdata51_l    |
| 69  | sysdata49_l   | 70  | syscheck5_l      | 71  | sysdata46_l      | 72  | sysdata47_l    |
| 73  | sysdata45_l   | 74  | sysdata42_l      | 75  | sysdatainclk5_l  | 76  | sysdata41_l    |

## Daughtercard Connectors

**Table 4–22 Daughtercard Connector Pinouts (J3) (Continued)**

| Pin       | Signal           | Pin | Signal           | Pin       | Signal           | Pin | Signal            |
|-----------|------------------|-----|------------------|-----------|------------------|-----|-------------------|
| 77        | sysdataoutclk4_l | 78  | sysdata37_l      | 79        | sysdata36_l      | 80  | sysdata35_l       |
| 81        | sysdata32_l      | 82  | Gnd              | 83        | bc_config1       | 84  | bc_config3        |
| 85        | cpu_speed1       | 86  | +12v_mod         | 87        | vdd_2v_term      | 88  | vdd_2v_term       |
| 89        | vdd_2v_term      | 90  | vdd_2v_term      | 91        | vdd_3v           | 92  | vdd_3v            |
| 93        | vdd_3v           | 94  | vdd_3v           | 95        | vdd_3v           | 96  | vdd_3v            |
| 97        | vdd_3v           | 98  | vdd_3v           | 99        | sysdatainclk0_l  | 100 | sysdata6_l        |
| 101       | sysdata1_l       | 102 | sysdataoutclk0_l | 103       | sysdata4_l       | 104 | sysdata7_l        |
| 105       | sysdata8_l       | 106 | sysdatainclk1_l  | 107       | sysdata11_l      | 108 | sysdata12_l       |
| 109       | sysdata15_l      | 110 | sysdata19_l      | 111       | sysdatainclk2_l  | 112 | sysdata20_l       |
| 113       | sysdata22_l      | 114 | sysdata23_l      | 115       | pllbyypass_h     | 116 | srom_en_l         |
| 117       | sclk             | 118 | syscheck2_l      | 119       | sysdata24_l      | 120 | sysdata27_l       |
| 121       | sysdataoutclk3_l | 122 | sysdata29_l      | 123       | sysdata31_l      | 124 | sysdataoutvalid_l |
| 125       | Gnd              | 126 | Gnd              | 127       | fan_ok_l         | 128 | irq_1_h           |
| 129       | irq_3_h          | 130 | irq_5_h          | 131       | mod_reset_l      | 132 | sysaddin11_l      |
| 133       | sysaddin14_l     | 134 | sysdatainvalid_l | 135       | sysaddin10_l     | 136 | sysaddin12_l      |
| 137       | sysaddin4_l      | 138 | sysaddin5_l      | 139       | sysaddin2_l      | 140 | sysaddin6_l       |
| 141       | sysaddout11_l    | 142 | sysaddin0_l      | 143       | sysaddout7_l     | 144 | sysaddout9_l      |
| 145       | sysaddout8_l     | 146 | sysaddout5_l     | 147       | sysaddout4_l     | 148 | sysaddout3_l      |
| 149       | sysdata63_l      | 150 | sysdata62_l      | 151       | sysdata61_l      | 152 | sysdata59_l       |
| 153       | sysdataoutclk7_l | 154 | sysdata53_l      | 155       | syscheck6_l      | 156 | sysdata55_l       |
| 157       | sysdata56_l      | 158 | sysdata58_l      | 159       | sysdatainclk6_l  | 160 | sysdata50_l       |
| 161       | sysdata48_l      | 162 | sysdata44_l      | 163       | sysdataoutclk5_l | 164 | sysdata43_l       |
| 165       | sysdata40_l      | 166 | sysdata38_l      | 167       | syscheck4_l      | 168 | sysdata39_l       |
| 169       | sysdata34_l      | 170 | sysdatainclk4_l  | 171       | sysdata33_l      | 172 | bc_config0        |
| 173       | bc_config2       | 174 | cpu_speed0       | 175       | cpu_speed2       | 176 | -12v_mod          |
| 177       | vdd_2v_term      | 178 | vdd_2v_term      | 179       | vdd_2v_term      | 180 | vdd_2v_term       |
| 181       | Gnd              | 212 | pecl_clkkin_h    | 213       | pecl_clkkin_l    | 214 | Gnd               |
| to<br>211 |                  |     |                  |           |                  |     |                   |
| 215       | frameclk_h       | 216 | frameclk_l       | 217       | Gnd              |     |                   |
|           |                  |     |                  | to<br>270 |                  |     |                   |



## Daughtercard Connectors

### 4.2.4 AlphaPC 264DP Daughtercard Input Power Connector Pinouts

Table 4–23 shows the input power connector pinouts.

**Table 4–23 Input Power Connector Pinouts (J4)**

| Pin | Voltage | Pin | Voltage | Pin | Voltage | Pin | Voltage |
|-----|---------|-----|---------|-----|---------|-----|---------|
| 1   | +5 V dc | 2   | Gnd     | 3   | +5 V dc | 4   | Gnd     |
| 5   | +5 V dc | 6   | Gnd     | 7   | +5 V dc | 8   | Gnd     |
| 9   | +5 V dc | 10  | Gnd     | 11  | +5 V dc | 12  | Gnd     |
| 13  | +5 V dc | 14  | Gnd     | 15  | +5 V dc | 16  | Gnd     |
| 17  | +5 V dc | 18  | Gnd     |     |         |     |         |



# 5

## Memory Configuration

### 5.1 Memory Subsystem


The DRAM memory subsystem on the AlphaPC 264DP consists of sixteen 200-pin buffered DIMM slots, which are organized as four arrays of memory. The 21272 chipset supports two 256-bit memory buses (288-bit including ECC) with two arrays on each bus (see Figure 5–1).

The 72-bit, 100-MHz DIMMs consist of 64 bits of data and 8 bits of ECC, and can be 32MB, 64MB, 128MB, or 256MB. The minimum configuration (one array populated with four 32MB DIMMs) is 128MB. The maximum configuration (four arrays each populated with four 256MB DIMMs) is 4GB.

The memory cycle time is 83 MHz, identical to the 21272 chipset cycle time.

**Note:** Although the memory cycle time is 83 MHz, qualified 100-MHz DIMMs are required.

**Figure 5–1 AlphaPC 264DP Memory Subsystem**

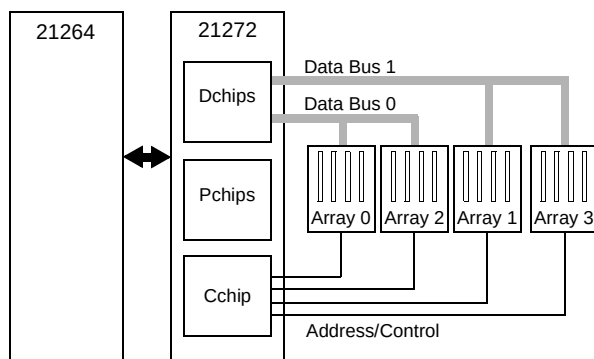

Configuring SDRAM Memory

5.2 Configuring SDRAM Memory

For the memory system in the AlphaPC 264DP, one to four arrays may be used, following the configuration rules.

Configuration Rules

- Each array must be fully populated with DIMMs of the same size and type.
- Array 0 must be populated.
- Additional arrays can be populated in any order.

For a memory subsystem with two arrays, placing the second array on bus 1 (array 1 or array 3) is recommended.


Arrays

The arrays are made up of the following connectors:

- **Array 0:** J11, J14, J26, J28
- **Array 1:** J1, J6, J30, J32
- **Array 2:** J13, J16, J25, J27
- **Array 3:** J5, J9, J29, J31

Figure 5–2 shows the relationship of the connectors/arrays. Refer to Figure 2–1 for DIMM connector locations on the mainboard.

Figure 5–2 AlphaPC 264DP DIMM Connectors

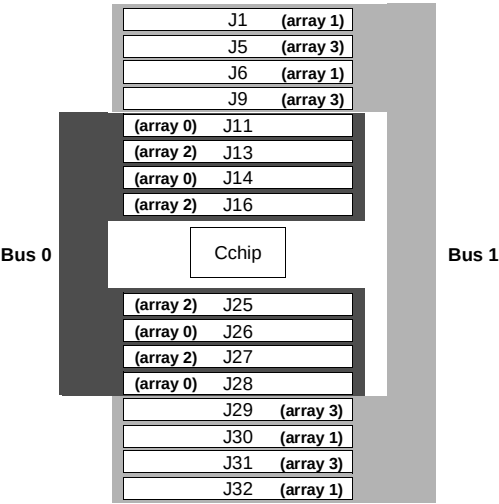

## Configuring SDRAM Memory

### Possible Configurations

Memory sizes from 128MB to 4GB are supported.

Although not an exhaustive list, Table 5–1 lists some of the SDRAM memory configurations available. Any combinations of DIMMs that meet the configuration rules are supported by the 21272 chipset.

For a list of vendors who supply components and accessories for the AlphaPC 264DP, see Appendix A.

**Table 5–1 AlphaPC 264DP SDRAM Memory Configurations**

| Total Memory | Array 0 <sup>1</sup> | Array 1 <sup>1</sup> | Array 2 <sup>1</sup> | Array 3 <sup>1</sup> |
|--------------|----------------------|----------------------|----------------------|----------------------|
| 128MB        | 32MB                 | —                    | —                    | —                    |
| 256MB        | 32MB                 | 32MB                 | —                    | —                    |
|              | 64MB                 | —                    | —                    | —                    |
| 512MB        | 128MB                | —                    | —                    | —                    |
|              | 64MB                 | 64MB                 | —                    | —                    |
| 768MB        | 128MB                | 64MB                 | —                    | —                    |
|              | 64MB                 | 64MB                 | 64MB                 | —                    |
| 1GB          | 256MB                | —                    | —                    | —                    |
|              | 128MB                | 128MB                | —                    | —                    |
|              | 64MB                 | 64MB                 | 64MB                 | 64MB                 |
| 1.5GB        | 256MB                | 128MB                | —                    | —                    |
|              | 128MB                | 128MB                | 64MB                 | 64MB                 |
| 2GB          | 256MB                | 256MB                | —                    | —                    |
| 2.5GB        | 256MB                | 256MB                | 128MB                | —                    |
| 3GB          | 256MB                | 256MB                | 128MB                | 128MB                |
| 3.5GB        | 256MB                | 256MB                | 256MB                | 128MB                |
| 4GB          | 256MB                | 256MB                | 256MB                | 256MB                |

<sup>1</sup> Each array has 4 DIMMs.



# 6

---

## Firmware Introduction

This chapter introduces the operating system interfaces (firmware) that are stored in the AlphaPC 264DP flash ROM:

- AlphaBIOS
- Alpha SRM console

It also describes two additional utilities that are used with the AlphaPC 264DP:

- The Fail-Safe Booter (FSB) utility
- The Loadable Firmware Update (LFU) utility

### 6.1 Firmware Overview

There are two interfaces that are included in the AlphaPC 264DP firmware, residing in the flash ROM on the AlphaPC 264DP mainboard. They are defined as follows:

- **AlphaBIOS** — The AlphaBIOS firmware initializes the system and allows you to configure the system and install and boot the Windows NT operating system.
- **Alpha SRM console** — The Alpha SRM console firmware initializes the system and loads the AlphaBIOS firmware. It also allows you to configure the system and install and boot the Tru64 UNIX operating system.

#### 6.1.1 Power-Up

The Alpha SRM console is loaded at power-up to perform a few functions. The Alpha SRM console then loads AlphaBIOS and passes control to it.

## Preparing Diskettes

### 6.1.2 Switching From One Firmware to the Other

At times, you may find it necessary to switch from one firmware to the other. The following sections describe the necessary steps.

#### From AlphaBIOS to Alpha SRM Console

To boot the Alpha SRM console while in AlphaBIOS, perform the following steps. (For more information, refer to Chapter 7.)

1. At the AlphaBIOS boot screen, press F2 to reach the AlphaBIOS setup screen.
2. From the setup screen, use the Tab key to select CMOS Setup...
3. At the CMOS setup screen, press F6 to move to the Advanced CMOS setup screen.
4. At the Advanced CMOS setup screen, use the Tab key to move to Console Selection. Then use the down arrow key to toggle the console selection from *Windows NT Console (AlphaBIOS)* to *Tru64 UNIX (SRM Console)*.
5. Press F10 to save the changes and return to the CMOS setup screen.
6. Press F10 to save the changes and return to the AlphaBIOS setup screen.
7. Initialize the system by pressing the reset button or by power cycling the system.

#### From Alpha SRM Console to AlphaBIOS

To boot AlphaBIOS while in the Alpha SRM console, perform the following steps. (For more information, refer to Chapter 8.)

1. At the Alpha SRM console prompt, enter the command **set os\_type nt**.
2. Initialize the system by pressing the reset button or entering the **init** command.

## 6.2 Preparing Diskettes

The required firmware for your system is preloaded onto the flash ROM. Copies of the firmware files may be included on your distribution CD, in case you need to refresh the firmware. If they are not included, you can download them from the Alpha OEM World Wide Web Internet site at <http://www.digital.com/alphaoem>. Click on **Technical Information**, then click on **Alpha Drivers and Firmware**.

The utilities that are used to reload or update the firmware expect to find the files on a diskette, so you need to prepare a diskette for each utility with the correct files from the CD or the Web.



## Fail-Safe Booter Utility

### For FSB:

- Copy the file PC264SRM.ROM onto a diskette, renaming it DP264SRM.ROM.

### For Updating Firmware:

- Copy the files PC264FW.TXT, PC264NT.ROM, and PC264SRM.ROM onto a diskette.

### For Installing Windows NT:

- Copy the necessary files, as directed by installation instructions, onto a diskette (see Section 7.3.1).

## 6.3 Fail-Safe Booter Utility

The FSB provides an emergency recovery mechanism when the firmware image contained in flash memory has been corrupted. You can run the FSB and boot another image from a diskette that is capable of reprogramming the flash ROM.

You can start the FSB in one of two ways:

- If the firmware image is unavailable when the system is powered on or reset, the FSB runs automatically. When the FSB runs, the system emits a series of beeps through the speaker as beep code 1-2-3; that is, one beep and a pause, followed by two beeps and a pause, followed by three beeps. After the diskette activity light flashes, insert the diskette you created for the FSB. Then, reset the system to restart the FSB. The FSB loads and runs the Alpha SRM console from this diskette. Go to Section 6.5.1 and follow the procedures for updating your firmware.
- You can also start the FSB manually, as follows:
  1. Power off your system.
  2. Set switch 1 (FSB) of SW2 on the mainboard to on (see Figure 3-1).
  3. Insert the FSB diskette you created into the diskette drive.
  4. Power on your system, which brings up the Alpha SRM console.
  5. Proceed to Section 6.5.1 and follow the procedures for updating your firmware.

## Updating Firmware From AlphaBIOS

### 6.4 Updating Firmware From AlphaBIOS

At the the AlphaBIOS Setup screen, load the firmware update diskette you created, then use the Tab key to select the AlphaBIOS Upgrade option and press Enter (see Section 7.2.2). The AlphaBIOS automatically finds the firmware update files and updates the appropriate firmware.

### 6.5 Updating Firmware From Alpha SRM Console with LFU

To update the firmware from the Alpha SRM console, start the Loadable Firmware Update (LFU) utility, which then allows you to update the Alpha SRM console firmware, the AlphaBIOS firmware, and option firmware.

#### 6.5.1 Starting LFU

At the Alpha SRM console prompt, issue the **lfu** command (see Section 8.11).

The LFU, upon being started, searches for the update firmware. You need to perform the following steps to update the AlphaBIOS and the Alpha SRM console.

1. Load the diskette you created for the LFU.
2. Enter the device name **dva0** when prompted for the location of the update files.
3. Enter the filename PC264FW.TXT when prompted. Note that the LFU has already checked the contents of the diskette and should provide PC264FW.TXT as the default.

PC264FW.TXT specifies which firmware is to be updated and passes the names of the files that contain updated firmware. Figure 6–1 shows an example of running LFU and updating firmware.

**Figure 6–1 Example of Running LFU**

```
P00>>>lfu
Checking dka400.4.0.7.1 for the option firmware files. . .
Checking dva0 for the option firmware files. . .

Option firmware files were not found on CD or floppy.
If you want to load the options firmware,
please enter the device on which the files are located(ewa0),
or just press <return> to proceed with a standard console update: dva0
Please enter the name of the options firmware files list, or
Press <return> to use the default filename (pc264fw.txt) : pc264fw.txt
Copying PC264FW.TXT from dva0. . .
Copying PC264NT.ROM from dva0. . .
Copying PC264SRM.ROM from dva0. . .
```

## Updating Firmware From Alpha SRM Console with LFU

### 6.5.2 LFU Commands

Table 6–1 shows the commands available in the LFU.

**Table 6–1 LFU Commands**

| Command   | Description                                                    |
|-----------|----------------------------------------------------------------|
| display   | Displays the system's configuration table                      |
| exit      | Exits LFU                                                      |
| list      | Lists the device, revision, firmware name, and update revision |
| readme    | Displays important release information                         |
| update    | Replaces the current firmware with the loadable data image     |
| verify    | Compares the loadable and hardware images                      |
| ? or help | Displays this command table                                    |

#### **display**

The **display** command shows the physical configuration of the system. **Display** is equivalent to issuing the SRM console command **show configuration**. It shows you the slot for each module, so **display** can help you identify the location of a device.

#### **exit**

The **exit** command terminates the LFU program, causes system initialization and testing, and returns the system to the console from which LFU was called.

#### **help**

The **help** (or **?**) command displays the LFU command list, shown below.

| Function  | Description                                                     |
|-----------|-----------------------------------------------------------------|
| Display   | Displays the system's configuration table.                      |
| Exit      | Done exit LFU (reset).                                          |
| List      | Lists the device, revision, firmware name, and update revision. |
| Readme    | Lists important release information                             |
| Update    | Replaces current firmware with loadable data image.             |
| Verify    | Compares loadable and hardware image.                           |
| ? or Help | Scrolls this function table.                                    |

## Updating Firmware From Alpha SRM Console with LFU

### **list**

The **list** command displays the inventory of update firmware on the CD-ROM, floppy, or network. Only the devices listed at your terminal are supported for firmware updates.

The **list** command shows three pieces of information for each device:

- Current Revision – The revision of the device's current firmware
- Filename – The name of the file used to update that firmware
- Update Revision – The revision of the firmware update image

### **readme**

The **readme** command lists release notes for the LFU program.

### **update**

The **update** command writes new firmware to the module. Then LFU automatically verifies the update by reading the new firmware image from the module into memory and comparing it with the source image.

To update more than one device, you may use a wildcard but not a list. For example, *update k\** updates all devices with names beginning with k, and *update \** updates all devices.

When you do not specify a device name, LFU tries to update all devices; it lists the selected devices to update and prompts before devices are updated. The default is no.

The *-all* option eliminates the update confirmation requests, enabling the update to proceed without operator intervention.

**Caution:** Never abort an update operation. Aborting corrupts the firmware on the module.

### **verify**

The **verify** command reads the firmware from the module into memory and compares it with the update firmware. If a module was verified when it was updated, but later failed tests, use **verify** to determine whether the firmware has become corrupted.

# 7

---

## AlphaBIOS

The AlphaBIOS firmware initializes the system and enables you to install and boot the Windows NT operating system. This firmware resides in the flash ROM on the AlphaPC 264DP mainboard. The mainboard ships with AlphaBIOS firmware and online documentation that describes how to configure the firmware for Windows NT.

This chapter contains a subset of the AlphaBIOS help file on the distribution medium. You can access the complete documentation online when your system is up and running, or from another Windows system.

The online documentation describes configuration information for Alpha systems running AlphaBIOS. The online documentation resides on the distribution medium. The documentation is available as a Windows Help file compatible with Windows NT 4.0 and Windows 95.

## AlphaBIOS Conventions

### 7.1 AlphaBIOS Conventions

AlphaBIOS uses universally accepted keys and key combinations for navigating the interface and selecting items. If you are familiar with MS-DOS or Microsoft Windows keyboard conventions, navigating AlphaBIOS is simple. Table 7–1 shows the keys to use for navigating and selecting items in AlphaBIOS.

**Table 7–1 Action Keys**

| Press...    | To...                                                                                                       |
|-------------|-------------------------------------------------------------------------------------------------------------|
| TAB         | Move highlight forward between fields of a dialog                                                           |
| SHIFT + TAB | Move highlight backwards between fields of a dialog                                                         |
| ↑ or ↓      | Move highlight within a menu, or cycle through available field values in a dialog window                    |
| ALT + ↓     | Drop down a menu of choices from a drop-down listbox. A drop-down listbox can be recognized by the symbol ↓ |
| HOME        | Move to the beginning of a text entry field                                                                 |
| END         | Move to the end of a text entry field                                                                       |
| ← →         | Move to the left or right in a text entry field                                                             |
| ESC         | Discard changes and back up to previous screen                                                              |

Two levels of keyboard help are available:

- Press **F1** once to display explanations of the keystrokes available for the *currently displayed* part of AlphaBIOS.
- Press **F1** twice to display explanations of the keystrokes available for navigating *throughout* AlphaBIOS.

## AlphaBIOS Setup Program


### 7.2 AlphaBIOS Setup Program

When you power up or reset your system, the boot screen with the system logo is displayed. Pressing **F2** at this screen starts the setup program. Figure 7–1 shows an example of an AlphaBIOS Boot Screen with the “Press <F2> to enter SETUP” message at the bottom. Figure 7–2 shows the AlphaBIOS Setup Screen.

**Figure 7–1 AlphaBIOS Boot Screen**



**Figure 7–2 AlphaBIOS Setup Screen**

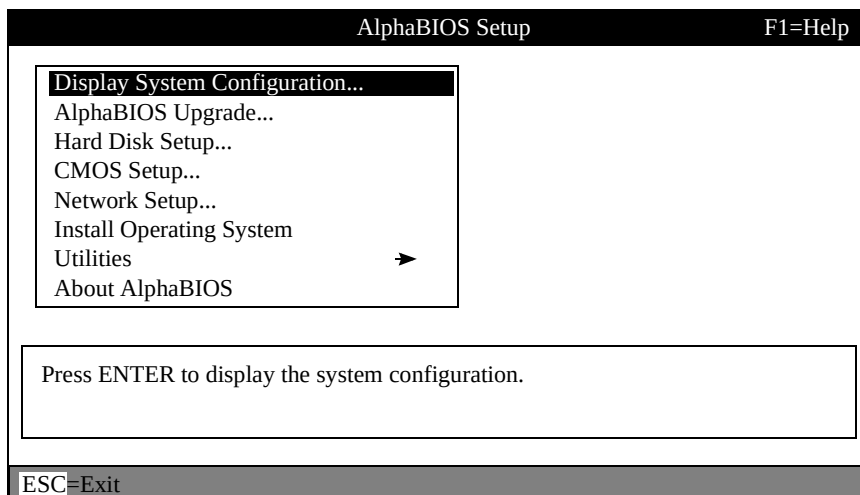

## AlphaBIOS Setup Program


### 7.2.1 Displaying Your System Configuration

You can use AlphaBIOS to display your system configuration in a clear, easy-to-read format, organized by categories: system board, memory, hard disk, PCI, SCSI, and peripherals.

To display your system configuration:

1. Start AlphaBIOS Setup, select Display System Configuration, and press **Enter**.
2. In the Display System Configuration screen, use the arrow keys to select the configuration category that you want to see, such as the examples shown in Figures 7-3 through 7-5.

**Figure 7-3 Systemboard Configuration Screen**

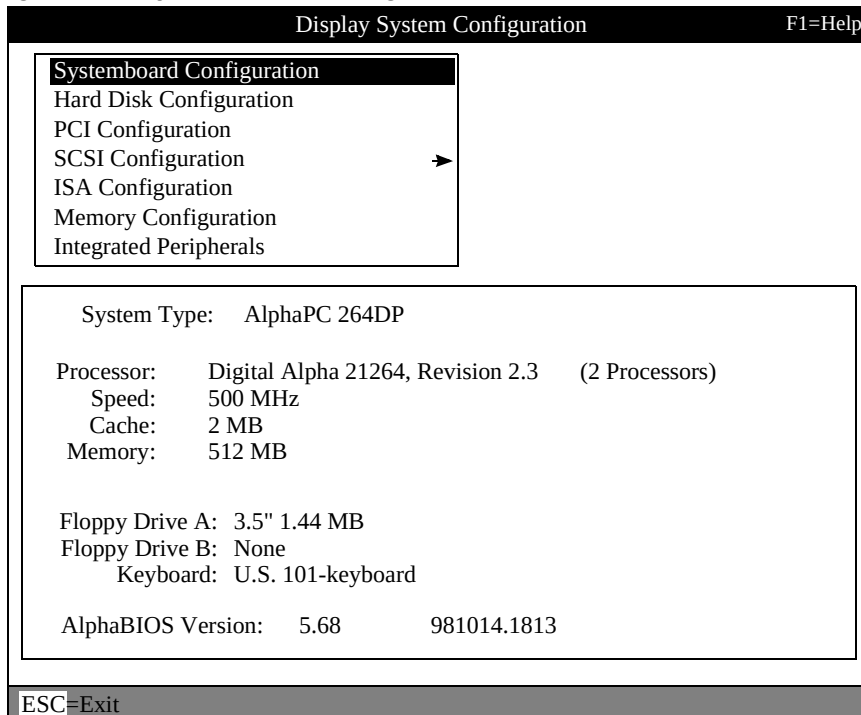



## AlphaBIOS Setup Program


**Figure 7–4 Hard Disk Configuration Screen**

| Display System Configuration                                                                                                                                                                             |   |                |                                       |         | F1=Help |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|----------------|---------------------------------------|---------|---------|--|
| <div> Systemboard Configuration<br/> <b>Hard Disk Configuration</b><br/> PCI Configuration<br/> SCSI Configuration →<br/> ISA Configuration<br/> Memory Configuration<br/> Integrated Peripherals </div> |   |                |                                       |         |         |  |
| Disk                                                                                                                                                                                                     | 0 | AIC78XX<br>DEC | #0, SCSI ID 0<br>RZ1CB-CS (C) DEC0656 | 4091 MB |         |  |
|                                                                                                                                                                                                          |   | Partition 1    |                                       | 4085 MB | FAT     |  |
|                                                                                                                                                                                                          |   | Partition 2    |                                       | 6 MB    | FAT     |  |
| Disk                                                                                                                                                                                                     | 1 | AIC78XX<br>DEC | #0, SCSI ID 1<br>RZ1CB-CS (C) DEC0656 | 4091 MB |         |  |
|                                                                                                                                                                                                          |   | Partition 1    |                                       | 4091 MB | NTFS    |  |
| Disk                                                                                                                                                                                                     | 2 | AIC78XX<br>DEC | #0, SCSI ID 2<br>RZ29B (C) DEC0656    | 4091 MB |         |  |
|                                                                                                                                                                                                          |   | Partition 1    |                                       | 4091 MB | NTFS    |  |
| ESC=Exit                                                                                                                                                                                                 |   |                |                                       |         |         |  |

**Note:** This screen is for information only; it cannot be edited. To make changes to the hard-disk setup, use the Hard Disk Setup screen (see Section 7.2.3).

AlphaBIOS Setup Program

Figure 7-5 Memory Configuration Screen

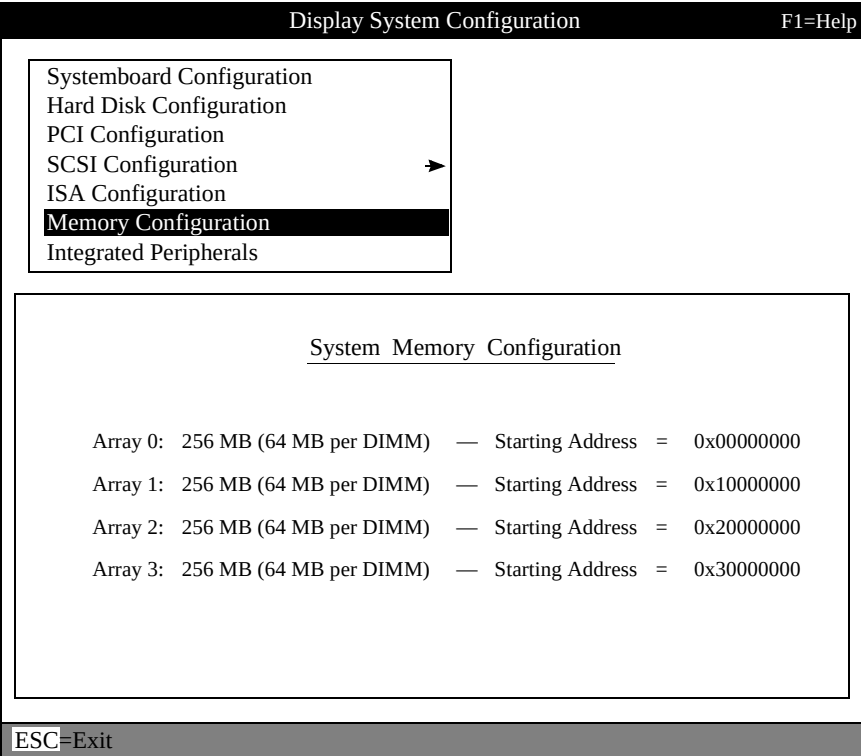

## AlphaBIOS Setup Program


### 7.2.2 Upgrading AlphaBIOS

As new versions of Windows NT are released, it might be necessary to upgrade AlphaBIOS to the latest version. Also, as improvements are made to AlphaBIOS, you may wish to upgrade to take advantage of new features.

To upgrade from an earlier version of AlphaBIOS:

1. Insert the diskette or CD-ROM containing the AlphaBIOS upgrade.
2. If you are not already running AlphaBIOS Setup, restart your system and press **F2** when the boot screen is displayed.
3. In the main AlphaBIOS Setup screen, use the Tab key to select AlphaBIOS Upgrade and press **Enter** (see Figure 7–6). Then follow the instructions on the AlphaBIOS Upgrade screen.

**Figure 7–6 Setup Screen Selecting AlphaBIOS Upgrade**

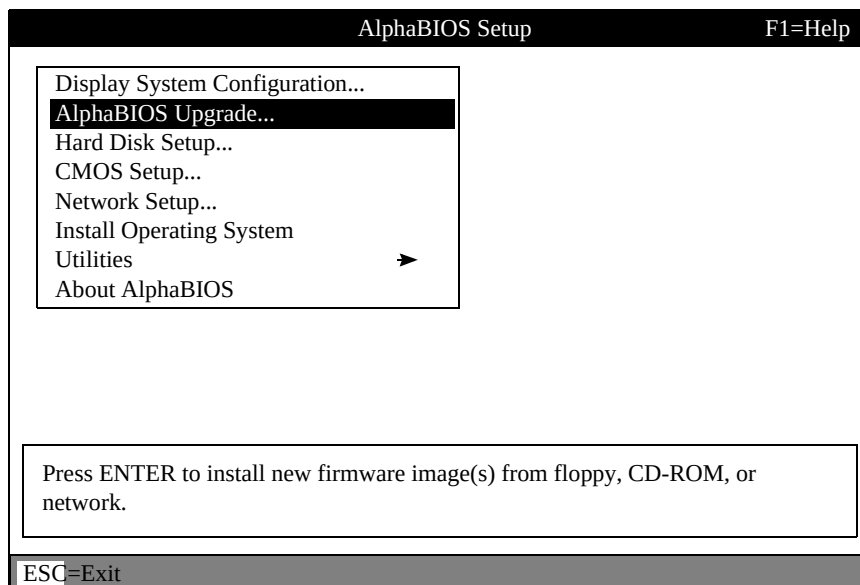

# AlphaBIOS Setup Program

## 7.2.3 Setting Up Your Hard Disk

Express hard-disk setup is an easy way to create the recommended partition arrangement on your first hard disk, disk 0. Note, however, that express hard-disk setup does not format the large partition with NTFS. You will have the opportunity to do this during the Windows NT installation. Figure 7–7 shows an example of the Hard Disk Setup screen.

**Note:** AlphaBIOS assigns “disk 0” to the hard disk with the lowest SCSI ID number on the first bus in your system.

**Caution:** If you have any information on your disk that you want to save, be sure to back it up before using express hard-disk setup.

Figure 7–7 Hard Disk Setup Screen

| Hard Disk Setup                                     |   |             |               |         | F1=Help |
|-----------------------------------------------------|---|-------------|---------------|---------|---------|
| Disk                                                | 0 | AIC78XX     | #0, SCSI ID 0 | 4091 MB |         |
|                                                     |   | Partition 1 |               | 4085 MB | FAT     |
|                                                     |   | Partition 2 |               | 6 MB    | FAT     |
| Disk                                                | 1 | AIC78XX     | #0, SCSI ID 1 | 4091 MB |         |
|                                                     |   | Partition 1 |               | 4091 MB | NTFS    |
| Disk                                                | 2 | AIC78XX     | #0, SCSI ID 2 | 4091 MB |         |
|                                                     |   | Partition 1 |               | 4091 MB | NTFS    |
| INSERT=New DEL=Delete F6=Format F7=Express ESC=Exit |   |             |               |         |         |

To perform express hard-disk setup:

1. If you have any needed information on your disk, back it up before proceeding.
2. Start AlphaBIOS Setup, select Hard Disk Setup, and press **Enter**.
3. Press **F7** to enter express hard-disk setup.
4. Press **F10** to continue with the setup.

For information on manually managing hard disks, see the online documentation.

## AlphaBIOS Setup Program

### 7.2.4 Performing CMOS Setup Tasks

CMOS Setup is used to configure several system parameters and is divided into two modes, standard and advanced. Standard CMOS Setup is used to configure basic system parameters; Advanced CMOS Setup is used for system-specific parameters and password protection. Table 7–2 lists the specific tasks that you can perform in standard and advanced setup mode.

**Table 7–2 CMOS Setup Tasks**

| Standard CMOS Setup | Advanced CMOS Setup |
|---------------------|---------------------|
| Autostart           | Memory test         |
| Date and time       | PCI parity          |
| Floppy              | Password protection |
| Keyboard            | SCSI BIOS emulation |
|                     | S/G DMA mode        |
|                     | Warm reboot         |

To enter standard CMOS Setup:

- Start AlphaBIOS Setup, select CMOS Setup, and press **Enter**.

Figure 7–8 shows a sample standard CMOS Setup screen.

**Figure 7–8 Standard CMOS Setup Screen**

CMOS Setup F1=Help

Date: Wednesday, **August** 19, 1998  
Time: 13:22:27

Floppy Drive A: 3.5" 1.44 MB  
Floppy Drive B: None  
Keyboard: U.S. 101-key keyboard

Auto Start: Enabled  
Auto Start Count: 30 Seconds

Press ↑ or ↓ to modify date fields. Date modifications will take effect immediately.

F3=Color F6=Advanced F7=Default ESC=Discard Changes F10=Save Changes


# AlphaBIOS Setup Program

To enter advanced CMOS Setup:

- 1. Start AlphaBIOS Setup, select CMOS Setup, and press **Enter**.
- 2. In the CMOS Setup screen, press **F6**.

Figure 7–9 shows a sample advanced CMOS Setup screen.

**Figure 7–9 Advanced CMOS Setup Screen**

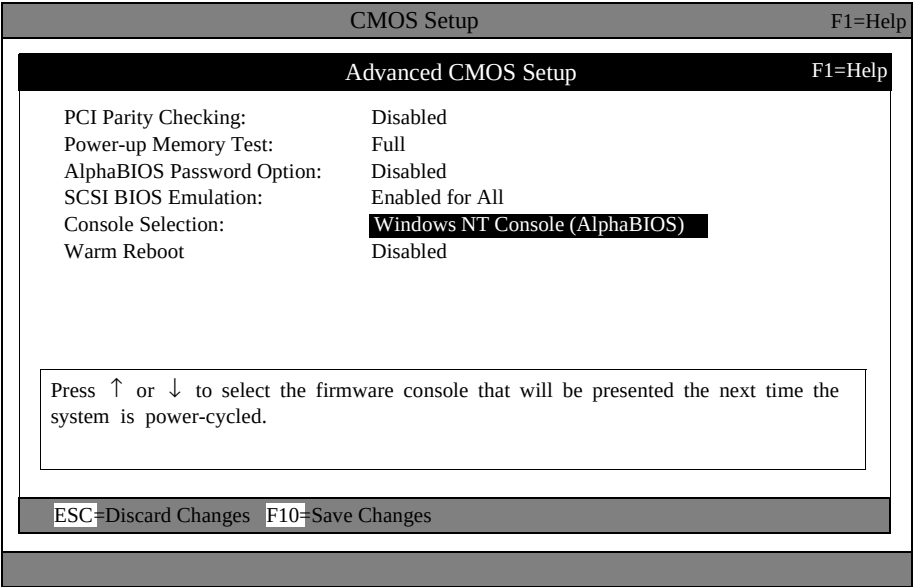

## AlphaBIOS Setup Program


### 7.2.5 Running a Maintenance Program

You can run maintenance programs such as the RAID configuration utility (RCU) and other utilities directly from the AlphaBIOS utility menu.

To run a maintenance program:

1. Start AlphaBIOS Setup, select Utilities, select Run Maintenance Program from the submenu shown in Figure 7–10, and press **Enter**.


**Figure 7–10 Run Maintenance Program Submenu**

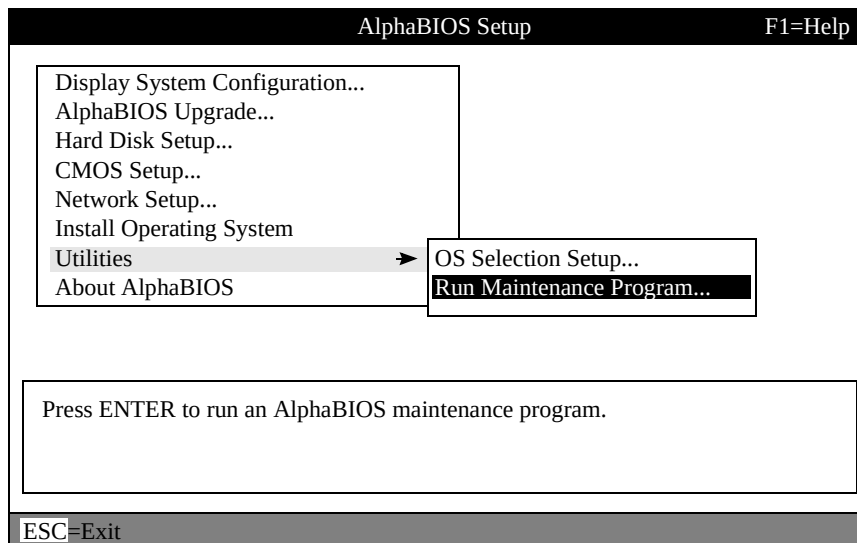

## AlphaBIOS Setup Program

2. In the Run Maintenance Program dialog box, type the name of the program to be run at the Program Name prompt, as shown in Figure 7–11. Then tab to the Location listbox and select the hard-disk partition, floppy diskette, or CD-ROM drive from which to run the program.
3. Press **Enter** to execute the program.

**Figure 7–11 Entering the Program Name**

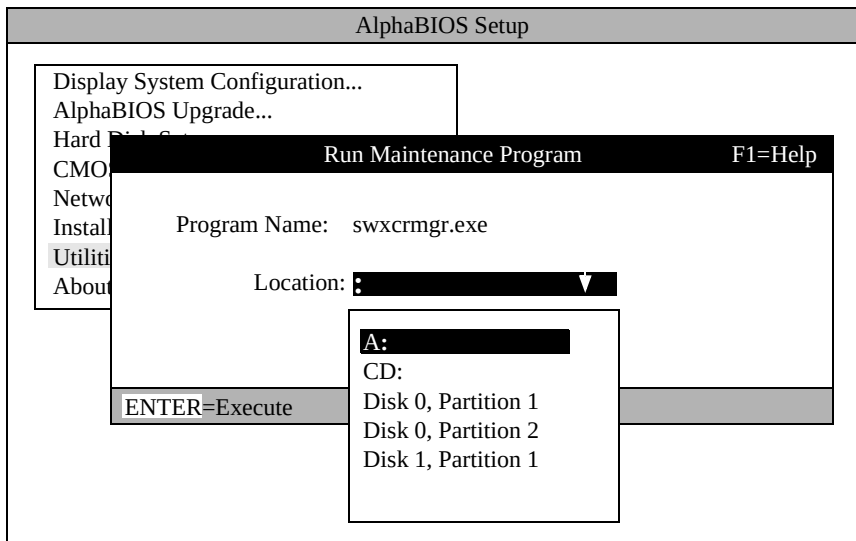

If you are running a utility from a floppy diskette, you can simply type the utility's name into the Program Name field, and press **Enter**. This is because the floppy drive is the default selection in the Current Partition field.

Use Alt + ↓ when a listbox is selected to open the list.



## Installing the Windows NT Operating System

### 7.3 Installing the Windows NT Operating System

This section supplements the Microsoft Windows NT installation guide for installing the Windows NT operating system on an AlphaPC 264DP system.

If you already have a previous version of Windows NT installed, see the Microsoft Windows NT installation guide for information about how to upgrade to a new version of the operating system.

#### 7.3.1 Requirements

You need the following hardware and software to install the Windows NT operating system on an AlphaPC 264DP system:

- A 100MB or larger SCSI drive

**Note:** For information regarding supported SCSI hard drives, CD-ROM drives, and controllers supported as boot/installation devices, see the README.TXT file on the distribution medium.

- The Microsoft Windows NT compact disk
- The Installing Windows NT diskette you created

**Note:** A diskette is **required** for installing the Windows NT 4.0 operating system. Future versions of Windows NT may not require this diskette. Contact your OEM or system vendor for details.

If your system came with a Windows NT 4.0 installation diskette, you do not need to create a new diskette.

## Installing the Windows NT Operating System

### 7.3.2 Before Installing Windows NT

Before installing Windows NT, ensure that you have completed the following tasks:

- Use the CMOS Setup program to:
  - Set the system date and time
  - Verify that all other standard CMOS settings match your system.

Refer to Section 7.2.4 for more information about the CMOS Setup program.

- Perform an express hard-disk setup. This configures the first hard disk that AlphaBIOS detects in your system with the recommended default partition arrangement. See Section 7.2.3 for more information on setting up your hard disk. If you do not want to use the express hard-disk setup, refer to the online AlphaBIOS documentation for other hard-disk setup options.

### 7.3.3 Starting Windows NT Setup

Windows NT Setup, located on the Microsoft Windows NT compact disk, installs the Windows NT operating system. Windows NT Setup provides a brief description of the available key functions at the bottom of the screen.

During the Windows NT installation procedure, you may be prompted for the type of computer that you have. For the AlphaPC 264DP system, choose AlphaPC 264DP. If AlphaPC 264DP is not one of the choices, choose “other” *after* you have inserted your Windows NT installation diskette. The following procedure supersedes the Starting Setup on a RISC-based Computer section of the Microsoft Windows NT installation guide.

To start the Windows NT Setup program:

1. Insert the Windows NT compact disc in the CD-ROM drive.
2. Restart your computer.
3. Start AlphaBIOS Setup, use the Tab key to select Install Operating System, and press **Enter**.
4. Follow the instructions on the screen.

# 8

## Alpha SRM Console Firmware

The Alpha SRM console firmware initializes the system and loads the AlphaBIOS firmware. This firmware resides in the flash ROM on the AlphaPC 264DP mainboard.

At power-up, the Alpha SRM console runs. If it is not configured to automatically load the AlphaBIOS, you may boot Tru64 UNIX.

### 8.1 Alpha SRM Console Firmware Conventions

The following conventions are used in this section:

| Convention                         | Description                                                                                         |
|------------------------------------|-----------------------------------------------------------------------------------------------------|
| >>>                                | Alpha SRM console prompt                                                                            |
| Backslash (\) at the end of a line | Continuation symbol to continue long commands on the next line                                      |
| _>                                 | Continuation line prompt                                                                            |
| Maximum command length             | 255 characters                                                                                      |
| Multiple contiguous spaces or tabs | Treated as a single space                                                                           |
| Command abbreviations              | Allowed, if not ambiguous                                                                           |
| Command qualifiers or options      | Prefix with a space and a dash (-)                                                                  |
| Numbers                            | Hexadecimal, unless otherwise specified (Registers, such as R0–R31, are shown in decimal notation.) |

## Alpha SRM Console Firmware Conventions

The following table lists Alpha SRM console special keys and their functions. These special keys, also referred to as shortcut keys, provide command recall, line editing, and basic input/output control flow.

| Shortcut Key                     | Function                                                     |
|----------------------------------|--------------------------------------------------------------|
| Enter                            | Terminate the command line input.                            |
| Backspace or Delete              | Delete one character to the left of the cursor.              |
| Ctrl/A                           | Toggles insert/overstrike mode. (Overstrike is the default.) |
| Ctrl/B<br>Up arrow<br>Down arrow | Recall previous commands. (The last 16 commands are stored.) |
| Ctrl/C                           | Terminate the foreground process.                            |
| Ctrl/D<br>Left arrow             | Move the cursor one position to the left.                    |
| Ctrl/E                           | Move the cursor to the end of the line.                      |
| Ctrl/F<br>Right arrow            | Move the cursor one position to the right.                   |
| Ctrl/H                           | Move the cursor to the beginning of the line.                |
| Ctrl/O                           | Suppress or resume (toggle) console output.                  |
| Ctrl/Q                           | Resume the flow (XON) of data to the console.                |
| Ctrl/R                           | Retype the current command line.                             |
| Ctrl/S                           | Stop the flow (XOFF) of data to the console.                 |
| Ctrl/U                           | Delete the entire line.                                      |

## Basic Alpha SRM Console Command Descriptions

### 8.2 Basic Alpha SRM Console Command Descriptions

This section describes the following basic Alpha SRM console commands that are necessary to boot the Tru64 UNIX operating system:

| Command   | Function                                                              |
|-----------|-----------------------------------------------------------------------|
| alphabios | Loads and starts the AlphaBIOS console                                |
| boot      | Loads and starts Tru64 UNIX                                           |
| deposit   | Writes data to the specified address                                  |
| edit      | Invokes the console line editor on a RAM file or the nvram file       |
| examine   | Displays the contents of a memory location, register, or device       |
| lfu       | Loads and starts the Loadable Firmware Update utility                 |
| set       | Configures operating system environment variables                     |
| show      | Displays operating system environment variables or system information |

The Alpha SRM console offers additional commands. For a complete list of Alpha SRM console commands, enter **help** at the Alpha SRM console prompt (>>>).

## Basic Alpha SRM Console Command Descriptions

### **alphabios**

Loads and runs the AlphaBIOS firmware, without changing the default firmware setting.

#### **Syntax**

**alphabios**

#### **Arguments**

None

#### **Options**

None

#### **Description**

The **alphabios** command starts the AlphaBIOS firmware. For more information on AlphaBIOS, see Chapter 7.

#### **Example**

The following **alphabios** command loads and runs AlphaBIOS:

```
>>>alphabios
```

## Basic Alpha SRM Console Command Descriptions

### boot

Initializes the processor, loads a program image from the specified boot device, and transfers control to the loaded image.

#### Syntax

```
boot [-file <filename>] [-flags  
<longword>[,<longword>]]  
[-protocols <enet_protocol>] [-halt]  
[<boot_device>]
```

#### Arguments

<boot\_device>

A device path or list of devices from which the firmware will attempt to boot. Use the **set bootdef\_dev** command to set an environment variable that specifies a default boot device.

#### Options

| boot Command Option                        | Description                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-file</b> <filename>                    | Specifies the name of a file to load into the system. Use the <b>set boot_file</b> command to set the environment variable that specifies a default boot file.                                                                                                                                                           |
| <b>-flags</b><br><longword> [, <longword>] | Specifies additional information for the operating system. For Tru64 UNIX systems, the following values may be used:<br>i = Interactive boot<br>s = Boot to single user<br>a = Autoboot to multiuser<br>Use the <b>set boot_osflags</b> command to set an environment variable that specifies a default boot flag value. |
| <b>-protocols</b><br><enet_protocol>       | Specifies the Ethernet protocols that will be used for a network boot. Values may be <b>mop</b> or <b>bootp</b> .                                                                                                                                                                                                        |
| <b>-halt</b>                               | Forces the bootstrap operation to halt and invoke the console program after the image is loaded and the page tables and other data structures are set up.                                                                                                                                                                |

## Basic Alpha SRM Console Command Descriptions

### Description

The **boot** command initializes the processor, loads a program image from the specified boot device, and transfers control to that image. If you do not specify a boot device in the command line, the default boot device is used. The default boot device is determined by the value of the `bootdef_dev` environment variable.

If you specify a list of devices, a bootstrap is attempted from each device in the order in which the device is listed. Then control passes to the first successfully booted image. In a list, always enter network devices *last* because network bootstraps terminate only if a fatal error occurs or if an image is successfully loaded.

The **-flags** option can pass additional information to the operating system about the boot that you are requesting. If you do not specify a boot flag qualifier, the default boot flag's value specified by the `boot_osflags` environment variable is used.

The **-protocols** option allows selection of either the DECnet MOP or the TCP/IP BOOTP network protocols. The keywords **mop** and **bootp** are valid arguments for this option. It is possible to set the default protocol for a port by setting the environment variable `ewa0_protocols` or `era0_protocols` to the appropriate protocol.

Explicitly stating the boot flags or the boot device overrides the current default value for the current boot request, but does not change the corresponding environment variable.

See Section 8.4.1 for more information about environment variables.



## Basic Alpha SRM Console Command Descriptions

### Examples

| boot Command Example         | Description                                                                                                                                                                                        |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| >>>boot                      | Boots the system from the default boot device.                                                                                                                                                     |
| >>>boot ewa0                 | Boots the system from Ethernet port ewa0.                                                                                                                                                          |
| >>>boot -file dec2.sys ewa0  | Boots the file named dec2.sys from Ethernet port ewa0.                                                                                                                                             |
| >>>boot -protocol bootp ewa0 | Boots the system using the TCP/IP BOOTP protocol from Ethernet port ewa0.                                                                                                                          |
| >>>boot -flags 0,1           | Boots the system from the default boot device using flag setting 0,1.                                                                                                                              |
| >>>boot -halt dka0           | Loads the bootstrap image from disk dka0, halts the bootstrap operation, and invokes the console program. Subsequently, you can enter <b>continue</b> to transfer control to the operating system. |

## Basic Alpha SRM Console Command Descriptions

### deposit

Writes data to the specified address.

#### Syntax

```
deposit [-{b,w,l,q,o,h}] [{physical, virtual, gpr,  
fpr, ipr}] [-n <count>] [-s <step>]  
[<device>:]<address> <data>
```

#### Arguments

<device>:

The optional device name (or address space) selects the device to access. The following platform-independent devices are supported:

- **pmem**  
Physical memory.
- **vmem**  
Virtual memory. All access and protection checking occur. If the access is not allowed to a program running with the current processor status (PS), the console issues an error message. If memory mapping is not enabled, virtual addresses are equal to physical addresses.

<address>

An address that specifies the offset within a device into which data is deposited. The address may be any legal symbolic address.

Valid symbolic addresses are shown in the following table.

| Symbolic Address | Description                                                                                         |
|------------------|-----------------------------------------------------------------------------------------------------|
| <b>gpr-name</b>  | Represents general-purpose register                                                                 |
| <b>ipr-name</b>  | Represents internal processor register                                                              |
| <b>PC</b>        | Program counter                                                                                     |
| <b>+</b>         | The location immediately following the last location referenced by <b>examine</b> or <b>deposit</b> |

## Basic Alpha SRM Console Command Descriptions

| Symbolic Address | Description                                                                                         |
|------------------|-----------------------------------------------------------------------------------------------------|
| -                | The location immediately preceding the last location referenced by <b>examine</b> or <b>deposit</b> |
| *                | The location last referenced by <b>examine</b> or <b>deposit</b>                                    |
| @                | The location addressed by the last location referenced by <b>examine</b> or <b>deposit</b>          |

<data>

The data to be deposited.

### Options

| deposit Command Option | Description                                                                                                                                           |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| -b                     | Specifies data type is byte.                                                                                                                          |
| -w                     | Specifies data type is word.                                                                                                                          |
| -l                     | Specifies data type is longword.                                                                                                                      |
| -q                     | Specifies data type is quadword.                                                                                                                      |
| -o                     | Specifies data type is octaword.                                                                                                                      |
| -h                     | Specifies data type is hexword.                                                                                                                       |
| -physical              | References physical address space.                                                                                                                    |
| -virtual               | References virtual address space.                                                                                                                     |
| -gpr                   | References general-purpose register address space.                                                                                                    |
| -fpr                   | References floating-point register address space.                                                                                                     |
| -ipr                   | References internal processor register address space.                                                                                                 |
| -n <count>             | Specifies the number of consecutive locations to examine.                                                                                             |
| -s <step>              | Specifies the address increment as a hexadecimal value. This option allows you to override the increment that is normally derived from the data size. |

## Basic Alpha SRM Console Command Descriptions

### Description

The **deposit** command writes data to the specified address, such as a memory location, register, device, or file. The defaults for address space, data size, and address are the last specified values. After initialization, the default for address space is physical memory; for data size, the default is a quadword; and for address, the default is zero.

An address or device can be specified by concatenating the device name with the address. For example, use **pmem:0** and specify the size of the address space to be written. If a conflicting device, address, or data size is specified, the console ignores the command and issues an error response.

### Examples

| deposit Command Example       | Description                                                                       |
|-------------------------------|-----------------------------------------------------------------------------------|
| >>>d -n 1ff pmem:0 0          | Clears the first 512 bytes of physical memory                                     |
| >>>d -l -n 3 pmem:1234 5      | Writes the value 5 into four longwords, starting at physical memory address 1234  |
| >>>d -n 8 r0 ffffffff         | Loads GPRs R0 through R8 with -1                                                  |
| >>>d -l -n 10 -s 200 pmem:0 8 | Writes the value 8 in the first longword of the first 17 pages in physical memory |

## Basic Alpha SRM Console Command Descriptions

### **edit**

Loads and runs the Alpha SRM line editor.

#### **Syntax**

**edit** <file>

#### **Arguments**

<file>

Specifies the file to be edited.

#### **Options**

None

#### **Description**

The **edit** command starts the Alpha SRM line editor. For more information on the line editor, see Section 8.8.

#### **Example**

The following **edit** command starts the Alpha SRM line editor to edit the file nvram:

```
>>>edit nvram
```

## Basic Alpha SRM Console Command Descriptions

### examine

Displays the contents of the specified address.

#### Syntax

```
examine [-{b,w,l,q,o,h,d}] [-{physical, virtual,  
gpr, fpr, ipr}] [-n <count>] [-s <step>]  
[<device>:]<address>
```

#### Arguments

**<device>:**

The optional device name (or address space) selects the device to access.

**<address>**

The address specifies the first location to examine within the current device. The address can be any legal address specified.

#### Options

| <b>examine Command Option</b> | <b>Description</b>                                                                                                                                         |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-b</b>                     | Specifies data type is byte.                                                                                                                               |
| <b>-w</b>                     | Specifies data type is word.                                                                                                                               |
| <b>-l</b>                     | Specifies data type is longword.                                                                                                                           |
| <b>-q</b>                     | Specifies data type is quadword.                                                                                                                           |
| <b>-o</b>                     | Specifies data type is octaword.                                                                                                                           |
| <b>-h</b>                     | Specifies data type is hexword.                                                                                                                            |
| <b>-d</b>                     | Specifies the data displayed is the decoded macro instruction. The Alpha instruction decode (-d) does not recognize machine-specific PALcode instructions. |
| <b>-physical</b>              | References physical address space.                                                                                                                         |
| <b>-virtual</b>               | References virtual address space.                                                                                                                          |
| <b>-gpr</b>                   | References general-purpose register address space.                                                                                                         |
| <b>-fpr</b>                   | References floating-point register address space.                                                                                                          |

## Basic Alpha SRM Console Command Descriptions

| examine Command Option | Description                                                                                                                                           |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-ipr</b>            | References internal processor register address space.                                                                                                 |
| <b>-n</b> <count>      | Specifies the number of consecutive locations to examine.                                                                                             |
| <b>-s</b> <step>       | Specifies the address increment as a hexadecimal value. This option allows you to override the increment that is normally derived from the data size. |

### Description

The **examine** command displays the contents of the specified address, such as a memory location, register, device, or file. The defaults for address space, data size, and address are the last specified values. After initialization, the default for address space is physical memory; for data size, the default is a quadword; and for address, the default is zero.

An address or device can be specified by concatenating the device name with the address. For example, use **pmem:0** and specify the size of the address space to be displayed. If a conflicting device, address, or data size is specified, the console ignores the command and issues an error response.

The display line consists of the device name, the hexadecimal address (or offset within the device), and the examined data (also in hexadecimal).

The **examine** command supports the same options as the **deposit** command. Additionally, the **examine** command supports instruction decoding with the **-d** option, which disassembles instructions beginning at the current address.

## Basic Alpha SRM Console Command Descriptions

### Examples

| examine Command Example | Display                                                                                                                                                                                               | Description                                              |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| >>>e r0                 | gpr: 0 (R0) 0000000000000002                                                                                                                                                                          | Examines the contents of R0, using a symbolic address.   |
| >>>e -g 0               | gpr: 0 (R0) 0000000000000002                                                                                                                                                                          | Examines the contents of R0, using address space.        |
| >>>e grp:0              | gpr: 0 (R0) 0000000000000002                                                                                                                                                                          | Examines the contents of R0, using a device name.        |
| >>>examine -n 5 r7      | gpr: 38 (R7) 0000000000000000<br>gpr: 40 (R8) 0000000000000000<br>gpr: 48 (R9) 0000000000000000<br>gpr: 50 (R10) 000000007FFBF800<br>gpr: 58 (R11) 000000007FF781A2<br>gpr: 60 (R12) 0000000000000000 | Examines the contents of R7 and the next five registers. |
| >>>examine ipr:11       | ipr 11 (KSP) FFFFFFFF8228DFD0                                                                                                                                                                         | Examines the contents of internal processor register 11. |



## Basic Alpha SRM Console Command Descriptions

### **lfu**

Loads and runs the Loadable Firmware Update (LFU) utility.

#### **Syntax**

**lfu**

#### **Arguments**

None

#### **Options**

None

#### **Description**

The **lfu** command starts the Loadable Firmware Update (LFU) utility. For more information on the LFU, see Section 6.5.

#### **Example**

The following **lfu** command loads and runs the LFU utility:

```
>>>lfu
```

## Basic Alpha SRM Console Command Descriptions

### set

Sets or modifies the value of an environment variable.

#### Syntax

**set** <envar> <value> [-default] [-integer] [-string]

#### Arguments

<envar>

The environment variable to be assigned a new value.

<value>

The value that is assigned to the environment variable. It can be either a numeric value or an ASCII string.

#### Options

| set Command Option | Description                                    |
|--------------------|------------------------------------------------|
| -integer           | Creates an environment variable as an integer. |
| -string            | Creates an environment variable as a string.   |

#### Description

The **set** command is used to set or modify the value of an environment variable. Environment variables are used to pass configuration information between the console and the operating system. See Section 8.4 for more information about environment variables.

#### Examples

| set Command Example     | Description                                                                 |
|-------------------------|-----------------------------------------------------------------------------|
| >>>set bootdef_dev ewa0 | Modifies the default boot device to ewa0                                    |
| >>>set auto_action boot | Attempts to boot the operating system following an error, halt, or power-up |
| >>>set boot_osflags 0,1 | Modifies the default boot flags to 0,1                                      |
| >>>set foobar 5         | Creates an environment variable called foobar and gives it a value of 5     |

## Basic Alpha SRM Console Command Descriptions

### show

Displays the current value of the specified environment variable or information about the system.

#### Syntax

```
show [{config, device [device_name], iobq, hwrpb,  
map, memory, pal, version, <envar>...}]
```

#### Arguments

| show Command Argument       | Description                                                                                                           |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>config</b>               | Displays the current memory configuration, PCI logical slots, and ISA logical slots.                                  |
| <b>device</b> [device name] | Displays the devices and controllers in the system. Specifying a device name returns information on that device only. |
| <b>iobq</b>                 | Displays the input/output counter blocks.                                                                             |
| <b>hwrpb</b>                | Displays the hardware restart parameter block.                                                                        |
| <b>map</b>                  | Displays the system virtual memory map.                                                                               |
| <b>memory</b>               | Displays the memory module configuration.                                                                             |
| <b>pal</b>                  | Displays the version of PALcode.                                                                                      |
| <b>version</b>              | Displays the version of the console.                                                                                  |
| < <b>envar</b> >            | Displays the current value of a specified environment variable.                                                       |

#### Options

None

#### Description

The **show** command displays information about the system and the current value of a specified environment variable. See Section 8.4 for more information about environment variables.

## Displaying System Parameters

### Examples

| show Command Example                                                                                                                                                                                                        | Description                                                                            |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| >>> <u>show device</u><br>dka0.0.0.6.0     DKA0    RZ26L   441A<br>dka400.4.0.6.0   DKA400   RRD43   3213<br>dva0.0.0.0.1     DVA0<br>ewa0.0.0.12.0    EWA0   08-00-2B-E2-1C-25<br>pka0.7.0.6.0     PKA0    SCSI   Bus ID 7 | Lists device information, such as system designation, drive model, or Ethernet address |
| >>> <u>show memory</u><br>48 Meg of System Memory                                                                                                                                                                           | Lists system random-access memory (RAM) size                                           |
| >>> <u>show *</u><br>(refer to Section 8.4)                                                                                                                                                                                 | Lists all environment variables and their settings                                     |
| >>> <u>show boot*</u><br>(refer to Section 8.4)                                                                                                                                                                             | Lists all environment variables, beginning with boot                                   |

## 8.3 Displaying System Parameters

System parameters can be displayed by using the **show** command with the appropriate parameter. Examples of the system configuration, CPUs, system devices, memory configuration, PALcode revision, and console revision are shown in the following subsections.

**Note:**        In the examples, user input is underlined. Everything else is system output.

### 8.3.1 Displaying the System Configuration

The **show config** command displays a list of devices found on the system bus and I/O buses. The syntax is: *show config*. An example of the **show config** command is shown in Figure 8–1.

## Displaying System Parameters

**Figure 8–1 Example of Show Config Command**

```
P00>>> show config
SRM console:      X5.3-1
PALcode:         OpenVMS PALcode V1.31-27, Tru64 UNIX PALcode V1.27-31
Processors
CPU 0            Alpha 21264-2 500 MHz      SR0M Revision:  X1.70
                  Bcache size: 2 MB
CPU 1            Alpha 21264-2 500 MHz      SR0M Revision:  X1.70
                  Bcache size: 2 MB

Core Logic
Cchip            DECchip 21272-CA Rev 2
Dchip            DECchip 21272-DA Rev 2
Pchip 0          DECchip 21272-EA Rev 2
Pchip 1          DECchip 21272-EA Rev 2

MEMORY
Array #          Size      Base Addr
-----
  2              512 MB     000000000
  3              512 MB     020000000

Total Bad Pages = 0
Total Good Memory = 1024 Mbytes
PCI Hose 00
  Bus 00 Slot 05/0: Cypress 82C693      Bridge to Bus 1, ISA
  Bus 00 Slot 05/1: Cypress 82C693 IDE
                  dqa.0.0.105.0
                  dqa0.0.0.105.0 TOSHIBA CD-ROM XM-56
Bus 00 Slot 05/2: Cypress 82C693 IDE
                  dqb.0.1.205.0
  Bus 00 Slot 05/3: Cypress 82C693 USB
  Bus 00 Slot 06/0: Adaptec AIC-7895
                  pkb0.7.0.6.0      SCSI Bus ID 7
  Bus 00 Slot 06/1: Adaptec AIC-7895
                  pkc0.7.0.106.0     SCSI Bus ID 7
  Bus 00 Slot 08: DECchip 21040-AA
                  ewa0.0.0.8.0       08-00-2B-E2-9C-60
  Bus 00 Slot 09: DEC PowerStorm
PCI Hose 01
  Bus 00 Slot 07: QLogic ISP1020
                  pka0.7.0.7.1      SCSI Bus ID 7
                  dka0.0.0.7.1      RZ28D
                  dka100.1.0.7.1     SEAGATE ST32155W
                  dka200.2.0.7.1     RZ28D
                  dka400.4.0.7.1     PLEXTOR CD-ROM PX-12

ISA
Slot Device Name Type Enabled BaseAdd IRQ DMA
0
  0 MOUSE Embedded Yes 60 12
  1 KBD Embedded Yes 60 1
  2 COM1 Embedded Yes 3f8 4
  3 COM2 Embedded Yes 2f8 3
  4 LPT1 Embedded Yes 3bc 7
  5 FLOPPY Embedded Yes 3f0 6 2
P00>>>
```

## Displaying System Parameters

### 8.3.2 Displaying the Number of CPUs

The **show cpu** command displays the status of each CPU. The syntax is: *show cpu*.

**Figure 8–2 Example of Show CPU Command**

```
P00>>> show cpu

Primary CPU:      00
Active CPUs:      00    01
Configured CPUs: 00    01
SROM Revision:    X1.72  X1.72

P00>>>
```

### 8.3.3 Displaying System Devices

The **show device** command displays the status for devices and controllers in the system: SCSI and MSCP devices, the internal floppy drive, and the network. The syntax is: *show device [controller\_name]*, where [controller\_name] indicates the controller name or an abbreviation. When abbreviations or wildcards are used, all controllers that match the type are displayed. If no name is given, the display is a list of all devices and controllers in the system.

An example of a device name is **dka200.2.0.7.1**. Table 8–1 shows the interpretation of this device name.

**Table 8–1 Device Naming Convention**

| Category |                    | Description                                                                   |
|----------|--------------------|-------------------------------------------------------------------------------|
| dk       | Driver ID          | Two-letter designator of port or class driver.                                |
|          |                    | dk    SCSI disk                      fw    FDDI device                        |
|          |                    | dq    ATAPI CD-ROM                  mk    SCSI tape                           |
|          |                    | dr    RAID set device                mu    DSSI tape                          |
|          |                    | du    DSSI disk                      pk    SCSI port                          |
|          |                    | dv    Diskette drive                pu    DSSI port                           |
|          |                    | ew    Ethernet port                                                           |
| a        | Storage adapter ID | One-letter designator of storage adapter (a, b, c, ...).                      |
| 200      | Device unit number | Unique number (MSCP init number). SCSI unit numbers are forced 100 × node ID. |
| 2        | Bus node number    | Bus node ID.                                                                  |

## Displaying System Parameters

**Table 8–1 Device Naming Convention (Continued)**

| Category |                     | Description                     |
|----------|---------------------|---------------------------------|
| 0        | Channel number      | Used for multi-channel devices. |
| 7        | Logical slot number | Corresponds to PCI slot number. |
| 1        | Hose number         | 0 for PCI0, 1 for PCI1.         |

**Figure 8–3 Example of Show Device Command**

```
P00>>> show device

dka0.0.0.7.1      DKA0      RZ28D  0010
dka100.1.0.7.1    DKA100    SEAGATE ST32155W  0596
dka200.2.0.7.1    DKA200    RZ28D  0010
dka400.4.0.7.1    DKA400    PLEXTOR CD-ROM PX-12TS  1.02
dqa0.0.0.105.0    DQA0      TOSHIBA CD-ROM XM-5602B 1156
dva0.0.0.0.0      DVA0
ewa0.0.0.8.0      EWA0      08-00-2B-E2-9C-60
pka0.7.0.7.1      PKA0      SCSI Bus ID 7  5.54
pkb0.7.0.6.0      PKB0      SCSI Bus ID 7
pkc0.7.0.106.0    PKC0      SCSI Bus ID 7
P00>>>
```

### 8.3.4 Displaying the Memory Configuration

The **show memory** command displays information about each memory bank: array number, size in megabytes, and the starting address. The syntax is: *show memory*.

**Figure 8–4 Example of Show Memory Command**

```
P00>>> show memory

Array #      Size      Base Addr
-----
0           128 MB    000000000
1           128 MB    008000000
2           128 MB    010000000
3           128 MB    018000000

Total Bad Pages = 0
Total Good Memory = 512 MBytes
P00>>>
```

## Environment Variables

### 8.3.5 Displaying PALcode Revision Information

The **show pal** command displays the versions of Tru64 UNIX PALcode. PALcode is the Alpha Privileged Architecture Library code, written to support Alpha processors. It implements architecturally defined processor behavior. The syntax is: *show pal*. Figure 8–5 shows an example of the **show pal** command.

**Figure 8–5 Example of Show PAL Command**

```
P00>>> show pal

pal   Tru64 UNIX PALcode V1.27-31
P00>>>
```

### 8.3.6 Displaying Console Revision Information

The **show version** command displays the version of the SRM console program that is installed on the system. The syntax is: *show version*. Figure 8–6 shows an example of the **show version** command.

**Figure 8–6 Example of Show Version Command**

```
P00>>> show version

version                                     V5.3-1 JUL 20 1998 13:59:28
P00>>>
```

## 8.4 Environment Variables

Environment variables pass configuration information between the console and the operating system. Their settings determine how the system powers up, boots the operating system, and operates.

Environment variables are set or changed with the **set envvar** command. Their values are viewed with the **show envvar** command. Issue an **init** command to activate a new environment variable. Figure 8–7 shows an example of the **set envvar** and **show envvar** commands.

User-defined nonvolatile environment variables can be created with the **edit** command, described in Section 8.8. Section 8.4.1 describes the environment variables in detail.



## Environment Variables

**Figure 8–7 Example of Set Envar and Show Envar Commands**

```
P00>>> show console
console                graphics
P00>>> set console serial
P00>>> show console
console                serial
P00>>> init
```

### **set envar**

The **set** command sets or modifies the value of an environment variable. It can also be used to create a new environment variable if the name used is unique. Environment variables are used to pass configuration information between the console and the operating system. The setting of these variables determines how the system powers up, boots the operating system, and operates. The syntax is:

**set envar value**

|              |                                                     |
|--------------|-----------------------------------------------------|
| <i>envar</i> | The name of the environment variable to be modified |
| <i>value</i> | The new value of the environment variable           |

Whenever you modify the value of any of the following environment variables, the new value takes effect only after you reset the system by pressing the reset button or issuing the **initialize** command:

- console**
- kbd\_hardware\_type**
- language**
- os\_type**

### **show envar**

The **show envar** command displays the current value (or setting) of an environment variable. The syntax is:

**show envar**

|              |                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------|
| <i>envar</i> | The name of the environment variable to be displayed. The wildcard * displays all environment variables. |
|--------------|----------------------------------------------------------------------------------------------------------|

## Environment Variables

### 8.4.1 Environment Variable Summary

Environment variables are classified as either Alpha SRM console architecture-required or system-defined. Table 8–2 shows common Alpha SRM console architecture-required environment variables and their descriptions, and Table 8–3 shows common system-defined variables and their descriptions.

For a complete list, enter **show \*** at the Alpha SRM console prompt.

**Table 8–2 Architecture-Required Environment Variables**

| Variable            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>auto_action</b>  | When used with the <b>set</b> or <b>show</b> command, this variable modifies or displays the console action that follows an error, halt, or power-up. The action can be halt, boot, or restart. The default is halt.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>boot_osflags</b> | <p>When used with the <b>set</b> or <b>show</b> command, this variable modifies or displays the additional parameters to be passed to system software. The default is 0.</p> <p>The parameter choices are:</p> <ul style="list-style-type: none"><li><b>a</b> Load operating system software from the specified boot device (autoboot). Boot to multi-user mode.</li><li><b>i</b> Prompt for the name of file to load and other options (boot interactively). Boot to single-user mode.</li><li><b>s</b> Stop in single-user mode. Boots to single-user mode and stops at the <b>#</b> prompt.</li><li><b>D</b> Full dump; implies “s” as well. By default, if Tru64 UNIX crashes, it completes a partial memory dump.</li></ul> |
| <b>bootdef_dev</b>  | When used with the <b>set</b> or <b>show</b> command, this variable modifies or displays the default device or device list from which the system will attempt to boot. If the system software is preloaded, the variable is preset to point to the device containing the preloaded software. The default is null. To specify more than one device with the <b>set</b> command, separate the devices with commas.                                                                                                                                                                                                                                                                                                                 |

## Environment Variables

**Table 8–3 System-Defined Environment Variables**

| Variable                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>comx_baud</b>         | When used with the <b>set</b> command, this variable modifies the system baud rate to match that of the device connected to the port. The default is 9600.                                                                                                                                                                                                                                                                                                                                                              |
| <b>console</b>           | When used with the <b>set</b> command, this variable modifies the console output to either the serial port or the graphics controller.                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>cpu_enabled</b>       | When used with the <b>set</b> command, this variable sets a bit mask that enables or disables specific CPUs on a multiprocessor system. Bit 0 of the mask corresponds to CPU0 and bit 1 to CPU1. A 0 in the bit mask prevents the CPU from running; a 1 allows it to run. The bit mask is a hexadecimal value.                                                                                                                                                                                                          |
| <b>ewx0_mode</b>         | When used with the <b>set</b> command, this variable specifies whether the AUI, ThinWire, twisted-pair, or fast Ethernet ports will be enabled.                                                                                                                                                                                                                                                                                                                                                                         |
| <b>ewx0_protocols</b>    | <p>When used with the <b>set</b> command, this variable enables network protocols for booting and other functions.</p> <p>The parameter choices are:</p> <p><b>mop</b> Sets the network protocol to mop (Maintenance Operations Protocol) (default).</p> <p><b>bootp</b> Sets the network protocol to bootp, the setting typically used with Tru64 UNIX.</p> <p><b>bootp,mop</b> When both are listed, the system attempts to use mop, regardless of which is listed first. If unsuccessful, the system uses bootp.</p> |
| <b>kbd_hardware_type</b> | When used with the <b>set</b> command on systems with the language variant 3C (Français), this variable sets the keyboard hardware type as either PCXAL or LK411 and enables the system to interpret the terminal keyboard layout correctly. PCXAL is the default.                                                                                                                                                                                                                                                      |

Environment Variables

Table 8–3 System-Defined Environment Variables (Continued)

| Variable                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|------------------------------------|-------|--------------------------------------------|-----------------------|------------------------------|----------|-------------|------------|---------------|----------------------|----------|-----------------------|--------------|----------------------------|----------|------------|------------|-------------|------------------------|------------------------|--|
| <b>language</b> n          | <p>When used with the <b>set</b> command, this variable assigns language n to the system (where n is the option number of a language listed in the menu that follows).</p> <p>Use the following procedure to select the language:</p> <ol style="list-style-type: none"><li>At the Alpha SRM console prompt, enter the following commands:<br/>P00&gt;&gt;&gt; <u>set language 0</u><br/>P00&gt;&gt;&gt; <u>init</u></li></ol> <p>The following menu and prompt are displayed:</p> <table><tr><td>n Language</td><td>n Language</td></tr><tr><td colspan="2">=====</td></tr><tr><td>0 none (display menu)</td><td>40 Français (Suisse Romande)</td></tr><tr><td>30 Dansk</td><td>42 Italiano</td></tr><tr><td>32 Deutsch</td><td>44 Nederlands</td></tr><tr><td>34 Deutsch (Schweiz)</td><td>46 Norsk</td></tr><tr><td>36 English (American)</td><td>48 Portugues</td></tr><tr><td>38 English (British/Irish)</td><td>4A Suomi</td></tr><tr><td>3A Español</td><td>4C Svenska</td></tr><tr><td>3C Français</td><td>4E Belgisch-Nederlands</td></tr><tr><td>3E Français (Canadian)</td><td></td></tr></table> <p>(1..16):</p> <ol style="list-style-type: none"><li>Enter the number that corresponds to the language that you want to use. The following example shows how to assign the English (American) language to the system:<br/><br/>(1..16): <u>36</u></li></ol> <ol style="list-style-type: none"><li>When you receive a message to reset the system, power cycle the system.</li></ol> | n Language | n Language                         | ===== |                                            | 0 none (display menu) | 40 Français (Suisse Romande) | 30 Dansk | 42 Italiano | 32 Deutsch | 44 Nederlands | 34 Deutsch (Schweiz) | 46 Norsk | 36 English (American) | 48 Portugues | 38 English (British/Irish) | 4A Suomi | 3A Español | 4C Svenska | 3C Français | 4E Belgisch-Nederlands | 3E Français (Canadian) |  |
| n Language                 | n Language                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| =====                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 0 none (display menu)      | 40 Français (Suisse Romande)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 30 Dansk                   | 42 Italiano                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 32 Deutsch                 | 44 Nederlands                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 34 Deutsch (Schweiz)       | 46 Norsk                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 36 English (American)      | 48 Portugues                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 38 English (British/Irish) | 4A Suomi                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 3A Español                 | 4C Svenska                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 3C Français                | 4E Belgisch-Nederlands                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| 3E Français (Canadian)     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| <b>memory_test</b>         | <p>When used with the <b>set</b> command, this variable specifies the extent to which memory will be tested.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| <b>os_type</b>             | <p>When used with the <b>set</b> command, this variable specifies the default power-up operating system interface. The parameter options are:</p> <table><tr><td>nt</td><td>AlphaBIOS is the default firmware.</td></tr><tr><td>unix</td><td>Alpha SRM console is the default firmware.</td></tr></table>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | nt         | AlphaBIOS is the default firmware. | unix  | Alpha SRM console is the default firmware. |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| nt                         | AlphaBIOS is the default firmware.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |
| unix                       | Alpha SRM console is the default firmware.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |            |                                    |       |                                            |                       |                              |          |             |            |               |                      |          |                       |              |                            |          |            |            |             |                        |                        |  |

## Environment Variables

**Table 8–3 System-Defined Environment Variables (Continued)**

| Variable              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>pci_parity</b>     | When used with the <b>set</b> command, this variable controls PCI parity checking. The possible values are on or off (default).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>pkx0_fast</b>      | When used with the <b>set</b> command, this variable enables a fast SCSI device to perform in either standard or fast (default) mode. The parameter options are 0 (standard) or 1 (fast).                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>pkx0_host_id</b>   | When used with the <b>set</b> command, this variable allows you to change the SCSI bus controller device, which is, by default, bus node 7.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>pkx0_soft_term</b> | <p>When used with the <b>set</b> command, this variable enables/disables SCSI terminators. This command is used only when systems have the QLogic ISP1020 SCSI controller.</p> <p>The ISP1020 implements the 16-bit-wide SCSI bus and has two terminators: one for the low 8 bits, and one for the high 8 bits. The parameter options are:</p> <p>off    Disables termination of all 16 bits</p> <p>low    Enables low 8 bits termination and disables high 8 bits (default)</p> <p>high   Enables high 8 bits termination and disables low 8 bits</p> <p>on    Enables termination of all 16 bits</p> <p>diff   Places the bus in differential mode</p> |
| <b>tt_allow_login</b> | <p>When used with the <b>set</b> command and the environment variable console is set to serial (COM1 port), this variable enables/disables login to the SRM console firmware from alternate console ports. The parameter options are:</p> <p>0    Disables login through the COM2 port or a graphics monitor</p> <p>1    Enables login through the COM2 port or a graphics monitor (default)</p>                                                                                                                                                                                                                                                         |

## Initializing the System

### 8.5 Initializing the System

The **initialize** command resets the system and executes the power-up tests. Issuing this command is equivalent to pressing the Reset button. The syntax is *initialize* or *init*.

After self-tests are executed, the system autoboots unless one of the following conditions is true:

- A halt assertion condition exists (that is, the halt button has been pressed).
- The `auto_action` environment variable is set to halt.

If the `auto_action` environment variable is set to boot or restart and no halt assertion condition exists, the system autoboots. In all other cases, the system stops in console mode and does not attempt to boot.

Figure 8–8 shows an example of the **initialize** command.

**Figure 8–8 Example of Initialize Command**

```
P00>>> init

Initializing...
1024 Meg of system memory
probing hose 1, PCI
bus 0, slot 7 -- pka -- QLogic ISP1020
probing hose 0, PCI
probing PCI-to-ISA bridge, bus 1
bus 0, slot 5, function 1 -- dqa -- Cypress 82C693 IDE
bus 0, slot 5, function 2 -- dqb -- Cypress 82C693 IDE
bus 0, slot 6, function 0 -- pkb -- Adaptec AIC-7895
bus 0, slot 6, function 1 -- pkc -- Adaptec AIC-7895
bus 0, slot 8 -- ewa -- DECchip 21040-AA
bus 0, slot 9 -- vga -- DEC PowerStorm

AlphaPC 264 450 MHz Console X5.2-105, May 29 1998 17:03:22
P00>>>
```

### 8.6 Making the System Secure

Placing the console in secure mode ensures that unauthorized persons cannot gain access to the system. The commands for console security are **set password**, **clear password**, and **set secure**. The **login** command turns off security features during the current console session.

## Making the System Secure

### 8.6.1 Set Password Command

The **set password** command sets the console password for the first time or changes an existing password. It is necessary to set the password only if the system is going to operate in secure mode.

If a password has not been set and the **set password** command is issued, the console prompts for a password and verification. If a password has been set and the **set password** command is issued, the console prompts for the new password and verification, then prompts for the old password.

The password is unchanged if the validation password entered does not match the existing password in the NVRAM. The password length must be between 15 and 30 alphanumeric characters.

The syntax is *set password*.

Figure 8–9 shows some examples of the **set password** command.

#### Figure 8–9 Examples of Set Password Command

##### Example 1: Setting a Password for the First Time

```
P00>>> set_password
Please enter the password: *****
Please enter the password again: *****
P00>>>
```

**Note:**  
Passwords and validations  
are not echoed.

##### Example 2: Changing a Password

```
P00>>> set_password
Please enter the password: *****
Please enter the password again: *****
Now enter the old password: *****
P00>>>
```

##### Example 3: Setting a Password with Too Few Characters

```
P00>>> set_password
Please enter the password: *****
Password length must be between 15 and 30 characters
P00>>>
```

## Making the System Secure

### 8.6.2 Set Secure Command

The **set secure** command may be used after setting a password. It enables secure mode without requiring a restart of the console. If the password has been set, the console will be secured and only a small subset of commands can be performed. If a password has not been set, you are prompted to do so. The syntax is *set secure*.

#### Secure Mode Functions

When the console is in secure mode, the only commands recognized are **boot**, **login**, **continue**, and **start**.

- The **boot** command does not accept command-line parameters in secure mode. The console boots using the environment variables stored in NVRAM (boot\_file, bootdef\_dev, boot\_flags). After a successful boot, the console is secured if there is a valid password.
- The **start** and **continue** commands are valid on a secure console. After either command is executed, the console is secured if there is a valid password. This prevents an intruder from accessing the system.

Figure 8–10 shows some examples of the **set secure** command in various circumstances.

#### Figure 8–10 Examples of Set Secure Command

##### Example 1: Set Secure Before a Password Has Been Set

```
P00>>> set_secure
Secure not set. Please set the password.
P00>>>
```

##### Example 2: Set Secure After a Password Has Been Set

```
P00>>> set_secure
Console is secure. Please login.
P00>>> b_dkb0
Console is secure - parameters are not allowed.
P00>>> login
Please enter the password: *****
P00>>> b_dkb0
(boot dkb0.0.0.3.1)
.
.
.
```

**Note:**  
Passwords are not echoed.



## Making the System Secure

### 8.6.3 Login Command

The **login** command turns off the security features, enabling access to all SRM console commands during the current session. The system automatically returns to secure mode as soon as the **boot**, **continue**, or **start** command is entered or when the system is initialized.

When the **login** command is entered, the user is prompted for the current system password. If a password has not been set, a message is displayed indicating that there is no password in NVRAM. If a password has been set, this prompt is displayed:

Please enter the password:

If the password entered matches the password in NVRAM, when the prompt is redisplayed, the console is no longer in secure mode and all console commands can be performed. The syntax is *login*.

**Note:** If you enter the **login** command when a halt assertion exists, the command fails, even if you enter the correct password.

Figure 8–11 shows some examples of the **login** command in various circumstances.

#### Figure 8–11 Examples of Login Command

##### Example 1: Login Command With System Not in Secure Mode

```
P00>>> login
Secure not set. Please set the password.
P00>>>
```

##### Example 2: Login Command With System in Secure Mode

```
P00>>> login
Please enter the password: *****
P00>>>
```

**Note:**  
Passwords are not echoed.

##### Example 3: Login Command With Incorrect Password

```
P00>>> login
Please enter the password: *****
Invalid password
P00>>>
```

## Making the System Secure

### Forgotten Password

If you have forgotten the current password, perform the following steps to clear the password.

1. Enter the **login** command:

```
P00>>> login
Please enter the password:
```

2. At the enter password prompt, press the Halt button, then press Enter.

The password is now cleared and the console cannot be put into secure mode unless a new password is set.

### 8.6.4 Clear Password Command

The **clear password** command clears the password environment variable, setting it to zero. This command is used when you want access to all the SRM console commands, but the system is in secure mode. To use **clear password**, you must know the current password. The syntax is *clear password*.

To clear the password without knowing the current password, use the **login** command with the halt button, as described in Section 8.6.3.

Figure 8–12 shows examples of the **clear password** command.

#### Figure 8–12 Examples of Clear Password Command

##### Example 1: Clear Password Command

```
P00>>> clear password
Please enter the password: *****
Password successfully cleared.
P00>>>
```

**Note:**  
Passwords are not echoed.

##### Example 2: Clear Password Command With Incorrect Password

```
P00>>> clear password
Please enter the password: *****
Console is secure
P00>>>
```

## Examine and Deposit Commands

### 8.7 Examine and Deposit Commands

The **deposit** command stores data in a specified location. The **examine** command displays the contents of a memory location, a register, or a device.

#### **deposit**

The **deposit** command stores data in the location specified. If no options are given with a **deposit** command, the system uses the options from the preceding **deposit** command.

If the specified value is too large to fit in the data size listed, the console ignores the command and issues an error response. If the data is smaller than the data size, the higher order bits are filled with zeros.

The syntax is *deposit [qualifiers] address data*.

#### **examine**

The **examine** command displays the contents of a memory location, a register, or a device.

If no options are given with an **examine** command, the system uses the options from the preceding **examine** command. If conflicting address space or data sizes are specified, the console ignores the command and issues an error.

For data lengths longer than a longword, each longword of data should be separated by a space.

The syntax is *examine [qualifiers] address*.

Figure 8–13 shows examples of **deposit** commands, and Figure 8–14 shows examples of **examine** commands.

## Examine and Deposit Commands

**Figure 8–13 Examples of Deposit Command**

|                                          |                                                                                        |
|------------------------------------------|----------------------------------------------------------------------------------------|
| P00>>> <u>dep -b -n 1ff pmem:0 0</u>     | <b>Note:</b> Clear first 512 bytes of physical memory.                                 |
| P00>>> <u>d -l -n 3 vmem:1234 5</u>      | <b>Note:</b> Deposit 5 into four longwords starting at virtual memory address 1234.    |
| P00>>> <u>d -n 8 r0 ffffffff</u>         | <b>Note:</b> Load GPRs R0 through R8 with -1.                                          |
| P00>>> <u>d -l -n 10 -s 200 pmem:0 8</u> | <b>Note:</b> Deposit 8 in the first longword of the first 17 pages in physical memory. |
| P00>>> <u>d -l pmem:0 0</u>              | <b>Note:</b> Deposit 0 to physical memory address 0.                                   |
| P00>>> <u>d + ff</u>                     | <b>Note:</b> Deposit FF to physical memory address 4.                                  |
| P00>>> <u>d scbb 820000</u>              | <b>Note:</b> Deposit 820000 to SCBB.                                                   |

**Figure 8–14 Examples of Examine Command**

|                                                                                                                                                                                                                                                                      |                                                              |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| P00>>> <u>examine_pc</u><br>PC psr: 0 ( PC) 0000000000001170                                                                                                                                                                                                         | <b>Note:</b> Examine the program counter.                    |
| P00>>> <u>examine_sp</u><br>gpr: F0 ( R30) 000000000072A60                                                                                                                                                                                                           | <b>Note:</b> Examine the stack pointer.                      |
| P00>>> <u>e -n 6 r4</u><br>grp: 20 ( R4) 000000000005000<br>grp: 28 ( R5) 00000000FFFE000<br>grp: 30 ( R6) 00000003F8000C00<br>grp: 38 ( R7) 0000000053F761AE<br>grp: 40 ( R8) 0000010000000000<br>grp: 48 ( R9) 00000003F7800100<br>grp: 50 ( R10) 00000000000C7FFC | <b>Note:</b> Examine register R4 and the next six registers. |
| P00>>> <u>examine_pmem:400EC</u><br>pmem: 400EC A49D0078A47D0070                                                                                                                                                                                                     | <b>Note:</b> Examine physical memory.                        |

## Creating a Power-Up Script

### 8.8 Creating a Power-Up Script

The system comes with a special nonvolatile file named “nvram” that is stored in EEROM. Nvram is a user-created power-up script (set of commands) that is always invoked during the power-up sequence.

You can use the **edit** command to create the initial nvram script or modify an existing one. The script should include any commands you want the system to execute at power-up.

With **edit**, lines may be added, overwritten, or deleted. The syntax is *edit file*, where file is the name of the file to be edited.

The editing commands are:

|                 |                                                              |
|-----------------|--------------------------------------------------------------|
| <b>help</b>     | Displays the brief help file                                 |
| <b>list</b>     | Lists the current file prefixed with line numbers            |
| <b>renumber</b> | Renumbers the lines of the file in increments of 10          |
| <b>exit</b>     | Leaves the editor and closes the file, saving all changes    |
| <b>quit</b>     | Leaves the editor and closes the file without saving changes |
| <b>nn</b>       | Deletes line number nn                                       |
| <b>nn text</b>  | Adds or overwrites line number nn with text                  |

**Note:** It is possible to disable the system by editing the nvram script. For example, if you include the **initialize** command in the script, the system will go into an endless loop. To fix this, press the Halt button while the system is powering up. You can then edit the script to delete the offending command.

Figure 8–15 shows how to modify the user-created power-up script “nvram.” In this example, the script is edited to include a command that sets the Ethernet protocol for the network device, ewa0, to TCPIP/BOOTP.

## Starting and Stopping CPUs

**Figure 8–15 Example of Editing the nvram Script**

```
P00>>> edit nvram
editing 'nvram' 0 bytes read in
*10 set ewa0_protocols bootp
*list
10 set ewa0_protocols bootp
*exit
27 bytes written out to nvram
P00>>> nvram
```

**Note:** This command executes the script.

To clear the script, enter line numbers without any text. This deletes the lines. Figure 8–16 shows an example of this.

**Figure 8–16 Example of Clearing the nvram Script**

```
P00>>> edit nvram
editing 'nvram'
27 bytes read in
*10
*exit
0 bytes written out to nvram
P00>>>
```

## 8.9 Starting and Stopping CPUs

The **halt** and **continue** commands are used to stop and continue a program on the specified CPU.

The **halt** (or **stop**) command stops program execution on a secondary CPU that is still running a booted program. The syntax is *halt processor\_number* or *stop processor\_number* where *processor\_number* is the logical CPU number displayed by the **show cpu** command.

The **continue** command resumes program execution on the specified processor or on the primary processor if none is specified. The processor begins executing instructions at the address that is currently in the program counter (PC). The processor is not initialized.

The **continue** command is valid only if you have not disturbed the system state and if you halted the system by pressing the Halt button on the control panel. The syntax is *continue [&pn] [address]* where *&pn* specifies the processor (*n* is 0 or 1) and *address* provides the starting address of the program. Figure 8–17 gives an example of the **halt** and **continue** commands.

## Getting Help

**Figure 8–17 Example of Halt and Continue Commands**

```
P00>>> halt 1

halted CPU 1

halt code = 1
operator initiated halt
PC = ffffffff8007cc68
P00>>> continue &p1

continuing CPU 1
```

**Note:** Some console commands, for example, **boot**, can alter the machine state so that program mode cannot be successfully resumed (unless you include *-halt* in the **boot** command). If program mode cannot be resumed, reboot the operating system.

Other commands that alter machine state are **lfu**, **show device**, **show network**, **test**, and **start**.

## 8.10 Getting Help

The **help** (or **man**) command displays basic information about the use of console commands when the system is in console mode. The syntax is *help [command . . .]* where *command . . .* is the command or topic for which help is requested.

The options for *command . . .* are:

|                                          |                                                                       |
|------------------------------------------|-----------------------------------------------------------------------|
| <i>none</i>                              | Displays the complete list of commands for which you can receive help |
| <i>command_name</i>                      | Displays information about the <b>console</b> command                 |
| <i>argument_string</i><br>(such as “sh”) | Displays information about all commands that begin with that string   |

Figure 8–18 shows an example of a **help** command.

## Upgrading the System

**Figure 8–18 Example of Help Command**

```
P00>>> help_set
NAME
    set
FUNCTION
    Set an option or modify the value of an environment
    variable.
SYNOPSIS
    set <option> <value> or <envar> [-] <value>
        where
        <option>={host,mode}
        where
        <envar>={auto_action,bootdef_dev,boot_osflags,...}
        [-default]
```

### 8.11 Upgrading the System

The **Ifu** command is used to update firmware from the SRM console prompt. The **Ifu** command starts the Loadable Firmware Update (LFU) utility. The syntax is *Ifu*.

**Note:** If the system has been shut down from a booted program (most commonly, the operating system) or in some other way halted back to the SRM console, the system must be reset before running LFU.

Figure 8–19 shows an example of an **Ifu** command. See Section 6.5 for more information about LFU.



## Upgrading the System

**Figure 8–19 Example of Lfu Command**

```
P00>>>lfu
Checking dka400.4.0.7.1 for the option firmware files. . .
Checking dva0 for the option firmware files. . .

Option firmware files were not found on CD or floppy.
If you want to load the options firmware,
please enter the device on which the files are located(ewa0),
or just press <return> to proceed with a standard console update: dva0
Please enter the name of the options firmware files list, or
press <return> to use the default filename (pc264fw.txt) : pc264fw.txt
Copying pc264fw.txt from dva0. . .
Copying PC264NT.ROM from dva0. . .
Copying PC264SRM.ROM from dva0. . .

***** Loadable Firmware Update Utility *****
-----
Function      Description
-----
Display       Displays the system's configuration table.
Exit          Done exit LFU (reset).
List          Lists the device, revision, firmware name, and update revision.
Readme        Lists important release information.
Update        Replaces current firmware with loadable data image.
Verify        Compares loadable and hardware images.
? or Help     Scrolls this function table.
-----

UPD> list
Device          Current Revision  Filename          Update Revision
nt              5.68             nt_fw             5.68
srm             5.4-4            srm_fw            5.4-5
UPD> update *
Confirm update on:
nt
srm
[Y/(N)] y

WARNING: updates may take several minutes to complete for each device.

DO NOT ABORT!

nt              Updating to 5.68... Verifying 5.68... PASSED.
srm             Updating to 5.4-5... Verifying 5.4-5... PASSED.
UPD>
```

## Booting the Operating System

### 8.12 Booting the Operating System

The **boot** command is used to boot the operating system. It initializes the processor, loads a program image from the specified boot device, and transfers control to that image. The syntax is:

```
boot [-file filename] [-flags [value]] [-halt] [-protocols enet_protocol] [boot_dev]
```

The **boot** qualifiers and parameters can be the following:

|                                    |                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-file</b> filename              | The boot file.                                                                                                                                                                                                                                                                                                                                             |
| <b>-flags</b> [value]              | Specifies additional information to the loaded image or operating system. In Tru64 UNIX, specifies boot flags. This qualifier overrides the setting of the <i>boot_osflags</i> environment variable. See the <i>boot_osflags</i> environment variable (Section 8.4.1) for a list of settings and their meanings.                                           |
| <b>-halt</b>                       | Forces the bootstrap operation to halt and invoke the console program once the bootstrap image is loaded and page tables and other data structures are set up. Console device drivers are not shut down. Transfer control to the image by entering the <b>continue</b> command.                                                                            |
| <b>-protocols</b><br>enet_protocol | Either mop (default) or bootp. This qualifier overrides the setting of the <i>ew*0_protocols</i> environment variable.                                                                                                                                                                                                                                     |
| boot_dev                           | A device path or list of devices from which the console program attempts to boot, or a saved boot specification in the form of an environment variable. This qualifier overrides the setting of the <i>bootdef_dev</i> environment variable (see Section 8.4.1). Use the <i>bootdef_dev</i> environment variable to define the default boot device string. |

Figure 8–20 shows an example of a **boot** command.

## Booting the Operating System

**Figure 8–20 Example of Boot Command**

```
P00>>> boot
(boot dka0.0.0.9.1 -flags A)
block 0 of dka0.0.0.9.1 is a valid boot block
reading 16 blocks from dka0.0.0.9.1
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 2000
initializing HWRPB at 2000
initializing page table at 3ff78000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

Digital UNIX boot - Fri Nov 13 13:15:46 EST 1998

Loading vmunix ...
Loading at 0xfffffc0000230000
Current PAL Revision <0x2002b00010133>
Switching to OSF PALcode Succeeded
New PAL Revision <0x2002d0002012f>

Sizes:
text = 2981824
data = 452816
bss = 1341040
Starting at 0xfffffc00003ea0e0

Alpha boot: available memory from 0x1800000 to 0x3ff76000
Digital UNIX V4.0E (Rev. 1091); Thu Jan 21 16:53:01 EST 1999
physical memory = 1024.00 megabytes.
available memory = 999.47 megabytes.
using 3922 buffers containing 30.64 megabytes of memory
Firmware revision: 5.4-6787
PALcode: Digital UNIX version 1.47-45
AlphaPC 264DP 500 MHz
pci1 at nexus
tu0: DECchip 21140: Revision: 2.2
tu0: auto negotiation capable device
tu0 at pci1 slot 8
tu0: DEC TULIP (10/100) Ethernet Interface, hardware address: 00-00-F8-
1B-0B-24
tu0: auto negotiation off: selecting 100BaseTX (UTP) port: half duplex
isp0 at pci1 slot 9
isp0: QLOGIC ISP1040B/V2
isp0: Firmware revision 5.57 (loaded by console)
isp0: Fast RAM timing enabled.
scsi0 at isp0 slot 0
rz0 at scsi0 target 0 lun 0 (LID=0) (DEC      RZ28D      (C) DEC 0010)
(Wide16)
rz1 at scsi0 target 1 lun 0 (LID=1) (SEAGATE ST34520W      1281)
(Wide16)
```

## Booting the Operating System

```
rz2 at scsi0 target 2 lun 0 (LID=2) (DEC      RZ28D      (C) DEC 0010)
(Wide16)
gpc0 at isa0
pci0 at nexus
ace0 at isa0
ace1 at isa0
lp0 at isa0
fdi0 at isa0
fd0 at fdi0 unit 0
ata0 at pci0 slot 105
ata0: Cypress 82C693
scsi1 at ata0 slot 0
rz8 at scsi1 target 0 lun 0 (LID=3) (TOSHIBA CD-ROM XM-5602B  1156)
ata1 at pci0 slot 205
ata1: Cypress 82C693
scsi2 at ata1 slot 0
tga0 at pci0 slot 7
tga0: depth 8, map size 2MB, 1024x768
tga0: ZLXp2-E, Revision: 34
itpsa0 at pci0 slot 9
IntraServer ROM Version V1.0 (c)1998
scsi3 at itpsa0 slot 0
rz28 at scsi3 target 4 lun 0 (LID=4) (PLEXTOR CD-ROM PX-12TS  1.02)
Created FRU table binary error log packet
kernel console: ace0
dli: configured
Checking local filesystems
/sbin/ufs_fsck -p
/dev/rrz0a: 1557 files, 65618 used, 63229 free (421 frags, 7851 blocks,
0.3% fragmentation)
/dev/rrz0g: File system unmounted cleanly - no fsck needed
/dev/rrz0h: File system unmounted cleanly - no fsck needed
Mounting / (root)
user_cfg_pt: reconfigured
Mounting local filesystems
/dev/rz0a on / type ufs (rw)
/proc on /proc type procfs (rw)
/dev/rz0g on /usr type ufs (rw)
/dev/rz0h on /var type ufs (rw)
Subsystem xx was successfully configured.
Feb 12 13:40:22 update: started
The system is coming up. Please wait...
Checking for crash dumps
Initializing paging space
swapon: added /dev/rz0b as swap device.
swapon: added /dev/rz1c as swap device.
Mounting Memory filesystems
```

## Booting the Operating System

```
Streams autopushes configured
Configuring network
hostname: ebfw04.hlo.dec.com
Loading LMF licenses
System error logger started
Binary error logger started
route daemon started
Setting kernel timezone variable
Setting the current time and date with ntpdate
ONC portmap service started
NFS IO service started
Mounting NFS filesystems
Preserving editor files
security configuration set to default (BASE).
Successful SIA initialization

Clearing temporary files
Unlocking ptys
SMTP Mail Service started.
Network Time Service started
Extensible SNMP master agent started
Base O/S sub-agent started
Server System sub-agent started
Server Management sub-agent started
Environmental Monitoring Subsystem Configured.
Internet services provided.
Using snmp service entry port 161.
Cron service started
SuperLAT. Copyright 1994 Meridian Technology Corp. All rights reserved.
LAT started.
Printer service started
The system is ready.

Digital UNIX Version V4.0 (ebfw04.hlo.dec.com) console

login:
```

## Installing the Tru64 UNIX Operating System

### 8.13 Installing the Tru64 UNIX Operating System

**Note:** Tru64 UNIX Version 4.0E is the minimum revision required for the AlphaPC 264DP mainboard system.

This section supplements the *DIGITAL UNIX Installation Guide* for installing the Tru64 UNIX operating system on an AlphaPC 264DP mainboard system.

**Note:** If you already have a previous version of Tru64 UNIX installed, see the *DIGITAL UNIX Installation Guide* for information on how to upgrade to a new version of the operating system. Be sure to also review the preinstallation tasks in this document.

#### 8.13.1 Requirements

You need the following hardware and software to install the Tru64 UNIX operating system on an AlphaPC 264DP mainboard system:

- A minimum of 32MB of main memory; 64MB is recommended
- A 1GB (or larger) SCSI hard disk capable of storing the supported software subsets
- Supported load devices
  - SCSI CD-ROM drive capable of reliably reading in 512-byte block mode
  - or
  - A network interface
- A console terminal with ASCII capability or a supported graphics display console
- Tru64 UNIX Version 4.0E or higher Operating System Volume 1 compact disc
- Alpha SRM console Version 5.4 or higher

This chapter contains information about troubleshooting hardware and software during AlphaPC 264DP startup.

## 9.1 Password Bypass

### AlphaBIOS

AlphaBIOS provides password protection. However, password bypass is provided for system setup or startup when the AlphaBIOS password is unavailable.

Normal operation, with switch 8 (pby) of SW2 in the off position (see Figure 3–1), requires a password. When the password bypass function is enabled (moving switch 8 to the on position), it disables the AlphaBIOS password verification and enables the user to set up or start up their system without the AlphaBIOS password.

Password bypass also clears the password.

After this function has been enabled, to disable it and require a password, set switch 8 to the off position.

### Alpha SRM Console

Once the console has been put into secure mode, the Alpha SRM console requires a password to perform certain functions.

If the console is in secure mode and you have forgotten the current password, perform the following steps to clear the password:

1. Enter the login command.
2. At the **Enter Password** prompt, press the Halt button, then press Enter.

The password is now cleared and the console cannot be put into secure mode unless a new password is set.

## Hardware Startup

### 9.2 Hardware Startup

Use the following troubleshooting steps if video is not working on your system. If you still have no video after reviewing these steps, please call your system vendor.

#### Troubleshooting Steps: No Video

1. Check the connection to the ac outlet.
2. Check the voltage setting on the power supply (115 V ac in the U.S.).
3. Check that the frequency/switch selection matches the speed of the Alpha chip.
4. Check that the CPU fan is connected and spinning.
5. Ensure that the flash ROM update procedure was performed correctly. If you have a terminal attached to COM1, check the output for error messages after verifying that the flash ROM update procedure was performed correctly.
6. Reseat the video card and ensure that it is connected to the monitor.
7. Reseat the DIMMs.
8. Replace the DIMMs.

### 9.3 Daughtercard LEDs

There are five LEDs located on the daughtercard to show the status of functions on the daughtercard. Table 9–1 shows the meaning of the LEDs.

**Table 9–1 AlphaPC 264DP Daughtercard LEDs**

| LED | Function      | Comments                                                                                                        |
|-----|---------------|-----------------------------------------------------------------------------------------------------------------|
| D1  | CPU self-test | Becomes asserted at completion of built-in self-test (BIST). If it does not assert, self-test did not complete. |
| D2  | dc_ok         | Asserted by the reset FPGA when it senses dc power.                                                             |
| D3  | srom_clk      | Fast flash (appears on but dim) while SROM is being loaded.                                                     |
| D4  | 2v_dcok       | Asserted while 2 V to the CPU is present.                                                                       |
| D5  | 5v_dcok       | Asserted while 5 V to the CPU is present.                                                                       |



## Beep Codes

### 9.4 Beep Codes

The beep codes provide error information about the AlphaPC 264DP system. Table 9–2 lists and describes the beep codes.

**Table 9–2 Beep Codes**

| Beep Code          | Description                                            |
|--------------------|--------------------------------------------------------|
| 1–2–3 <sup>1</sup> | This sequence represents the fail-safe booter startup. |
| 4                  | No valid header found in ROM; loading entire ROM.      |
| 6                  | Memory error detected.                                 |

<sup>1</sup> One beep and a pause, followed by two beeps and a pause, followed by three beeps.

### 9.5 Post Codes

The post codes indicate the progress of the SROM and AlphaBIOS firmware. Table 9–3 lists and describes the post codes.

**Note:** The post codes are visible on an ISA-based postcard that displays codes written to ISA port 80.

**Table 9–3 Post Codes**

| Source    | Post Code (hex) | Description                                                                                 |
|-----------|-----------------|---------------------------------------------------------------------------------------------|
| SROM      | 20              | Firmware initialization is complete.                                                        |
|           | 01              | CPU speed detected; initialize southbridge.                                                 |
|           | 02              | Southbridge ready.                                                                          |
|           | 03              | Initialize Bcache.                                                                          |
|           | 05              | Start sweep of Bcache and memory.                                                           |
|           | 06              | Bcache and memory ready.                                                                    |
|           | 14              | Load system code.                                                                           |
|           | 15              | Loading uncompressed firmware into memory.                                                  |
|           | 16              | Loading compressed firmware into memory.                                                    |
|           | 17              | Jump to loaded firmware.                                                                    |
|           | 3F              | Fatal error. Second code identifies source of error:<br>06 = No memory found or bad memory. |
| AlphaBIOS | 98              | Firmware has control.                                                                       |
|           | 97              | Buses initialized.                                                                          |

## Fail-Safe Booter

**Table 9–3 Post Codes (Continued)**

| Source              | Post Code<br>(hex) | Description                                           |
|---------------------|--------------------|-------------------------------------------------------|
| Fail-safe<br>booter | 95                 | Video console opened.                                 |
|                     | 51                 | FATAL - returned from boot menu selection.            |
|                     | 50                 | FATAL - firmware fatal error.                         |
|                     | 42                 | Firmware drivers have been started.                   |
|                     | 00                 | Firmware has been initialized.                        |
|                     | FD                 | I/O bus initialization.                               |
|                     | FC                 | I/O initialization complete.                          |
|                     | FB                 | UART initialization.                                  |
|                     | BF                 | Fail-safe booter is scanning the diskette.            |
|                     | 1                  | Fail-safe booter is loading the Windows NT AlphaBIOS. |
|                     | 2                  | Fail-safe booter is loading the Debug Monitor.        |
|                     | 3                  | Fail-safe booter is loading the SRM console.          |
|                     | 4                  | Fail-safe booter is loading the Linux mini-loader.    |

## 9.6 Fail-Safe Booter

The Fail-Safe Booter (FSB) utility provides an emergency recovery mechanism when the firmware image contained in flash memory has been corrupted. You can run the FSB and boot another image from a diskette that is capable of reprogramming the flash ROM. Refer to Section 6.3.

## Windows NT Startup

### 9.7 Windows NT Startup

While booting the Windows NT operating system, you may receive one of the following error messages:

- The required system file DISPLAY\_DRIVER.DLL is bad or missing.
- The required system file DISPLAY\_DRIVER.SYS is bad or missing.

These error messages indicate video driver problems. Use the following chart to solve common video driver problems.

| If the...                                                                         | Then...                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Driver becomes disabled                                                           | Boot the Windows NT operating system with the last known good configuration.                                                                                                                   |
| Incorrect video driver is chosen while installing the Windows NT operating system | Reinstall the Windows NT operating system with the correct driver.                                                                                                                             |
| New video card was installed before the driver was installed                      | Reinstall the old video card, boot the Windows NT operating system, and install the driver for the new video card. Then install the new video card and reboot the Windows NT operating system. |



# A

---

## Support, Products, and Documentation

### A.1 Customer Support

Alpha OEM provides the following web page resources for customer support.

| URL                                                                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="http://www.digital.com/alphaoem">http://www.digital.com/alphaoem</a> | Contains the following links: <ul style="list-style-type: none"><li>• <b>Developers' Area:</b> Development tools, code examples, driver developers' information, and technical white papers</li><li>• <b>Motherboard Products:</b> Motherboard details and performance information</li><li>• <b>Microprocessor Products:</b> Microprocessor details and performance information</li><li>• <b>News:</b> Press releases</li><li>• <b>Technical Information:</b> Motherboard firmware and drivers, hardware compatibility lists, and product documentation library</li><li>• <b>Customer Support:</b> Feedback form</li></ul> |

---

## Supporting Products

### A.2 Supporting Products

This section lists sources for components and accessories that are not included with the AlphaPC 264DP.

#### A.2.1 Memory

Dual inline memory modules (DIMMs) are available from a variety of vendors. For a list of the qualified vendors, visit the Alpha OEM World Wide Web Internet site at URL:

**<http://www.digital.com/alphaoem>**

Click on **Technical Information**.

Then click on **Alpha OEM Hardware Compatibility List**.

#### A.2.2 Power Supply

A power supply, suitable for use with the AlphaPC 264DP (+3.3 V, +5 V, –5 V, +12 V, –12 V), is available from:

**Antec, Inc.**

2859 Bayview Drive  
Fremont, CA 94538  
Phone: 510-770-1200, ext. 312  
PN PRS-618 (630 W)

#### A.2.3 Enclosure

An enclosure, suitable for housing the AlphaPC 264DP and its power supply, is available from:

**Delta Axxion Technology**

1550 Northwestern  
El Paso, TX 79912  
Phone: 915-877-5288  
PN TL-22

## Associated Documentation

### A.3 Associated Documentation

You can order the following associated documentation directly from the vendor.

| Title                                                                                                                                                                                                                      | Vendor                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Alpha Architecture Reference Manual<br>EY-W938E-DP                                                                                                                                                                         | Call your sales office or call<br>Butterworth-Heinemann (DIGITAL<br>Press) at 1-800-366-2665.                              |
| Alpha Architecture Handbook<br>EC-QD2KB-TE                                                                                                                                                                                 | Order online:<br><a href="http://www.digital.com/alphaoem">http://www.digital.com/alphaoem</a>                             |
| Alpha 21264 Microprocessor Hardware Specification<br>DS-0013C-TE                                                                                                                                                           | See previous entry                                                                                                         |
| PCI Local Bus Specification, Revision 2.1<br>PCI Multimedia Design Guide, Revision 1.0<br>PCI System Design Guide<br>PCI-to-PCI Bridge Architecture Specification,<br>Revision 1.0<br>PCI BIOS Specification, Revision 2.1 | PCI Special Interest Group<br>U.S. 1-800-433-5177<br>International 1-503-797-4207<br>Fax 1-503-234-6762                    |
| CY82C693UB hyperCache/Stand-Alone PCI Periph-<br>eral Controller with USB Data Sheet                                                                                                                                       | Cypress Semiconductor Corp.<br>3901 North First Street<br>San Jose, CA 95134<br>Phone: 1-800-858-1810                      |
| Super I/O Floppy Disk Controller with Infrared Sup-<br>port (FDC37C669) Data Sheet                                                                                                                                         | Standard Microsystems Corporation<br>80 Arkay Drive<br>Hauppauge, NY 11788<br>Phone: 1-800-443-7364<br>Fax: 1-516-231-6004 |

