

INDEX

- A, 24, (SYSTEM REF.)
- A+1, 24, (SYSTEM REF.)
- Absolute address, 360, (MONITOR CALLS)
- Absolute address mode, 205, 277, (MACRO)
- Absolute binary programs, 288, (MACRO)
- Absolute symbols, 695, (LINK-10)
- AC, 24, (SYSTEM REF.)
- Access block, 559, 642, (MONITOR CALLS)
- Access protection, 554, (MONITOR CALLS)
- Access time, 13, (SYSTEM REF.)
- Accumulators, 360, (MONITOR CALLS)
- Accumulators, 7, (SYSTEM REF.)
- Action switches, (LINK-10)
 - Delayed, 684, 695, 700, 708, 713, 717, 720, 726, 730, 731, 741, 743, 745, 748, 749, 755, 762, 765, 771
 - Immediate, 693, 697, 698, 703, 706, 718, 735, 739, 746, 754, 769
- ACTIVATE UO, 378, (MONITOR CALLS)
- Active search list, 562, (MONITOR CALLS)
- Active swapping list, 607, (MONITOR CALLS)
- ADD, 49, (SYSTEM REF.)
- Address assignments, 223, (MACRO)
- Address break, 102, (SYSTEM REF.)
- Addressing, 7, (SYSTEM REF.)
- Addressing by monitor, 550, (MONITOR CALLS)
- Address, (LINK-10)
 - ignoring start, 738
 - specifying start, 758
 - start, 666, 677, 689, 713, 738, 758
- Address mapping, 361, (MONITOR CALLS)
- Address mode, relocatable or absolute, 227, (MACRO)
- Addresses, symbolic, 212, (MACRO)
 - elements, 280
 - operands, 212
 - operators, 211
- ALGLIB, 740, (LINK-10)
- Algorithms, switch, 679, (LINK-10)
- Algorithms, 605, (MONITOR CALLS)
- Algorithms, 179, (SYSTEM REF.)
 - fixed point, 150
 - addition, 150
 - division, 183
 - multiplication, 181
 - subtraction, 181
- Algorithms, (Cont.)
 - floating point, 185
 - addition, 186
 - division, 188
 - double precision division, 190
 - multiplication, 188
 - scaling, 188
 - subtracting, 186
- Allocating COMMON, 692, (LINK-10)
- Allocating core, 360, 401, (MONITOR CALLS)
- Allocating disk space, 709, (LINK-10)
- Allocating patching space, 744, (LINK-10)
- Altering a monitor location, 417, (MONITOR CALLS)
- AND, 42, (SYSTEM REF.)
- ANDCA, 42, (SYSTEM REF.)
- ANDCB, 43, (SYSTEM REF.)
- ANDCM, 42, (SYSTEM REF.)
- Angle brackets (<>), 213, 261, 266, 327, (MACRO)
 - coding, 252
- AOBJN, 63, (SYSTEM REF.)
- AOBJP, 63, (SYSTEM REF.)
- AOJ, 66, (SYSTEM REF.)
- AOS, 67, (SYSTEM REF.)
- Appending a file, 586, (MONITOR CALLS)
- APR, 95, 101, 105, (SYSTEM REF.)
- APRENB UO, 373, 387, (MONITOR CALLS)
- APR trapping, 387, (MONITOR CALLS)
- AR, 6, (SYSTEM REF.)
- Area, (LINK-10)
 - COMMON, 692
 - DSK disk, 667
 - NEW disk, 667
 - OLD disk, 667
 - SYS disk, 667
 - expanding, 716
- Arithmetic operations, 219, (MACRO)
- Arithmetic shifting, 53, 163, (SYSTEM REF.)
- Arithmetic testing, 63, 163, (SYSTEM REF.)
- Arranging symbol table, 765, (LINK-10)
- ARRAY pseudo-op, 242, (MACRO)
- AS, 5, (SYSTEM REF.)
- ASCII, 6-bit, 240, (MACRO)
- ASCII, 7-bit, 240, (MACRO)
- ASCII interpretation, 268, (MACRO)
- ASCII card codes, 627, (MONITOR CALLS)
- ASCII statement, 240, (MACRO)
- ASCIIZ statement, 240, (MACRO)
- ASH, 53, (SYSTEM REF.)
- ASHC, 54, (SYSTEM REF.)
- Assembler control statements, 253, (MACRO)
- Assembler interpretation, 327, (MACRO)
- Assembler, MACRO, 205, (MACRO)

- Assembly, 900, (DDT)
- Assembly listing, 205, 283, (MACRO)
- Assigning values, 705, (LINK-10)
- Assignment delay, 652, (LINK-10)
- Assignment statements, direct, 215, (MACRO)
- Assignments, 215, (MACRO)
- Assignments, address, 223, (MACRO)
- ASUPPRESS pseudo-op, 248, (MACRO)
- ATTACH UUO, 379, (MONITOR CALLS)
- @(at) character, 207, 224, (MACRO)
- Automatically, Using LINK-10, 656, 659, (LINK-10)
- Auxiliary output, 651, 654, (LINK-10)

- B (binary radix), 218, (MACRO)
- Back Slash (\), 268, 328, (MACRO)
- /BACKSPACE, 686, 691, (LINK-10)
- Backspacing tapes, 691, (LINK-10)
- Bad address subtable, 439 (MONITOR CALLS)
- Bad allocation table, 612 (MONITOR CALLS)
- BCD (binary coded decimal) code, 639, (MONITOR CALLS)
- Binary files, 651, (LINK-10)
- Binary files, loading, 360, (MONITOR CALLS)
- Binary program output, 284, 285, (MACRO)
- Binary shifting, 221, (MACRO)
- Binary value interpretation, 903, (DDT)
- Bit assignments, in-out, 195, (SYSTEM REF.)
- Blank character, 331, (MACRO)
- Blank COMMON, 692, (LINK-10)
- Blank field, 233, (MACRO)
- BLIST, 36, (SYSTEM REF.)
- BLKI, 92, (SYSTEM REF.)
- BLKO, 92, (SYSTEM REF.)
- Block 10, 92, (SYSTEM REF.)
- Block allocation, DECTape, 540, (MONITOR CALLS)
- Block mode, 444, (MONITOR CALLS)
- BLOCK statements, 243, (MACRO)
- Block transfer, 32, (SYSTEM REF.)
- Block transfer instructions, 239, (MACRO)
- Block types, 290, 291, 292, (MACRO)
- BLT, 32, (SYSTEM REF.)
- Boolean functions, 39, 159, (SYSTEM REF.)
- BR, 7, (SYSTEM REF.)
- Brackets, angle, see angle brackets
- Breakpoints, 874, 891, 911, (DDT)
 - checking status, 893, 912
 - conditional, 893, 912
 - proceeding from, 876, 892, 894, 912
- Breakpoints (Cont.)
 - reassigning and removing, 876, 891, 912
 - restrictions, 875, 892
 - setting, 875, 891, 911
 - type outs, 875, 907, 909
- Buffer, 466, (MONITOR CALLS)
- Buffered data mode, 465, 476, (MONITOR CALLS)
- Buffer header, 465, (MONITOR CALLS)
- Buffer initialization, 468, (MONITOR CALLS)
- Buffer ring, 467, (MONITOR CALLS)
- Buffer ring header block, 466, (MONITOR CALLS)
- Busy, 93, (SYSTEM REF.)
- Byte interrupt, 77, (SYSTEM REF.)
- Byte manipulation, 37, 160, (SYSTEM REF.)
- Byte manipulation, 237, 238, (MACRO)
- Byte pointer, 37, (SYSTEM REF.)
- Byte pointer, 225, (MACRO)

- CAI, 64, (SYSTEM REF.)
- CALL and CALLI operations, 371, (MONITOR CALLS)
 - table of, 372
- CAM, 65, (SYSTEM REF.)
- Card codes, 627, (MONITOR CALLS)
- Card codes, 172, (SYSTEM REF.)
- Card punch, 494, (MONITOR CALLS)
- Card reader, 496, (MONITOR CALLS)
- Carries, 48, (SYSTEM REF.)
- Carriage return, 332, (MACRO)
- Carry 0, 77, (SYSTEM REF.)
- Carry 1, 77, (SYSTEM REF.)
- CDB constants table, 433 (MONITOR CALLS)
- CDB variables table, 434, (MONITOR CALLS)
- Central processor specification, 700, (LINK-10)
- Central processor flags, 387, (MONITOR CALLS)
- Change of unit pointer, 642, (MONITOR CALLS)
- Changing defaults, 678, 703, (LINK-10)
- Changing local radix, 235 (MACRO)
- Changing magnetic tape modes, 509, (MONITOR CALLS)
- Changing switches, (LINK-10)
 - status, 684
- Changing the logical station, 412, (MONITOR CALLS)
- Channel command chaining, 611, (MONITOR CALLS)
- Channel interrupt routines, 613, (MONITOR CALLS)
- Character handling, 327, (MACRO)
- Character set, radix 50, 210, (MACRO)

- Characters, summary of special, 315 through 3-17, (MACRO)
- Checking file access, 588, (MONITOR CALLS)
- CHGPPN UVO, 378, (MONITOR CALLS)
- CHKACC UVO, 379, 588, (MONITOR CALLS)
- +C intercept, 389, (MONITOR CALLS)
- CLEAR, 30, (SYSTEM REF.)
- Clearing DECTapes, 774, (LINK-10)
- Clearing directory, 774, (LINK-10)
- Clearing initial symbol table, 734, (LINK-10)
- Clearing the write-protect bit, 403, (MONITOR CALLS)
- CLK, 113, (SYSTEM REF.)
- Clock, (SYSTEM REF.)
 - flag, 102
 - line frequency, 102
 - real time DK10, 113
 - operation, 116
- CLOCK function, 443, (MONITOR CALLS)
- CLOSE UVO, 371, 481, (MONITOR CALLS)
- Cluster count, 641, (MONITOR CALLS)
- Clusters, 550, 607, (MONITOR CALLS)
- COBDDT, 701 (LINK-10)
- COBOL programs, (LINK-10)
 - loading, 803, 805
- Code, (LINK-10)
 - impure, 753
 - pure, 753
 - relocatable, 651
- Colon, double (::), 246 (MACRO)
- Colon (:) as label terminator 210, 246, (MACRO)
- .COMM., 692, (LINK-10)
- Comma usage, 328, (MACRO)
- Commands, (LINK-10)
 - COMPIL-class, 656
 - DEBUG, 656, 660
 - EXECUTE, 654, 656, 660
 - GET, 654, 748
 - LOAD, 656, 659
 - R LINK, 656, 657, 675
 - RUN, 654
 - SAVE, 659, 668
 - SSAVE, 659, 668
 - START, 654, 659
- Command file, 404 (MONITOR CALLS)
- Command format, (LINK-10)
 - COMPIL-class, 660
- Command strings, 676, 681, (LINK-10)
- Comment, 208, 213, (MACRO)
- Comments, 675 (LINK-10)
- COMMENT statement, 251, (MACRO)
- /COMMON, 686, 692, (LINK-10)
- COMMON, (LINK-10)
 - allocating, 692
 - blank, 692
- COMMON area, 692, (LINK-10)
- COMMON symbols, 695, (LINK-10)
- Comparing files, (UTILITY)
 - FILCOM, 931
- Comparison of disk-like devices, 637, (MONITOR CALLS)
- COMPIL program, 656, (LINK-10)
- /COMPIL switch, 257, (MACRO)
- COMPIL switches, 662, 664, (LINK-10)
- COMPIL-class command, 656, (LINK-10)
 - format, 660
- Complement, 8, (SYSTEM REF.)
- Compressed file pointer, 552, (MONITOR CALLS)
- Concatenation, 263, 329, (MACRO)
- Conditional assembly, 252, (MACRO)
- Conditional break instruction, 894, 912, (DDT)
- Conditions in, 93, (SYSTEM REF.)
 - see status
- Conditions out, 93, (SYSTEM REF.)
 - clock, 114
 - interrupt, 98
 - processor, 98
- Configuration information, (MONITOR CALLS)
 - LIGHTS, 442
 - SWITCH, 442
- Configuration table, 423, (MONITOR CALLS)
- CONI, 89, (SYSTEM REF.)
- CONO, 90, (SYSTEM REF.)
- CONSO, 92, (SYSTEM REF.)
- Console, 95, (SYSTEM REF.)
- Console operator panel, 106, (SYSTEM REF.)
- Constants table, 433, (MONITOR CALLS)
- CONSZ, 91, (SYSTEM REF.)
- /CONTENTS, 687, 694, (LINK-10)
- Contents of map file, 694, (LINK-10)
- Continuation lines, 675, 681, (LINK-10)
- Continued MFD, 551, (MONITOR CALLS)
- Continued SFD, 552, (MONITOR CALLS)
- Continued UFD, 552, (MONITOR CALLS)
- Control left arrow (CTRL+), 209 (MACRO)
- /CORE, 687, 697, (LINK-10)
- Core, (LINK-10)
 - free, 716
- Core allocation resource, 397, (MONITOR CALLS)
- Core allocation unit, 360, (MONITOR CALLS)
- Core control, 393, (MONITOR CALLS)
 - CORE, 401
 - definitions, 393
 - LOCK, 394
 - SETUWP, 403
 - UNLOK., 397
- Core image, 654, 659, 668, 750, 757, (LINK-10)
- Core image file, (LINK-10)
 - expanded, 690, 772
- Core memory, 652, (LINK-10)

- Core storage, 360, (MONITOR CALLS)
- CORE UUO, 372, 401, (MONITOR CALLS)
- CORMAX, 394, (MONITOR CALLS)
- CORMAX, 716, (LINK-10)
- CORMIN, 393, (MONITOR CALLS)
- /COUNTER, 687, 698, (LINK-10)
- Counters, Relocation, 686, 689, 698, 754, (LINK-10)
- CPA, 101, (SYSTEM REF.)
- /CPU, 687, 700, (LINK-10)
- Created symbols, 262, (MACRO)
- Creating a file, 563, (MONITOR CALLS)
- Creating a saved file, 805, (LINK-10)
- Creating XPN file, 772, (LINK-10)
- CREF command, 928, (UTILITY)
- CREF program, 925, (UTILITY)
- Cross-referenced listings (UTILITY)
 - CREF, 925
 - GLOB, 951
- CTLJOB UUO, 378, 520, (MONITOR CALLS)

- D (decimal radix), 218, (MACRO)
- /D, 687, (LINK-10)
- DAEFIN UUO, 379, (MONITOR CALLS)
- DAEMON UUO, 379, 442, (MONITOR CALLS)
- /DATA, 687, (LINK-10)
- Data channel, 463, (MONITOR CALLS)
- Data error, 612, (MONITOR CALLS)
- DATAI, 91, (SYSTEM REF.)
- DATAO, 91, (SYSTEM REF.)
- Data modes, 464, (MONITOR CALLS)
 - card punch, 494
 - card reader, 497
 - DEctape, 536
 - disk, 549
 - display, 499
 - line printer, 502
 - magnetic tape, 503
 - paper-tape punch, 512
 - paper-tape reader, 513
 - plotter, 515
 - terminal, 522
- Data transmission, 474, (MONITOR CALLS)
- DATE UUO, 373, 415, (MONITOR CALLS)
- .DCORE function, 442, (MONITOR CALLS)
- DDT, 660, 664, 701, (LINK-10)
- /DDT, 664, (LINK-10)
- DDTGT UUO, 372, (MONITOR CALLS)
- DDTIN UUO, 372, 525, (MONITOR CALLS)
- DDTOUT UUO, 372, 525, (MONITOR CALLS)
- DDTRL UUO, 372, (MONITOR CALLS)
- DDT submode, 524, (MONITOR CALLS)
- DEACTIVATE UUO, 378, (MONITOR CALLS)
- Dead reckoning, 548, (MONITOR CALLS)
- /DEBUG, 684, 687, 701, (LINK-10)
- DEBUG command, 656, 660, (LINK-10)
- Debugging, 654, 722, 723, 727, (LINK-10)
- Debugging program, 660, 686, 690, (LINK-10)
 - loading a, 701, 766
- DEC statement, 234, (MACRO)
- Decimal numbers, (MACRO)
 - fixed point, 222
 - floating point, 222
- Decimal print routine, 87, (SYSTEM REF.)
- DECsystem-1040, 368, (MONITOR CALLS)
- DEctape, 536, (MONITOR CALLS)
 - block allocation, 540
 - directory format, 537
 - file format, 539
 - format, 536
 - I/O programming, 540
- DEctape compatibility, 621, (MONITOR CALLS)
- DEctapes, clearing, 774, (LINK-10)
- DEC-029 card codes, 624, (MONITOR CALLS)
- DEC-026 card codes, 630 (MONITOR CALLS)
- /Default, 678, 687, 703, (LINK-10)
- Default values, (LINK-10)
 - initial, 677, 678, 686
- Defaults, (LINK-10)
 - changing, 678, 703
 - input, 677
 - output, 677
- /DEFINE, 687, 705 (LINK-10)
- Defined operator, 214, (MACRO)
- DEFINE operator, 259, (MACRO)
- Defining save file, 757, (LINK-10)
- Defining symbol file, 759, (LINK-10)
- Definition of macros, 259, (MACRO)
- Delay, (LINK-10)
 - assignment, 652
- Delayed action switches, 684, 695, 700, 708, 713, 717, 720, 726, 730, 731, 741, 743, 745, 748, 749, 755, 762, 765, 771, (LINK-10)
- Deleted symbols, 217, (MACRO)
- Delimiter, 663, (LINK-10)
- Delimiters, (MACRO)
 - =:, 216
 - parentheses, 237
- DEPHASE statement, 229, (MACRO)
- Determining buffer sizes, 490 (MONITOR CALLS)
- Determining properties of devices, 489, (MONITOR CALLS)
- Determining two-segment capability, 403, (MONITOR CALLS)

- DEVCHR UUO, 372, 488, (MONITOR CALLS)
- DEVGEN UUO, 378, (MONITOR CALLS)
- Device errors, 388, 586, (MONITOR CALLS)
- Device information, 487, (MONITOR CALLS)
 - DEVCHR, 488
 - DEVNAM, 491
 - DEVSIZ, 490
 - DEVSTS, 487
 - DEVTYP, 489
 - WHERE, 491
- Device initialization, 463, (MONITOR CALLS)
- Device name, 660, 677, (LINK-10)
- Device name, 463, (MONITOR CALLS)
- Device optimization, 609, (MONITOR CALLS)
- Device reassignment, 483, (MONITOR CALLS)
- Devices, 493, 535, (MONITOR CALLS)
 - card punch, 494
 - card reader, 496
 - DEctape, 536
 - disk, 549
 - display, 499
 - line printer, 502
 - magnetic tape, 503
 - paper-tape punch, 512
 - paper-tape reader, 513
 - plotter, 515
 - pseudo-TTY, 516
 - terminal, 521
- Device selection, 462, (MONITOR CALLS)
- Device status bits, 631, (MONITOR CALLS)
- Device switches, 680, 691, 733, 747, 756, 768, (LINK-10)
- Device termination, 483, (MONITOR CALLS)
- DEVLNM UUO, 380, 484, (MONITOR CALLS)
- DEVNAM UUO, 378, 491, (MONITOR CALLS)
- DEVPPN UUO, 377, 593, (MONITOR CALLS)
- DEVSIZ UUO, 379, 490, (MONITOR CALLS)
- DEVSTS UUO, 377, 487, (MONITOR CALLS)
- DEVTYP UUO, 377, 489, (MONITOR CALLS)
- DFN, 59, (SYSTEM REF.)
- Diagnostic messages (UTILITY)
 - CREF, 929
 - FILCOM, 935
 - FUDGE2, 946
 - GLOB, 953
- Differences, (LINK-10)
 - LOADER and LINK-10, 843
- Direct addressing, 11, (SYSTEM REF.)
- Directory algorithms, 613, (MONITOR CALLS)
- Direct assignment statements, 215, (MACRO)
- Directly, (LINK-10)
 - using LINK-10, 657, 675
- Directory, 660, 677, (LINK-10)
 - clearing, 774
- Directory devices, 463, 535, (MONITOR CALLS)
- Directory path, 552, 577, 580, (MONITOR CALLS)
- Disk, 549, (MONITOR CALLS)
 - access protection, 554
 - file directories, 551
 - file structure names, 560
 - job search list, 562
 - packs, 602
 - quotas, 559
 - status, 601
 - structure of files, 549
 - user programming, 563
 - UUOs, 577
- Disk area, (LINK-10)
 - DSK, 667
 - NEW, 667
 - OLD, 677
 - SYS, 667
- Disk file organization, 551, 553, (MONITOR CALLS)
- Disk overflow, 729 (LINK-10)
- Disk packs, 602, (MONITOR CALLS)
- Disk parameters, 429, (MONITOR CALLS)
- Disk priority, 599, (MONITOR CALLS)
- Disk quotas, 391, 412, 559, (MONITOR CALLS)
- Disk space, (LINK-10)
 - allocating, 709
- Disk unit offline, 390, (MONITOR CALLS)
- DISK.UUO, 381, 599, (MONITOR CALLS)
- Disk writing, types of, 563, (MONITOR CALLS)
- Dismissing an interrupt, 97, (SYSTEM REF.)
- Dismissing a real-time interrupt, 449, (MONITOR CALLS)
- Display, 499, (MONITOR CALLS)
- DIV, 51, (SYSTEM REF.)
- DK10, 113, (SYSTEM REF.)
- Done, 93, (SYSTEM REF.)
- Dormant segment, 607, (MONITOR CALLS)
- Double colon (::), 246, (MACRO)
- Double equal sign ==, 217, (MACRO)
- Double pound sign (##), 247, (MACRO)
- Double precision floating point, 89, (SYSTEM REF.)
- DPB, 38, (SYSTEM REF.)
- DS, 5, (SYSTEM REF.)
- DSK disk area, 667, (LINK-10)
- DSKCHR UUO, 376, 597, (MONITOR CALLS)
- Dump mode, 464, 475, (MONITOR CALLS)

- Dummy symbols, 264, (MACRO)
- DVRST.UUO, 381, (MONITOR CALLS)
- DVURS.UUO, 381, (MONITOR CALLS)
- E, 11, 23, (SYSTEM REF.)
- /E, 687, (LINK-10)
- Effective address calculation, 11, (SYSTEM REF.)
- End block type 5, 287, (MACRO)
- END statements, 243, 290, (MACRO)
- End-of-file card, 494, 497, (MONITOR CALLS)
- ENTER, 371, 471, (MONITOR CALLS)
 - DECTape, 542
 - disk, 565, 571
 - error codes, 635
- /ENTRY, 687, 706, (LINK-10)
- Entry block type 4, 287, (MACRO)
- Entry name symbols, 695, (LINK-10)
- Entry points, 706, 713, 746, (LINK-10)
- ENTRY statement, 706, (LINK-10)
- ENTRY statement, 247, (MACRO)
- Entry symbols, 667, (LINK-10)
- Environmental information, 414, (MONITOR CALLS)
 - configuration, 442
 - job status, 416
 - monitor, 416
 - timing, 414
- EOF, magnetic tape, 503, 504, (MONITOR CALLS)
- Equal signs == (double), 217, (MACRO)
- EQV, 45, (SYSTEM REF.)
- Error codes, 635, (MONITOR CALLS)
 - naming conventions, 384
- Error code printing, 284, (MACRO)
- Error codes, single-letter, 269 through 274, (MACRO)
- Error intercepting, 388, (MONITOR CALLS)
- /ERRORLEVEL, 687, 708, 775, (LINK-10)
- Error messages, 275 through 281, (MACRO)
- Error messages, 877, 886, (DDT)
- Error messages, (UTILITY)
 - CREP, 929
 - FILCOM, 935
 - FUDGE2, 946
 - GLOB, 953
- Error recovery, RUN, 405, (MONITOR CALLS)
- Errors, total number, 284, (MACRO)
- Ersatz devices, 593, (MONITOR CALLS)
- /ESTIMATE, 687, 709, (LINK-10)
- Evaluation of expression, 214, 219, (MACRO)
- Evaluation of statement, 214, (MACRO)
- Examining storage words, 871, 879, 908, (DDT)
- Examining the monitor, 416, (MONITOR CALLS)
- Examples, 669, 803, (LINK-10)
- Examples (MONITOR CALLS)
 - ↑C intercept, 389, 390
 - device initialization, 473
 - dump output, 475
 - expanding core, 403
 - file reading, 485, 486
 - file writing, 485, 486
 - GETTAB subtables, 436
 - inputting one character, 476
 - outputting one character, 478
 - paper-tape input, 534
 - pointer list, display, 500
 - reading search list, 591
 - reading UFD, 595
 - real-time trapping, 449, 454
 - SFD's, 581
 - terminating a file, 483
 - testing high segments, 409
 - TRPSET, 456
 - user generated buffers, 469
 - writing reentrant programs, 623
- Examples, (UTILITIES)
 - FILCOM, 937
 - FUDGE2, 949
 - GLOB, 954
- Excess-128 code, 9, (SYSTEM REF.)
- EXCH, 31, (SYSTEM REF.)
- Exceeded time limit, 391, (MONITOR CALLS)
- /EXCLUDE, 687, 711, (LINK-10)
- Exec mode program, 734, (LINK-10)
- Executable version, 651, 653, 654, (LINK-10)
- /EXECUTE, 687, 713, (LINK-10)
- EXECUTE command, 654, 656, 660, (LINK-10)
- Execution, (LINK-10)
 - specifying, 701, 713, 718, 766
- Execution control, 385, (MONITOR CALLS)
 - starting, 385
 - stopping, 385
 - suspending, 391
 - trapping, 387
- Executive mode, 368, (MONITOR CALLS)
- Executive mode debugging, (EDDT), 915, (DDT)
- Executive mode trapping, RTTRP, 453
- Exhausted disk quota, 391, 412, (MONITOR CALLS)
- Exit condition switch, 676, (LINK-10)
- EXIT UUO, 373, 386, (MONITOR CALLS)
- Expanded core image file, 690, 772, (LINK-10)
- Expanding areas, 716, (LINK-10)
- Expanding core, 402 (MONITOR CALLS)

- Experimental SYS, 579, (MONITOR CALLS)
- Expressions, 874, (DDT)
- Expressions, 207, (MACRO)
 - evaluation of, 214, 219
 - nesting of, 220
- Expression evaluation, 902, (DDT)
- Expressions, nesting of, 220, (MACRO)
 - literals, 225
 - macros, 265
- Extended arguments for LOOKUP, ENTER, RENAME, 571, (MONITOR CALLS)
- Extended instruction statements, 256, (MACRO)
- Extended RIB's 585, (MONITOR CALLS)
- Extension, (LINK-10)
 - filename, 660, 677
- EXTERN statement, 246, (MACRO)
- External symbols, 692, (LINK-10)

- F (fixed point decimal fractions), 218, (MACRO)
- FAD, 60, (SYSTEM REF.)
- FADR, 57, (SYSTEM REF.)
- Fast block mode, 444, (MONITOR CALLS)
- Fast memory, 7, (SYSTEM REF.)
- Fatality of messages, (LINK-10)
 - specifying, 755
- FDV, 62, (SYSTEM REF.)
- FDVR, 58, (SYSTEM REF.)
- Feature table, 439, (MONITOR CALLS)
- Feature test switches, 368, 439, (MONITOR CALLS)
- Fields, 214, (MACRO)
 - blank, 253
- Field separators, 901, 911, (DDT)
- FILCOM program, 931, (UTILITY)
- File, (LINK-10)
 - creating a saved, 805
 - creating XPN, 772
 - defining save, 757
 - defining symbol, 759
 - expanded core image, 690, 772
 - log, 683, 688, 723, 725
 - map, 688, 727, 731
 - save, 689, 750, 757
 - saving XPN, 772
 - specifying log, 723
 - specifying map, 727
 - symbol, 689, 690, 759
 - XPN, 772
- File dependent switches, 681, 712, 721, 722, 736, 737, 738, 752, 753, 758
- File directories, 551 (MONITOR CALLS)
- File format, (MONITOR CALLS)
 - DECTape, 539
 - disk, 554
- Filename, 660, 677, (LINK-10)
- Filename extension, 660, 677, (LINK-10)

- File reading, example, 485, (MONITOR CALLS)
- File retrieval pointers, 641, (MONITOR CALLS)
- Files, (LINK-10)
 - binary, 651
 - output, 677, 679, 682, 703, 718
- Files, 461, 552, (MONITOR CALLS)
- File selection, 470, (MONITOR CALLS)
- File specification, 660, 676, 703, (LINK-10)
- File specification switches, (LINK-10)
 - implicit, 702, 714, 715, 764, 766
- File status, 464, 479, (MONITOR CALLS)
 - card punch, 496
 - card reader, 498
 - DECTape, 547
 - disk, 601
 - display, 501
 - line printer, 502
 - magnetic tape, 511
 - paper-tape punch, 513
 - paper-tape reader, 514
 - plotter, 516
 - pseudo-TTY, 518
 - terminal, 533
- File status checking, 480, (MONITOR CALLS)
- File status setting, 480, (MONITOR CALLS)
- File structure names, 560, (MONITOR CALLS)
- File termination, 481, (MONITOR CALLS)
- File writing, example, 485, (MONITOR CALLS)
- FILSER, 549, 609, (MONITOR CALLS)
- Fixed point arithmetic, 48, 160, (SYSTEM REF.)
- Fixed point decimal numbers, 222, (MACRO)
- Fixed point numbers, 8, (SYSTEM REF.)
 - double length, 48
- Flag restoration, 81, (SYSTEM REF.)
- Flags, 76, (SYSTEM REF.)
- Floating overflow, 77, 102, (SYSTEM REF.)
- Floating point arithmetic, 54, 160, (SYSTEM REF.)
- Floating point decimal numbers, 222, (MACRO)
- Floating point numbers, 9, (SYSTEM REF.)
 - double length, 10
 - double precision, 89
- FMP, 62, (SYSTEM REF.)
- FMPR, 58, (SYSTEM REF.)
- Folded checksum, 641, (MONITOR CALLS)
- FORLIB, 740, (LINK-10)
- Format, (LINK-10)
 - COMPILE-class command, 660
 - triplet, 759

- Formats, 193, (SYSTEM REF.)
- Format for macro calls, 261, (MACRO)
- Format of instruction word, 206, (MACRO)
- Format, primary instruction, 207, (MACRO)
- /FOROTS, 664, 688, 714, (LINK-10)
- FOROTS, (LINK-10)
 - loading, 714
- /FORSE, 664, 688, 715, (LINK-10)
- FORSE, (LINK-10)
 - loading, 715
- Forward tapes, (LINK-10)
 - spacing, 756
- FRCUO UO, 379, (MONITOR CALLS)
- FRECHN UO, 377, (MONITOR CALLS)
- /FRECOR, 688, 716, (LINK-10)
- Free core, 716, (LINK-10)
- FSB, 61, (SYSTEM REF.)
- FSBR, 57, (SYSTEM REF.)
- FSC, 56, (SYSTEM REF.)
- FUDGE2 program, 737, (UTILITY)
- Full file structure, 391, 412, (MONITOR CALLS)
- Full word data transmission, 31, 161, (SYSTEM REF.)
- FUNCTION statement, 706, (LINK-10)
- Functions, (LINK-10)
 - performing magnetic tape, 732
- /G, 688, (LINK-10)
- General form of statements, 206, (MACRO)
- GET command, 654, 748, (LINK-10)
- GETCHR UO, 372, (MONITOR CALLS)
- GETLIN UO, 374, 529, (MONITOR CALLS)
- GETPPN UO, 374, 416, (MONITOR CALLS)
- GETSEG UO, 375, 407, (MONITOR CALLS)
- GETSTS UO, 370, 480, (MONITOR CALLS)
- GETTAB tables, 419, (MONITOR CALLS)
 - .GTADR, 419
 - .GTCM2, 421
 - .GTCNF, 419, 423
 - .GTCNO, 420
 - .GTCOM, 420
 - .GTCOR, 420
 - .GTCRS, 421
 - .GTCØC, 422, 433
 - .GTC2C, 422
 - .GTC3C, 422
 - .GTC4C, 422
 - .GTC5C, 422
 - .GTCØV, 422, 434
 - .GTC1V, 422
 - .GTC2V, 422
 - .GTC3V, 422
 - .GTC4V, 422
 - .GTC5V, 422
 - .GTDBS, 420
 - .GTDEV, 420
- .GTFET, 422, 439
- .GTISC, 421
- .GTKCT, 419
- .GTLDV, 419, 429
- .GTLIM, 421
- .GTLOC, 420
- .GTNML, 420
- .GTNM2, 420
- .GTNSW, 419, 427
- .GTODP, 419, 429
- .GTOSC, 421
- .GTPPN, 419
- .GTPRG, 419
- .GTPRV, 419, 423
- .GTQJB, 421
- .GTQQQ, 421
- .GTRCT, 420
- .GTRSP, 421
- .GTRTD, 420
- .GTSDD, 419, 429
- .GTSGN, 419
- .GTSLE, 420, 431
- .GTSPL, 420, 432
- .GTSPS, 422
- .GTSSC, 421
- .GTSTS, 419
- .GTSWP, 419
- .GTSYS, 421
- .GTTDB, 420
- .GTTIM, 419
- .GTTMP, 420
- .GTTRO, 421
- .GTTTT, 419
- .GTWCH, 420, 432
- .GTWCT, 420
- .GTWHY, 421
- .GTWSN, 420, 431
- naming of, 383
- subtables, 436
- GETTAB UO, 375, 417, (MONITOR CALLS)
- GLOB program, 951, (UTILITY)
- Global requests, 667, 746, (LINK-10)
 - undefined, 752, 763, 767
- Global symbol table, 688, (LINK-10)
 - initial, 734
- Global symbols, 694, 695, 769, (LINK-10)
 - typing in, 769
 - undefined, 705
- Global symbols, listing of, 951, (GLOB)
- Global symbols, 216, (MACRO)
- Globals, (LINK-10)
 - typing undefined, 767
- /GO, 688, 718, (LINK-10)
- GOBSTR UO, 378, 591, (MONITOR CALLS)
- Group pointer, 641, (MONITOR CALLS)
- Guidelines for locking jobs, 396, (MONITOR CALLS)

- Half word data transmission, 24, 161, (SYSTEM REF.)
- HALT, 386, (MONITOR CALLS)
- HALT, 81, (SYSTEM REF.)
- Hard error, 612, (MONITOR CALLS)
- Hardware detected errors, 612, (MONITOR CALLS)
- Hash table, 719, (LINK-10)
- /HASHSIZE, 688, 719, (LINK-10)
- Hashsize, (LINK-10) recommended, 719
- Header card, 494, 496, (MONITOR CALLS)
- Hardware read-in format, 288, (MACRO)
- HIBER UVO, 378, 391, 517, (MONITOR CALLS)
- .HIGH., 698, 754, (LINK-10)
- High priority queues, 457, (MONITOR CALLS)
- High segment table, 419, (MONITOR CALLS)
- HISEG pseudo-op, 232, (MACRO)
- HLL, 25, (SYSTEM REF.)
- HLLE, 26, (SYSTEM REF.)
- HLLO, 26, (SYSTEM REF.)
- HLLZ, 25, (SYSTEM REF.)
- HLR, 29, (SYSTEM REF.)
- HLRE, 30, (SYSTEM REF.)
- HLRO, 30, (SYSTEM REF.)
- HLRZ, 30, (SYSTEM REF.)
- HPQ UVO, 378, 457, (MONITOR CALLS)
- HRL, 26, (SYSTEM REF.)
- HRLE, 27, (SYSTEM REF.)
- HRLO, 27, (SYSTEM REF.)
- HRLZ, 27, (SYSTEM REF.)
- HRR, 28, (SYSTEM REF.)
- HRRE, 29, (SYSTEM REF.)
- HRRO, 29, (SYSTEM REF.)
- HRRZ, 28, (SYSTEM REF.)
- Hyphen, 675, (LINK-10)
- I, 11, (SYSTEM REF.)
- IBP, 38, (SYSTEM REF.)
- IBUF, 465, (MONITOR CALLS)
- IDIV, 51, (SYSTEM REF.)
- Idle segment, 607, (MONITOR CALLS)
- IDPB, 38, (SYSTEM REF.)
- IF statement, 252, 253, (MACRO)
- Ignoring start address, 738, (LINK-10)
- ILDB, 38, (SYSTEM REF.)
- Illegal instructions, 385, (MONITOR CALLS)
- Illegal operation codes, 383, (MONITOR CALLS)
- Image, (LINK-10) core, 659, 668, 750, 757
- Image file, (LINK-10) expanded core, 690, 772
- Immediate action switches, 693, 697, 698, 703, 718, 735, 739, 746, 754, 769, (LINK-10)
- Implicit file specifications switches, 684, 702, 714, 715, 764, 766, (LINK-10)
- Impure code, 753, (LINK-10)
- Impure segment, 359, (MONITOR CALLS)
- IMUL, 50, (SYSTEM REF.)
- INBUF UVO, 370, 468, (MONITOR CALLS)
- /INCLUDE, 688, 721, (LINK-10)
- Index registers, 7, (SYSTEM REF.)
- Indexing, 207, 244, (MACRO)
- Indicator panels, 182, (SYSTEM REF.)
- Indicators, 106, (SYSTEM REF.)
- Indirect addressing, 11, (SYSTEM REF.)
- Indirect addressing, 224, (MACRO)
- Inhibiting loading of modules, 711, (LINK-10)
- Inhibiting searching, 740, (LINK-10)
- Initial conditions, 93, (SYSTEM REF.)
- Initial default values, 677, 678, 686, (LINK-10)
- Initial file status, 464, (MONITOR CALLS)
- Initial global symbol table, 734, (LINK-10)
- Initial low segment size, 697, (LINK-10)
- Initial symbol table, (LINK-10) clearing, 734 size, 719
- Initialization of LINK-10, 656 (LINK-10)
- Initializing devices, 464, (MONITOR CALLS)
- Initializing the high segment, 407, (MONITOR CALLS)
- INIT UVO, 369, 463, (MONITOR CALLS)
- In-out, 82, 163, (SYSTEM REF.)
- In-out bit assignments, 180, (SYSTEM REF.)
- In-out devices, 156, 180, (SYSTEM REF.)
- Input, buffered, 476, (MONITOR CALLS)
- Input defaults, 677, (LINK-10)
- Input specifications, 676, 703, (LINK-10)
- Input-output, 82, 163, (SYSTEM REF.)
- Input spooling, 604, (MONITOR CALLS)
- Input to LINK-10, 651, (LINK-10)
- Input UVO, 370, 474, (MONITOR CALLS)
- Instruction format, 10, (SYSTEM REF.)
- Instruction times, 23, (SYSTEM REF.)
- Instruction word format, 206, (MACRO)
- Instructions, 157, (SYSTEM REF.) arithmetic testing, 63, 163 Boolean functions, 40, 159 byte, 38, 160 fixed point, 49, 160 floating point, 56, 160 without rounding, 59 with rounding, 57 full word, 31, 161 half word, 25, 161

- Instructions (Cont.)
 - in-out, 90, 163
 - jump, 78, 163
 - logic, 40, 159
 - logical testing, 70, 165
 - move, 33, 161
 - pushdown, 35, 84, 163
 - rotate, 47, 163
 - shift, 47, 53, 163
- INTEGER pseudo-op, 242, (MACRO)
- Interactive options, 656, 683, (LINK-10)
- Intercept, $\uparrow$ C, 389, (MONITOR CALLS)
- Internal request, block type 10, 288, (MACRO)
- Internal symbols, 692, (LINK-10)
- INTERN statement, 247, (MACRO)
- Inter-program communication, 412, (MONITOR CALLS)
- Interrupt, 95, (SYSTEM REF.)
- Interrupt chains, 614, (MONITOR CALLS)
- Interrupt level use of RTTRP, 447, (MONITOR CALLS)
- Interrupt requests, 96, (SYSTEM REF.)
- Introduction to LINK-10, 651, (LINK-10)
- IO, 82, (SYSTEM REF.)
- I/O error messages, 278, (MACRO)
- I/O monitor facilities, 209, (MACRO)
- I/O organization, 461, (MONITOR CALLS)
- I/O programming, 461, (MONITOR CALLS)
 - DECTape, 540
 - disk, 563
- I/O transfer words, 239, (MACRO)
- IOR, 43, (SYSTEM REF.)
- IOWD, 475 (MONITOR CALLS)
- IOWD statement, 239, (MACRO)
- IR, 6, (SYSTEM REF.)
- Item types, (LINK-10)
 - LINK, 815
- JACCT bit, 404, (MONITOR CALLS)
- .JB41, 362, (MONITOR CALLS)
- .JBAPR, 363, (MONITOR CALLS)
- .JBBLT, 362, (MONITOR CALLS)
- .JBCN6, 362, (MONITOR CALLS)
- .JBCHN, 364, (MONITOR CALLS)
- .JBCNI, 363, (MONITOR CALLS)
- .JBCOR, 364, (MONITOR CALLS)
- .JBCST, 364, (MONITOR CALLS)
- .JBDA, 364, (MONITOR CALLS)
- .JBDDT, 362, (MONITOR CALLS)
- .JBERR, 362, (MONITOR CALLS)
- .JBFF, 363, (MONITOR CALLS)
- .JBH41, 365, (MONITOR CALLS)
- .JBHCR, 365, (MONITOR CALLS)
- .JBHDA, 365, (MONITOR CALLS)
- .JBHNM, 365, (MONITOR CALLS)
- .JBHRL, 362, (MONITOR CALLS)
- .JBHRN, 365, (MONITOR CALLS)
- .JBHSA, 365, (MONITOR CALLS)
- .JBHSM, 365, (MONITOR CALLS)
- .JBHVR, 365, (MONITOR CALLS)
- .JBINT, 364, 388, (MONITOR CALLS)
- .JBOPC, 363, (MONITOR CALLS)
- .JBOPS, 364, (MONITOR CALLS)
- .JBPF1, 362, (MONITOR CALLS)
- .JBREL, 362, (MONITOR CALLS)
- .JBREN, 363, (MONITOR CALLS)
- .JBSA, 363, (MONITOR CALLS)
- .JBSET.UUO, 380, (MONITOR CALLS)
- .JBSYM, 363, (MONITOR CALLS)
- .JBTPC, 363, (MONITOR CALLS)
- .JBUSY, 363, (MONITOR CALLS)
- .JBUUO, 362, (MONITOR CALLS)
- .JBVER, 364, (MONITOR CALLS)
- JCRY, 79, (SYSTEM REF.)
- JCRYO, 79, (SYSTEM REF.)
- JCRY1, 79, (SYSTEM REF.)
- JEN, 81, (SYSTEM REF.)
- JFCL, 79, (SYSTEM REF.)
- JFFO, 78, (SYSTEM REF.)
- JFOV, 79, (SYSTEM REF.)
- Jiffy, 415, 419, (MONITOR CALLS)
- JLOG bit, 404, (MONITOR CALLS)
- Job, 605, (MONITOR CALLS)
- JOB DAT, 360, 362, (MONITOR CALLS)
- Job data area, 360, 362, (MONITOR CALLS)
 - vestigial, 365
- JOB DAT, 722, (LINK-10)
- Job's current name, 668, (LINK-10)
- Job I/O initialization, 461, (MONITOR CALLS)
- JOBPEK UUO, 379, (MONITOR CALLS)
- Job privilege table, 423, (MONITOR CALLS)
- Job search list, 562, (MONITOR CALLS)
- Job state codes, 431, (MONITOR CALLS)
- Job status information, (MONITOR CALLS)
 - GETPPN, 416
 - OTHUSR, 416
 - PJOB, 416
 - RUNTIME, 416
- JOBSTR UUO, 376, 590, (MONITOR CALLS)
- JOBSTS UUO, 377, 519, (MONITOR CALLS)
- JOV, 79, (SYSTEM REF.)
- JRA, 83, (SYSTEM REF.)
- JRST, 80, (SYSTEM REF.)
- JRST 4, 386, (MONITOR CALLS)
- JRSTF, 81, (SYSTEM REF.)
- JSA, 83, (SYSTEM REF.)
- JSP, 80, (SYSTEM REF.)
- JSR, 79, (SYSTEM REF.)
- JUMP, 65, (SYSTEM REF.)
- Key, (LINK-10)
 - RETURN, 675
- Keys, 109, (SYSTEM REF.)
- KT10 Option, 360, (MONITOR CALLS)

- /L, 688, (LINK-10)
- ↑L (qualifier), 218, (MACRO)
- Label field, 214, (MACRO)
- Label of statement, 206, (MACRO)
- Labels, 209, 210, 215, (MACRO)
- LALL statement, 250, (MACRO)
- Language, MACRO-10 statements, 206, (MACRO)
- Latency time, 609, (MONITOR CALLS)
- LDB, 38, (SYSTEM REF.)
- Left arrow shifting, 222, (MACRO)
- Level, (LINK-10)
 - message, 708, 775
 - severity, 755, 776
- LIB40, 740, (LINK-10)
- LIBOL, 740, (LINK-10)
- Library, (LINK-10)
 - modules, 653
 - search, 653, 666, 763
 - search mode, 666, 688, 689, 737, 752
 - search symbols, 686, 706, 746
 - suppression of search mode, 737
 - system, 653, 666, 667, 689, 690, 740, 752, 763
 - system search, 718
 - user, 667
- /LIBRARY, 665, (LINK-10)
- Library subroutines, 248, (MACRO)
- LIGHTS UUO, 372, 442, (MONITOR CALLS)
- Line of program, 213, (MACRO)
- Line printer, 502, (MONITOR CALLS)
- Line printer listings, 250, (MACRO)
- Lines, (LINK-10)
 - continuation, 675, 681
- LINK block, 257, (MACRO)
 - formats, 284, 285
- /LINK, 665, (LINK-10)
- LINK item types, 815, (LINK-10)
- LINK-10, (LINK-10)
 - command strings, 676
 - differences between LOADER and, 843
 - initialization of, 656
 - input to, 651
 - introduction to, 651
 - loading, 806
 - messages, 775
 - message suppression, 708, 725
 - output from, 653
 - switch algorithms, 679
 - switches, 663, 685, 686, 691
- Linking loader, 284, (MACRO)
- Linking modules, 652, (LINK-10)
- Linking subroutines, 246, (MACRO)
- Linking symbols, 653, (MACRO)
- List, (LINK-10)
 - search, 667
- LIST statement, 250, (MACRO)
- Listing control statements, 250, (MACRO)
- Listing relocation counters, 698, (LINK-10)
- Literals, 255, (MACRO)
 - nested, 255
- LIT statements, 244, (MACRO)
- /LMAP, 665, (LINK-10)
- LOAD command, 656, 659, (LINK-10)
- LOADER and LINK-10, (LINK-10)
 - differences, 843
- LOADER switches, 663, 846, (LINK-10)
- Loading, 806, (LINK-10)
 - COBOL programs, 803, 805
 - debugging program, 701, 766
 - FOROTS, 714
 - FORSE, 715
 - inhibition of module loading, 711
 - local symbols, 722
 - MACRO programs, 804
 - monitor, 811
 - object time system, 742
 - specified modules, 721
 - symbols, 761
 - termination, 718
- Loading (MONITOR CALLS)
 - binary files, 360
 - core area, 360
- Loading procedure, 869, 920, (DDT)
- Local symbol mode, 701, (LINK-10)
- Local symbols, 665, 688, 695, 701, 736, 759
 - loading, 722
- Local symbols, 216, (MACRO)
- /LOCALS, 688, 722, (LINK-10)
- LOCATE UUO, 378, 412, (MONITOR CALLS)
- Location counter, 224, (MACRO)
- LOC pseudo-op, 227, (MACRO)
- Lock UUO, 377, 394, (MONITOR CALLS)
- Locking jobs, 394, 398, (MONITOR CALLS)
- Logged-in quota, 555, (MONITOR CALLS)
- Logged-out quota, 555, (MONITOR CALLS)
- /LOG, 683, 688, 723, (LINK-10)
- LOG, (LINK-10)
 - logical name, 683, 723
- Log file, 683, 688, 723, 725, (LINK-10)
- Logic, 39, 159, (SYSTEM REF.)
- Logical device names, suppression of, 382, (MONITOR CALLS)
- Logical operations, 219, (MACRO)
- Logical shifting, 46, 163, (SYSTEM REF.)
- Logical station, 412, (MONITOR CALLS)
- Logical testing and modification, 63, 165, (SYSTEM REF.)
- Logical unit names, 560 (MONITOR CALLS)
- LOGIN UUO, 373, (MONITOR CALLS)
- /LOGLEVEL, 688, 725, 775, (LINK-10)
- LOGOUT UUO, 373, (MONITOR CALLS)
- LOOKUP UUO, 371, 470, (MONITOR CALLS)
 - DEctape, 541
 - disk, 567, 571
 - error codes, 635
- Lookup errors, 277, 278, (MACRO)
- Low segment size, (LINK-10)
 - initial, 697
 - maximum, 729
- .LOW., 698, 754, (LINK-10)
- LSH, 47, (SYSTEM REF.)
- LSHC, 47, (SYSTEM REF.)

- /M, 688, (LINK-10)
- MA, 6, (SYSTEM REF.)
- Machine instruction formats, 206, (MACRO)
- Machine mnemonics, summary, 309, (MACRO)
- Macros, definition of, 259, (MACRO)
- MACRO, (MACRO)
 - calls, 260, 261
 - capabilities, 205
 - instruction, 256
 - name, 211
 - nesting and redefinition, 266
 - program examples, 295
 - statements, 209
 - table, 213
- MACRO program, loading, 804, (LINK-10)
- Magnetic tape, 503, (MONITOR CALLS)
 - codes, 639
 - format, 504
 - 9-channel, 507
 - use of MTAPE, 506
 - UUOs, 505
- Magnetic tape functions, 732, (LINK-10)
- Manipulating file structures, 588, (MONITOR CALLS)
- MANTIS, 660, 701, (LINK-10)
- Map, 666, 671, 679, (LINK-10)
- /MAP, 665, 688, 694, 727, (LINK-10)
- Map file, 688, 727, 731, (LINK-10)
 - contents, 694
- MAP program, 672, (MONITOR CALLS)
- Mapping, 359, 360, (MONITOR CALLS)
- Margin check panel, 107, (SYSTEM REF.)
- Masks, naming of, 383, (MONITOR CALLS)
- Master file directory, 551 (MONITOR CALLS)
- MATRIX subroutine, 247, 248, (MACRO)
- MAXCOR, 697, 716, (LINK-10)
- /MAXCOR, 688, 729, (LINK-10)
- Maximum low segment size, 729, (LINK-10)
- Meddling, 404, 409, (MONITOR CALLS)
- Memory, (LINK-10)
 - core, 652
- Memory, 12, (SYSTEM REF.)
 - access time, 13
 - allocation, 13
 - protection, 102, 103
 - stop, 108
- Memory parity error recovery, 618, (MONITOR CALLS)
- Memory protection and relocation, 359, (MONITOR CALLS)
- Memory protection register, 360, (MONITOR CALLS)
- Memory relocation register, 359, (MONITOR CALLS)
- Message level, 708, 775, (LINK-10)
- Messages, 775, (LINK-10)
 - specifying fatality of, 755
 - suppressing, 708, 725
- METER.UUO, 380, 458, (MONITOR CALLS)
- MFD, 551, (MONITOR CALLS)
- MI, 6, (SYSTEM REF.)
- Miscellaneous commands, 897, (DDT)
- Miscellaneous features, 655, (LINK-10)
- Mnemonics, 14, 147, (SYSTEM REF.)
 - alphabetic, 152
 - derivation, 148
 - device, 156
 - numeric, 149
- Mnemonics, summary of machine, 309, (MACRO)
- Mnemonic table, 213, (MACRO)
- Mode, (LINK-10)
 - library search, 688, 689, 737, 752
 - local symbol, 701
 - search, 721
 - suppressing library search, 737
- Modes, 23, (SYSTEM REF.)
 - arithmetic testing, 64
 - fixed point, 49
 - floating point, 56, 60
 - half word, 25
 - logic, 39
 - logical testing, 69
 - move, 33
- Modifying shared segments, 409, (MONITOR CALLS)
- Modifying storage words, 872, 880, (DDT)
- Modules, (LINK-10)
 - inhibiting loading of, 711
 - library, 653
 - linking, 652
 - loading specified, 721
 - object, 651, 659
- Monitor, (LINK-10)
 - loading the, 811
- Monitor commands, 233, (MACRO)
 - summary, 307, 308
- Monitor error handling, 612, (MONITOR CALLS)
- Monitor examination, (MONITOR CALLS)
 - GETTAB, 417
 - PEEK, 416
 - POKE, 417
 - SPY, 416
- Monitor generated buffers, 468, (MONITOR CALLS)
- Monitor I/O facilities, 209, (MACRO)
- Monitor programming, 105, (SYSTEM REF.)
- Monitor symbols, naming of, 383, (MONITOR CALLS)
- Monitor UUOs, 369 (MONITOR CALLS)
 - restrictions in reentrant programs, 382
- MONRT., 386, (MONITOR CALLS)
- MOVE, 33, (SYSTEM REF.)

MOVN, 34, (SYSTEM REF.)
 MOVN, 33, (SYSTEM REF.)
 /MPSORT, 688, 731, (LINK-10)
 MQ, 7, (SYSTEM REF.)
 MTIME UUO, 373, 415, (MONITOR CALLS)
 /MTAPE, 688, 732, (LINK-10)
 MTAPE UUO, 371, 505, 546, (MONITOR CALLS)
 MTCHR.UUO, 380, 507, (MONITOR CALLS)
 MUL, 50, (SYSTEM REF.)
 Multiprogram assemblies, 244, (MACRO)

 /N, 688, (LINK-10)
 Name, (LINK-10)
 device, 660, 677
 program, 749
 Name block, type 6, 287, (MACRO)
 Naming of monitor symbols, 383, (MONITOR CALLS)
 Naming programs, 230, (MACRO)
 Nesting of, (MACRO)
 expressions, 220
 literals, 225
 macros, 266
 Nested subroutines, 84, (SYSTEM REF.)
 /NEW, 667, (LINK-10)
 NEW disk area, 667, (LINK-10)
 Nine-channel magtape, 507, (MONITOR CALLS)
 /NOINITIAL, 688, 734, (LINK-10)
 /NOLOCAL, 688, 736, (LINK-10)
 Nondirectory devices, 462, 493, (MONITOR CALLS)
 Nonexistent Memory, 102, (SYSTEM REF.)
 Non-I/O UUOs, 385, (MONITOR CALLS)
 Nonsharable, 668, (LINK-10)
 Non-standard I/O, DECTape, 547, (MONITOR CALLS)
 Nonswapping data table, 427, (MONITOR CALLS)
 No-ops, 76, (SYSTEM REF.)
 Normal block mode, 444, (MONITOR CALLS)
 /NOSEARCH, 666, 688, 737, (LINK-10)
 /NOSTART, 689, 738, (LINK-10)
 NOSYM statement, 250, (MACRO)
 /NOSYMBOL, 689, 739, (LINK-10)
 /NOSYSLIB, 689, 740, (LINK-10)
 Null arguments, 264, (MACRO)
 Number, (LINK-10)
 prime, 719
 Numbers, naming of, 383, (MONITOR CALLS)
 Number sign (#) usage, 242, (MACRO)
 Number system, 8, (SYSTEM REF.)
 fixed point, 8
 floating point, 9
 Numeric terms, 220, (MACRO)

 O (octal radix), 218, (MACRO)
 Object modules, 651, 659, (LINK-10)
 Object time system, OTS, 742, (LINK-10)
 OBUF, 465, (MONITOR CALLS)
 Octal codes, summary, 309, (MACRO)
 Octal-to-decimal conversion, 87, (SYSTEM REF.)
 OCT statement, 234, (MACRO)
 Off-line disk unit, 390, (MONITOR CALLS)
 Offset, 363, (MONITOR CALLS)
 /OLD, 667, (LINK-10)
 OLD disk area, 667, (LINK-10)
 Once-only disk parameters, 429, (MONITOR CALLS)
 One-segment machine, 286, 287, (MACRO)
 Ones complement, 8, (SYSTEM REF.)
 Op-code table, 213, (MACRO)
 OPDEF statement, 254, (MACRO)
 OPEN UUO, 370, 463, (MONITOR CALLS)
 Operand field, 214, (MACRO)
 Operands, 212, (MACRO)
 in primary statements, 206
 Operating environment, 919, (DDT)
 Operating instructions, 331, (MACRO)
 Operating keys, 109, (SYSTEM REF.)
 Operating switches, 111, (SYSTEM REF.)
 Operation, (SYSTEM REF.)
 clock, 116
 processor, 106
 Operator, defined, 214, (MACRO)
 Operator field, 214, (MACRO)
 Operators, 211, (MACRO)
 arithmetic, 219
 logical, 219
 unary, 222
 Optimization, 583, (MONITOR CALLS)
 Options, (LINK-10)
 interactive, 683
 OR, 43, (SYSTEM REF.)
 ORCA, 43, (SYSTEM REF.)
 ORCB, 44, (SYSTEM REF.)
 ORCM, 44, (SYSTEM REF.)
 OTHUSR UUO, 379, 416, (MONITOR CALLS)
 /OTS, 689, 742, (LINK-10)
 OUTBUF UUO, 370, 468, (MONITOR CALLS)
 Output, 653, (LINK-10)
 auxiliary, 651, 654
 defaults, 677
 files, 677, 679, 682, 703, 716
 specification, 676, 703
 switches, 682, 710, 724, 728, 751, 757, 760, 773, 774
 Output, 283, (MACRO)
 Output, (MONITOR CALLS)
 buffered, 477
 spooling, 604
 unit selection, 561

- OUTPUT UUO, 371, 474, (MONITOR CALLS)
 OUT UUO, 370, 474, (MONITOR CALLS)
 Overdrawn amount, 555, (MONITOR CALLS)
 Overflow, 48, 55, 77, 102, (SYSTEM REF.)
 Overflow, (LINK-10)
 disk, 729
 Overlay facility, 654, 706, (LINK-10)
 Owner of files, 555, (MONITOR CALLS)
- Page mapped, 359, (MONITOR CALLS)
 PAGE statement, 250, (MACRO)
 Paper-tape control, 905, 914, (DDT)
 Paper-tape input/output at TTY, 534, (MONITOR CALLS)
 Paper-tape punch, 512, (MONITOR CALLS)
 Paper-tape reader, 513, (MONITOR CALLS)
 Parentheses delimiters, 237, (MACRO)
 Parity subtable, 438, (MONITOR CALLS)
 PASS2 statements, 245, (MACRO)
 Passive search list, 562, (MONITOR CALLS)
 PAT., 744, 761, (LINK-10)
 Patching space, 689, (LINK-10)
 allocation, 744,
 /PATCHSIZE, 689, 744, (LINK-10)
 PATH.UUO, 380, 577, (MONITOR CALLS)
 PC, 5, (SYSTEM REF.)
 PC word, 76, (SYSTEM REF.)
 PEEK UUO, 374, 416, (MONITOR CALLS)
 Percent sign (%) symbol, 262, (MACRO)
 Performing magnetic tape functions, 732, (LINK-10)
 Period (.) symbol, see point symbol
 Permanent switches, 662, 681, (LINK-10)
 PHASE statement, 299 (MACRO)
 Physical address, 360, (MONITOR CALLS)
 Physical controller names, 560, (MONITOR CALLS)
 Physical-only bit (UU.PHS), 382, 462, (MONITOR CALLS)
 Physical-only I/O, 382, 462, (MONITOR CALLS)
 Physical unit names, 560, (MONITOR CALLS)
 PI, 95, 98, (SYSTEM REF.)
 PI ON, 108, (SYSTEM REF.)
 PJOB UUO, 374, 416, (MONITOR CALLS)
 Plotter, 515, (MONITOR CALLS)
 POINT statement, 237, (MACRO)
 Point (.) symbol, 224, (MACRO)
- Pointer, (SYSTEM REF.)
 byte, 37
 IO block, 92
 Points, (LINK-10)
 entry, 706, 713, 746
 POKE.UUO, 380, 417, (MONITOR CALLS)
 POP, 35, (SYSTEM REF.)
 POPJ, 85, (SYSTEM REF.)
 Position-done interrupt, 611, (MONITOR CALLS)
 Pound sign , double (##), 247, (MACRO)
 Preserved files, 556, (MONITOR CALLS)
 PRGEND pseudo-op, 244, (MACRO)
 Primary instruction format, 207, (MACRO)
 Primary statement operands, 206, (MACRO)
 Prime number, 719, (LINK-10)
 PRINTX MESSAGE statement, 251, (MACRO)
 Priority interrupt, 95, (SYSTEM REF.)
 Priority interrupt routines, 613, (MONITOR CALLS)
 Privilege word (.GTPRV), 423, (MONITOR CALLS)
 Proceed counter, 894, 912, (DDT)
 Processing of statement, 213, (MACRO)
 Processor conditions, 100, (SYSTEM REF.)
 Processor, (MONITOR CALLS)
 constants table, 433
 flags, 387
 modes, 367
 variable table, 434
 Program (MACRO)
 break, 284
 line, 213
 listing, 249
 listing output, 283
 origin, 231
 subtitles, 231
 Program and profile identification, 410, (MONITOR CALLS)
 LOCATE, 412
 SETNAM, 410
 SETUUO, 410
 Program control, 76, 163, (SYSTEM REF.)
 Program examples, 293, (MACRO)
 Programmed operator, 223, (MACRO)
 Programmed operators, 368, (MONITOR CALLS)
 tables, 369, 372
 Programming conventions, 14, (SYSTEM REF.)
 Program name, 749, (LINK-10)
 Programs, (LINK-10)
 COMPIL, 656
 debugging, 660, 686, 690, 701, 766
 exec mode, 734

- Programs (Cont.)
 - loading COBOL, 803, 805
 - loading debugging, 701, 766
 - loading MACRO, 804
- Program Stop, 108, (SYSTEM REF.)
- Program version number, 364, (MONITOR CALLS)
- Project-programmer number word, 419, (MONITOR CALLS)
- Protection, 103, (SYSTEM REF.)
- Protection, 554, (MONITOR CALLS)
- Protection address, 359, (MONITOR CALLS)
- Protection and relocation, 359, (MONITOR CALLS)
- Pseudo-operation code, 211, (MACRO)
- Pseudo-ops, 227, (MACRO)
 - summary, 311, 312
- Pseudo-TTY, 516, (MONITOR CALLS)
- Pure code, 753, (LINK-10)
- Pure segment, 359, (MONITOR CALLS)
- PURGE statement, 245, (MACRO)
- PUSH, 35, (SYSTEM REF.)
- Pushdown list, 34, 163, (SYSTEM REF.)
 - defined, 35
 - subroutines, 85
- Pushdown overflow, 102, (SYSTEM REF.)
- PUSHJ, 84, (SYSTEM REF.)

- Qualifier +L, 218, (MACRO)
- Quantum time, 606, (MONITOR CALLS)
- Queuing strategy, 610, (MONITOR CALLS)
- Quotas, disk, 391, 412, 559, (MONITOR CALLS)
- Quotation mark, single ('), 249, 264, (MACRO)

- R LINK command, 656, 657, 675 (LINK-10)
- Radix changing, 889, 907, (DDT)
- Radix changing, 218, 235, (MACRO)
- Radix 50 character set, 210, (MACRO)
- Radix 50 representation, 325, (MACRO)
- Radix 50 representation, 759, (LINK-10)
- RADIX statements, 233, 236, (MACRO)
- Read in, 109, (SYSTEM REF.)
- Reading directory paths, 577, (MONITOR CALLS)
- Readin mode, 94, (SYSTEM REF.)
- Real-time programming, 444, (MONITOR CALLS)
 - HPQ, 457
 - RTTRP, 444
 - TRPSET, 455
 - UJEN, 457
- Real-time trapping, 444, (MONITOR CALLS)
 - data block, 446
 - dismissing interrupt, 449
 - examples, 449, 454
 - exec mode, 453
 - interrupt level use, 447
 - removing devices, 449
 - restrictions, 448
 - returns, 447
- REASSI UUO, 373, 484, (MONITOR CALLS)
- Recommended hashsize, 719, (LINK-10)
- Redefinition of macros, 266, (MACRO)
- Reentrant program, 359, (MONITOR CALLS)
- Relative address, 360, (MONITOR CALLS)
- RELEASE UUO, 371, 483, (MONITOR CALLS)
- RELOC pseudo-op, 227, (MACRO)
- Relocatability of an expression, 279, (MACRO)
- Relocatable address mode, 227, (MACRO)
- Relocatable code, 651, (LINK-10)
- Relocatable object program, 279, (MACRO)
- Relocatable symbols, 694, 695, (LINK-10)
- Relocation, 103, (SYSTEM REF.)
- Relocation address, 359, (MONITOR CALLS)
- Relocation and protection word, 419, (MONITOR CALLS)
- Relocation counters, 686, 689, 698, 754, (LINK-10)
 - listing, 698
- REMAP UUO, 375, 408, (MONITOR CALLS)
- REMARK COMMENTS statement, 251, (MACRO)
- Remembering arguments on RUN, 405, (MONITOR CALLS)
- Removing devices from PI channel, 449, (MONITOR CALLS)
- RENAME UUO, 370, 472, (MONITOR CALLS)
 - DECTape, 543
 - disk, 568, 571
 - error codes, 635
- REPEAT statement, 253, (MACRO)
- Representation, 759, (LINK-10)
- Requests, global, 667, 746, (LINK-10)
 - undefined, 752, 763, 767
- /REQUIRE, 689, 746, (LINK-10)
- RESDV.UUO, 381, 483, (MONITOR CALLS)
- Reserving a single location, 242, (MACRO)
- RESET UUO, 370, 461, 587, (MONITOR CALLS)
- Response subtable, 436, (MONITOR CALLS)
- Restore, 81, (SYSTEM REF.)
- Restricted devices, 462, (MONITOR CALLS)
- Restrictions on monitor UUO's, 382, (MONITOR CALLS)
- Restrictions on real-time trapping, 448, (MONITOR CALLS)

- Retrieval information block, 554,
 (MONITOR CALLS)
- Retrieval pointers, 641, (MONITOR
 CALLS)
- RETURN key, 675, (LINK-10)
- Reverse slash (\), 267, (MACRO)
- /REWIND, 689, 747, (LINK-10)
- Rewinding tapes, 747, 768, (LINK-10)
- RIB, 554, (MONITOR CALLS)
- RIM format, 290, (MACRO)
- RIM10 format, 289, (MACRO)
- RIM10B format, 292, (MACRO)
- Ring buffers, 466, (MONITOR CALLS)
- ROT, 47, (SYSTEM REF.)
- Rotate, 46, 163, (SYSTEM REF.)
- ROTC, 48, (SYSTEM REF.)
- Rounding, 56 (SYSTEM REF.)
- RSW, 95, (SYSTEM REF.)
- RTTRP UWO, 379, 444, (MONITOR CALLS)
- RUN, 107, (SYSTEM REF.)
- RUN command, 654, (LINK-10)
- /RUNAME, 689, 749, (LINK-10)
- /RUNCOR, 689, 748, (LINK-10)
- RUNTIM UWO, 374, 416, (MONITOR CALLS)
- RUN UWO, 374, 403, (MONITOR CALLS)
-
- /S, 689, (LINK-10)
- SALL statement, 250, (MACRO)
- SAT blocks, 550, (MONITOR CALLS)
- /SAVE, 689, 750, (LINK-10)
- SAVE command, 659, 668, (LINK-10)
- Save file, 689, 750, (LINK-10)
 creating, 805
 defining, 757
- Saving XPN file, 772, (LINK-10)
- Scaling, 55, (SYSTEM REF.)
- Scan switch, 577, (MONITOR CALLS)
- Scheduling, 605, (MONITOR CALLS)
- Searches, 895, 912, (DDT)
- /SEARCH, 666, 689, 752, (LINK-10)
- Search list, job, 562, (MONITOR
 CALLS)
- Search list, 667, (LINK-10)
- Search mode, 721, (LINK-10)
 library, 666, 688, 689, 737, 752
 surpressing library, 737
- SEARCH name, 258, (MACRO)
- SEARCH pseudo-op, 258, (MACRO)
- Search symbols, (LINK-10)
 library, 686, 706, 746
- Searching, (LINK-10)
 inhibiting, 740
 system library, 718
- Searching, 609, (MONITOR CALLS)
- Searching libraries, 763, (LINK-10)
- SEEK UWO, 337, 587, (MONITOR CALLS)
- Segment control, 403, (MONITOR
 CALLS)
 GETSEG, 407
 modifying shared segments, 409
 REMAP, 408
- Segment Control (Cont.)
 RUN, 403
 testing, 408
- /SEGMENT, 689, 753, (LINK-10)
- Segment size, (LINK-10)
 initial low, 697
 maximum low, 729
- Segments, 359, (MONITOR CALLS)
- /SELF, 667, (LINK-10)
- Semicolon (;) as terminator, 212,
 328, (MACRO)
- Semi-standard I/O, DEctape, 547,
 (MONITOR CALLS)
- Sequence of operations, RUN, 406,
 (MONITOR CALLS)
- /SET, 689, 754, (LINK-10)
- SETA, 40, (SYSTEM REF.)
- SETCA, 41, (SYSTEM REF.)
- SETCM, 41, (SYSTEM REF.)
- SETDDT UWO, 372, 385, (MONITOR
 CALLS)
- SETM, 41, (SYSTEM REF.)
- SETNAM UWO, 375, 410, (MONITOR CALLS)
- SETO, 40, (SYSTEM REF.)
- SETPOV UWO, 374, (MONITOR CALLS)
- SETSTS UWO, 370, 480, (MONITOR CALLS)
- Setting directory paths, 577,
 (MONITOR CALLS)
- Setting disk priority, 599,
 (MONITOR CALLS)
- Setting job parameters, 410,
 (MONITOR CALLS)
- Setting logical names, 484, (MONITOR
 CALLS)
- Setting write-up bit, 403, (MONITOR
 CALLS)
- SETUWO, 378, 410, (MONITOR CALLS)
- SETUWP UWO, 375, 403, (MONITOR
 CALLS)
- SETZ, 40, (SYSTEM REF.)
- /SEVERITY, 689, 775, 776, (LINK-10)
- Severity levels, 775, 776, (LINK-10)
- SFD, 551, (MONITOR CALLS)
- SFD privileges, 556, (MONITOR CALLS)
- Sharable, 668, 757, (LINK-10)
- Shift, 163, (SYSTEM REF.)
 arithmetic, 53
 logical, 46
- Shifting, binary, 221, (MACRO)
- Simultaneous access, 560, (MONITOR
 CALLS)
- Simultaneous supersede/update, 600,
 (MONITOR CALLS)
- Single mode, 444, (MONITOR CALLS)
- Single quote mark ('), 263, (MACRO)
- SIXBIT statement, 240, (MACRO)
- Size, (LINK-10)
 initial low segment, 697
 initial symbol table, 719
 maximum low segment, 729
- /SKIP, 689, 756, (LINK-10)
- SKIP, 66, (SYSTEM REF.)
- SLEEP UWO, 374, 391, (MONITOR CALLS)

- Soft error, 612, (MONITOR CALLS)
- Software detected errors, 613, (MONITOR CALLS)
- SOJ, 67, (SYSTEM REF.)
- Sorting symbol table, 731, (LINK-10)
- SOS, 68, (SYSTEM REF.)
- Space, (LINK-10)
 - allocating disk, 709
 - allocating patching, 744
 - patching, 689
- Spacing forward tapes, 756, (LINK-10)
- Special symbols, 903, 910, (DDT)
- Specification, (LINK-10)
 - file, 660, 676, 703
 - switch, 663, 686
- Specification switches, (LINK-10)
 - implicit file, 702, 714, 715, 764, 766
- Specifications, Input/Output, 676, 703, (LINK-10)
- Specified modules, loading of, 721, (LINK-10)
- Specifying, (LINK-10)
 - central processor, 700
 - disk areas, 667
 - execution, 701, 713, 718, 766
 - fatality of messages, 755
 - free core, 716
 - log file, 723
 - map file, 727
 - start address, 758
- Spool bits, 411, 432, (MONITOR CALLS)
- Spooling, 603, (MONITOR CALLS)
- SPY UO, 375, 416, (MONITOR CALLS)
- Square bracket [], used as terminator, 226, (MACRO)
- SQUOZE mnemonic, 236, (MACRO)
- /SSAVE, 689, 757, (LINK-10)
- SSAVE command, 659, 668, (LINK-10)
- Standard listing operations, 250, (MACRO)
- /START, 689, 758, (LINK-10)
- Start address, 666, 677, 689, 713, (LINK-10)
 - ignoring, 738
 - specifying, 758
- START command, 654, 659, (LINK-10)
- Starting address, block type 7, 288, (MACRO)
- Starting a program, 385, (MONITOR CALLS)
- Starting the program, 876, 883, 912, (DDT)
- State codes, 431, (MONITOR CALLS)
- Statement, 209, (MACRO)
 - elements, 206
 - evaluation, 214
 - formats, 249
 - label, 206
 - processing, 213
 - general form of, 206
 - operands in primary, 206
- Statement, (LINK-10)
 - entry, 706, 746
 - function, 706
 - subroutine, 706
- STATO UO, 370, 480, (MONITOR CALLS)
- Status changing switches, 684, (LINK-10)
- Status, 93, (SYSTEM REF.)
 - clock, 114
 - interrupt, 99
 - processor, 101
- Status checking and setting, 479, 480, (MONITOR CALLS)
- Status word, 419, (MONITOR CALLS)
- STATZ UO, 370, 480, (MONITOR CALLS)
- Stopping a program, 385, (MONITOR CALLS)
- Storage allocation, 319, (MACRO)
- Storage allocation table, 550, (MONITOR CALLS)
- Storage map for user mode, 917, (DDT)
- Storage, reserving, 242, (MACRO)
- Storage words, (DDT)
 - examining, 871, 879, 908
 - modifying, 872, 880
- String, (LINK-10)
 - command, 675, 676, 681
- Structure of disk files, 549, (MONITOR CALLS)
- STRUO, 376, 588, (MONITOR CALLS)
- SUB, 49, (SYSTEM REF.)
- Sub-file directories, 551, 577, (MONITOR CALLS)
- Subroutines, 82, (SYSTEM REF.)
- SUBROUTINE statement, 706, (LINK-10)
- Subtables, GETTAB, 436, (MONITOR CALLS)
- SUBTTL pseudo-op, 231, (MACRO)
- Suffix ##, 216, (MACRO)
- Suffixes K, M, and G, 219, (MACRO)
- Superseding a file, 563, (MONITOR CALLS)
- Superseding a sharable program, 409, (MONITOR CALLS)
- Super-USETI/USETO, 587, (MONITOR CALLS)
- Suppression of logical device names, 382, (MONITOR CALLS)
- SUPPRESS pseudo-op, 248, (MACRO)
- Suppression of, (LINK-10)
 - library search mode, 737
 - messages, 708, 725,
 - symbol table, 739
- Suspending, 391, (MONITOR CALLS)
- Swapping, 607, (MONITOR CALLS)
- Swapping classes, 608, (MONITOR CALLS)
- Swapping data table, 429, (MONITOR CALLS)
- Swapping parameter word, 419, (MONITOR CALLS)

- Switch, (LINK-10)
 - exit condition, 676
- Switch algorithms, 679, (LINK-10)
- Switch options, summary, 335, (MACRO)
- Switch specification, 663, 686, (LINK-10)
- Switches, 111, (SYSTEM REF.)
- Switches, (LINK-10)
 - COMPIL, 662, 664
 - delayed action, 684, 695, 700, 708, 713, 717, 720, 726, 730, 731, 741, 743, 745, 748, 749, 755, 762, 765, 771
 - device, 680, 691, 733, 747, 756, 768
 - file dependent, 681, 712, 721, 722, 736, 737, 738, 752, 753, 758
 - immediate action, 693, 697, 698, 703, 706, 718, 735, 739, 746, 754, 769
 - implicit file specification, 684, 702, 714, 715, 764, 766
 - LINK-10, 663, 685, 686, 691
 - LOADER, 663, 846
 - output, 682, 710, 724, 728, 751, 757, 760, 773, 774
 - permanent, 662, 681
 - status changing, 684
 - temporary, 662, 681
 - type-out, 683
- SWITCH UUO, 373, 442, (MONITOR CALLS)
- /SYMBOL, 689, 759, (LINK-10)
- Symbol:!(suppressed local symbol), 218, (MACRO)
- Symbol;:(suppressed internal symbol), 218 (MACRO)
- Symbol delimiter, 210, (MACRO)
- Symbol evaluation, 902, (DDT)
- Symbol expression, 248, (MACRO)
- Symbol file, 689, 690, (LINK-10)
 - defining, 759
- Symbolic, (MACRO)
 - addresses, 210, 212
 - elements, 280
 - operands, 212
 - operators, 211
- Symbols, 873, 883, (DDT)
 - defining, 899, 910
 - deleting, 900, 910
- Symbols, 652, (LINK-10)
 - absolute, 695
 - COMMON, 695
 - entry, 695
 - entryname, 695
 - external, 692
 - global, 694, 695, 769
 - internal, 692
 - library search, 686, 706, 746
 - linking, 653
 - loading, 761
- Symbols, (Cont.)
 - local, 665, 688, 695, 701, 722, 736, 759
 - relocatable, 694, 695
 - typing in global, 769
 - undefined, 656, 681, 767
 - undefined global, 705
 - zero length, 695
- Symbols, 209, (MACRO)
 - block type 2, 286
 - block type 3, 286
 - generated, 262
 - global, 216
 - local, 216
- Symbol table, 660, 679, 761, (LINK-10)
 - arranging, 765
 - clearing initial, 734
 - global, 688
 - initial global, 734
 - initial size, 719
 - sorting, 731
 - suppressing, 739
- /SYMSEG, 690, 761, (LINK-10)
- Synchronization of buffered I/O
 - 478, (MONITOR CALLS)
- SYN statement, 255, (MACRO)
- SYS device, 554, (MONITOR CALLS)
- SYS disk area, 667, (LINK-10)
- /SYSLIB, 690, 763, (LINK-10)
- /SYSORT, 690, 765, (LINK-10)
- SYSPHY UUO, 376, 593, (MONITOR CALLS)
- SYSSTR UUO, 376, 592, (MONITOR CALLS)
- System, Object Time (OTS), (LINK-10)
 - loading, 742
- System libraries, 653, 666, 667, 689, 690, 740, 752, 763
 - searching, 718
- System library, 554, (MONITOR CALLS)
- Table, (LINK-10)
 - arranging symbol, 765
 - clearing initial symbol, 734
 - global symbol, 688
 - hash, 719
 - initial global symbol, 734
 - size of initial symbol, 719
 - sorting symbol, 731
 - suppressing symbol, 739
 - symbol, 660, 679, 731, 761, 765
- Tape functions, (LINK-10)
 - performing magnetic, 732
- TAPE statement, 251, (MACRO)
- Tapes, (LINK-10)
 - backspacing, 691
 - rewinding, 747, 768
 - spacing forward, 756
 - unloading, 768
- TDC, 73, (SYSTEM REF.)

- TDN, 72, (SYSTEM REF.)
- TDO, 73, (SYSTEM REF.)
- TDZ, 73, (SYSTEM REF.)
- Temporary files, 405, 412, (MONITOR CALLS)
- Temporary switches, 662, 681, (LINK-10)
- Terminating loading, 718, (LINK-10)
- Terminals, 521, (MONITOR CALLS)
- Terminator, (MACRO)
 - colon (:), 210
 - right square bracket (]), 226
 - semicolon (;), 212
- Terms, numeric, 220, (MACRO)
- /TEST, 690, 766, (LINK-10)
- Testing of sharable segments, 408, (MONITOR CALLS)
- Test instructions, (SYSTEM REF.)
 - arithmetic, 63, 163
 - logical, 70, 165
- Text codes, summary, 323, (MACRO)
- Text input, 240, (MACRO)
- Time limit exceeded, 391, (MONITOR CALLS)
- TIMER UO, 373, 415, (MONITOR CALLS)
- Time sharing, 103, (SYSTEM REF.)
- Timing, 23, 178, (SYSTEM REF.)
 - clock, 115
 - interrupt, 99
- Timing information, 414, (MONITOR CALLS)
 - DATE, 415
 - MSTIME, 415
 - TIMER, 415
- TITLE pseudo-op, 230, (MACRO)
- TLC, 72, (SYSTEM REF.)
- TLN, 71, (SYSTEM REF.)
- TLO, 72, (SYSTEM REF.)
- TLZ, 71, (SYSTEM REF.)
- TMPCOR UO, 375, 412, (MONITOR CALLS)
- Total user core, 393, (MONITOR CALLS)
- Transfer-done interrupt, 611, (MONITOR CALLS)
- Transferring program control, 403, (MONITOR CALLS)
- Trapping, 387, (MONITOR CALLS)
- Traps, 13, (SYSTEM REF.)
- TRC, 70, (SYSTEM REF.)
- Triplet format, 759, (LINK-10)
- TRMNO. UO, 381, 529, (MONITOR CALLS)
- TRMOP. UO, 381, 530, (MONITOR CALLS)
- TRN, 70, (SYSTEM REF.)
- TRO, 71, (SYSTEM REF.)
- TRPJEN UO, 374, (MONITOR CALLS)
- TRPSET UO, 374, 455, (MONITOR CALLS)
- TRZ, 70, (SYSTEM REF.)
- TSC, 74, (SYSTEM REF.)
- TSN, 74, (SYSTEM REF.)
- TSO, 75, (SYSTEM REF.)
- TSZ, 74, (SYSTEM REF.)
- TTCALL UO, 370, 525, (MONITOR CALLS)
- Type-in modes, 873, 909, (DDT)
- Type-out modes, 871, 883, 889, 907, (DDT)
- Type-out switches, 683, (LINK-10)
- Typing errors, 876, 886, (DDT)
- Typing in, 884, 909, (DDT)
 - arithmetic expressions, 886, 911
 - numbers, 885, 909
 - symbolic instructions, 885, 909
 - text characters, 885, 910
- Typing, (LINK-10)
 - global symbols, 769
 - library search symbols, 706
 - undefined globals, 767
- Two half-words of data, entering, 239, (MACRO)
- Twos complement, 8, (SYSTEM REF.)
- Two-segment machine, 286, (MACRO)
- TWOSEG pseudo-op, 232, 286, (MACRO)
- /U, 690, (LINK-10)
- UFA, 59, (SYSTEM REF.)
- UFD, 551, (MONITOR CALLS)
- UFD privileges, 556, (MONITOR CALLS)
- UGETF UO, 371, 545, (MONITOR CALLS)
- UJEN UO, 371, 457, (MONITOR CALLS)
- Unary operators, 222, (MACRO)
- Unbuffered data modes, 465, 475, (MONITOR CALLS)
- /UNDEFINED, 690, 767, (LINK-10)
- Undefined, (LINK-10)
 - global requests, 752, 763, 767
 - global symbols, 705,
 - typing of globals, 767
 - undefined symbols, 656, 681, 767
- Unimplemented op codes, 383, 385, (MONITOR CALLS)
- Unimplemented operations, 86, (SYSTEM REF.)
- Unit of core allocation, 360, (MONITOR CALLS)
- Unit selection on output, 561, (MONITOR CALLS)
- Unit state codes, 610, (MONITOR CALLS)
- Universal date-time standard, 415, (MONITOR CALLS)
- Universal I/O index, 530, (MONITOR CALLS)
- UNIVERSAL name, 257, (MACRO)
- UNIVERSAL pseudo-op, 257, (MACRO)
- .UNIV symbol, 258, (MACRO)
- /UNLOAD, 690, 768, (LINK-10)
- Unloading tapes, 768, (LINK-10)
- Unlocking jobs, 397, (MONITOR CALLS)
- UNLOK.UO, 381, 397, (MONITOR CALLS)

- Unrestricted devices, 462, (MONITOR CALLS)
- Updating a file, 564, (MONITOR CALLS)
- Upper and lower case, 887, (DDT)
- Use of MTAPE operator, 506, (MONITOR CALLS)
- User, 77, (SYSTEM REF.)
- User address mapping, 361, (MONITOR CALLS)
- User core storage, 360, (MONITOR CALLS)
- User-defined operator, 245, (MACRO)
- User-defined symbols, 215, (MACRO)
- User file directories, 551, (MONITOR CALLS)
- User generated buffers, 469, (MONITOR CALLS)
- User in-out, 78, 102, (SYSTEM REF.)
- User I/O mode, 367, (MONITOR CALLS)
- User library, 667, (LINK-10)
- User mode, 359, 367, (MONITOR CALLS)
- User mode, 108, (SYSTEM REF.)
- User programming, 104, (SYSTEM REF.)
- User programming, introduction, 367, (MONITOR CALLS)
- User programming, disk, 563, (MONITOR CALLS)
- User program name word, 419, (MONITOR CALLS)
- User symbol table, 213, (MACRO)
- User UUOs, 369, (MONITOR CALLS)
- User virtual address space, 652, (LINK-10)
- USETI UUO, 371, 545, 584, (MONITOR CALLS)
- USETO UUO, 371, 545, 584, (MONITOR CALLS)
- Using, (LINK-10)
 - automatically, 656, 659
 - directly, 657, 675
- UTPCLR, 373, 546, (MONITOR CALLS)
- UUO, 91, (SYSTEM REF.)
- UUOs, 368, (MONITOR CALLS)
 - APRENB, 387
 - CHKACC, 588
 - CLOSE, 481
 - CORE, 401
 - CTLJOB, 520
 - DAEMON, 442
 - DATE, 415
 - DDTIN, 525
 - DDTOUT, 525
 - DEVCHR, 488
 - DEVLNM, 484
 - DEVNAM, 491
 - DEVPPN, 593
 - DEVSIZ, 490
 - DEVSTS, 487
 - DEVTYP, 489
 - DISK., 599
 - DSKCHR, 597
- UUOs, (Cont.)
 - ENTER, 471, 542, 565
 - EXIT, 386
 - GETLIN, 529
 - GETPPN, 416
 - GETSEG, 407
 - GETSTS, 480
 - GETTAB, 417
 - GOBSTR, 591
 - HIBER, 391
 - HPQ, 457
 - IN, 474
 - INBUF, 468
 - INIT, 465
 - INPUT, 474
 - JOBSTR, 590
 - JOBSTS, 519
 - LIGHTS, 442
 - LOCATE, 412
 - LOCK, 394
 - LOOKUP, 541, 567, 470
 - METER., 458
 - MSTIME, 415
 - MTAPE, 505, 546
 - MTCHR., 507
 - OPEN, 463
 - OTHUSR, 416
 - OUT, 474
 - OUTBUF, 468
 - OUTPUT, 474
 - PATH., 577
 - PEEK, 416
 - PJOB, 416
 - POKE., 417
 - REASSIGN, 484
 - RELEASE, 483
 - REMAP, 408
 - RENAME, 472, 543, 568
 - RESADV., 483
 - RESET, 461, 587
 - RTTRP, 444
 - RUN, 403
 - RUNTIM, 416
 - SEEK, 587
 - SETDDT, 385
 - SETNAM, 410
 - SETSTS, 480
 - SETUUO, 410
 - SETUWP, 403
 - SLEEP, 391
 - SPY, 416
 - STATO, 480
 - STATZ, 480
 - STRUUO, 588
 - SWITCH, 442
 - SYSPHY, 593
 - SYSSTR, 592
 - TIMER, 415
 - TMPCOR, 412
 - TRMNO., 529
 - TRMOP., 530

UUOs, (Cont.)
 TRPSET, 455
 TTCALL, 525
 UGETF, 545
 UJEN, 457
 UNLOK, 397
 USETI, 545, 584
 USETO, 545, 584
 UTPCLR, 546
 WAIT, 478
 WAKE, 392
 WHERE, 491
 UU.PHS, 382, 462, (MONITOR CALLS)

 /VALUE, 769, (LINK-10)
 Values, (LINK-10)
 assigning, 705
 initial default, 677, 678, 686
 VAR statements, 243, (MACRO)
 Variables tables, 434, (MONITOR CALLS)
 Verbosity, 770, 771, (LINK-10)
 /VERBOSITY, 690, 770, 775, 777, (LINK-10)
 Verification, 609, (MONITOR CALLS)
 Version number, 364, (MONITOR CALLS)
 Vestigial job data area, 365, (MONITOR CALLS)
 Virtual address, 360, (MONITOR CALLS)

 WAIT UUO, 372, 478, (MONITOR CALLS)
 Wake-enable bits, 392, (MONITOR CALLS)
 WAKE UUO, 378, 392, (MONITOR CALLS)
 WATCH bits, 411, 432, (MONITOR CALLS)
 WHERE UUO, 377, 491, (MONITOR CALLS)
 Word format, 193, (SYSTEM REF.)
 Write protect bit, 403, 409, (SYSTEM REF.)
 Writing reentrant user programs, 623, (MONITOR CALLS)

 X, 11, (SYSTEM REF.)
 XALL statement, 250, (MACRO)
 XCT, 78, (SYSTEM REF.)
 XLIST statement, 250, (MACRO)
 XOR, 44, (SYSTEM REF.)
 /XPN, 690, 772, (LINK-10)
 XPN file, creating and saving, 772, (LINK-10)
 XPUNGE pseudo-op statement, 245, (MACRO)
 XWD, 475, (MONITOR CALLS)
 XWD statement, 239, (MACRO)

 Y, 11, (SYSTEM REF.)

 Z statement, 236, (MACRO)
 /ZERO, 690, 774, (LINK-10)
 Zero length symbols, 695, (LINK-10)
 Zero-compression, 750, (LINK-10)
 Zero word, 236, (MACRO)

READER'S COMMENTS

DECsystem-10
ASSEMBLY LANGUAGE HANDBOOK
DEC-10-NRZC-D

Digital Equipment Corporation maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively we need user feedback: your critical evaluation of this document. Please give specific page and line references when appropriate.

ERRORS NOTED IN THIS PUBLICATION:

SUGGESTIONS FOR IMPROVEMENT OF THIS PUBLICATION:

MISSING DOCUMENTATION:

Is there sufficient documentation on associated system programs required for use of the software described in this manual? If not, what material is missing and where should it be placed?

Name _____ Date _____

Organization _____

Please describe your position _____

Street _____

City _____ State _____ Zip Code _____

..... Fold Here

..... Do Not Tear – Fold Here and Staple

FIRST CLASS
PERMIT NO. 33
MAYNARD, MASS.

BUSINESS REPLY MAIL
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES

Postage will be paid by:

Digital Equipment Corporation
Software Information Services
146 Main Street
Maynard, Massachusetts 01754

DIGITAL EQUIPMENT CORPORATION **digital** WORLD-WIDE SALES AND SERVICE

MAIN OFFICE AND PLANT

146 Main Street, Maynard, Massachusetts, U.S.A. 01754 • Telephone: From Metropolitan Boston: 646-8600 • Elsewhere: (617)-897-5111
TWX: 710-347-0212 Cable: DIGITAL MAYN Telex: 94-8457

UNITED STATES

NORTHEAST

REGIONAL OFFICE

275 Wyman Street, Waltham, Massachusetts 02154
Telephone: (617)-890-0320/0330 TWX: 710-324-6919

WALTHAM

15 Lunde Street, Waltham, Massachusetts 02154
Telephone: (617)-891-1030 TWX: 710-324-6919

CAMBRIDGE/BOSTON

899 Main Street, Cambridge, Massachusetts 02139
Telephone: (617)-491-6130 TWX: 710-320-1187

ROCHESTER

130 Allens Creek Road, Rochester, New York 14618
Telephone: (716)-461-1700 TWX: 710-253-3078

CONNECTICUT

240 Pomeroy Ave., Meriden, Conn. 06450
Telephone: (203)-237-8441/7468 TWX: 710-461-0054

MID-ATLANTIC — SOUTHEAST

REGIONAL OFFICE

U.S. Route 1, Princeton, New Jersey 08540
Telephone: (609)-452-2940 TWX: 510-685-2338

NEW YORK

95 Cedar Lane, Englewood, New Jersey 07631
Telephone: (201)-871-4984, (212)-594-8955, (212)-738-0447
TWX: 710-991-9721

NEW JERSEY

1259 Route 46, Parsippany, New Jersey 07054
Telephone: (201)-335-3300 TWX: 710-987-8319

PRINCETON

U.S. Route 1
Princeton, New Jersey 08540
Telephone: (609)-452-2940 TWX: 510-685-2338

LONG ISLAND

1 Huntington Quadrangle
Suite 1507 Huntington Station, New York 11748
Telephone: (516)-694-4131, (212)-895-8095

PHILADELPHIA

Station Square Three, Paoli, Pennsylvania 19301
Telephone: (215)-647-4900/4410 Telex: 510-668-8395

WASHINGTON

Executive Building
6811 Kenilworth Ave., Riverdale, Maryland 20840
Telephone: (301)-779-1800/752-8797 TWX: 710-826-9682

DURHAM/CHAPEL HILL

2704 Chapel Hill Boulevard
Durham, North Carolina 27707
Telephone: (919)-489-3347 TWX: 510-927-0912

ORLANDO

Suite 130, 7001 Lake Ellenor Drive, Orlando, Florida 32809
Telephone: (305)-851-4450 TWX: 810-850-0180

ATLANTA

2815 Clearview Place, Suite 100,
Atlanta, Georgia 30340
Telephone: (404)-451-3734/3735/3736 TWX: 810-757-4223

EUROPEAN HEADQUARTERS

Digital Equipment Corporation International Europe
81 Route de l'Aire
1211 Geneva 26, Switzerland
Telephone: 42 79 50 Telex: 22 683

FRANCE

Equipment Digital S.A.R.L.

PARIS

327 Rue de Charenton, 75 Paris 12, France
Telephone: 344-78-07 Telex: 21339

GRENOBLE

10 rue Auguste Reyher, F-38 Grenoble, France
Telephone: (76) 87 87 32 Telex: 32 882 F (Code 212)

GERMANY

Digital Equipment GmbH

MUNICH

8 Muenchen 13, Wallensteinplatz 2
Telephone: 0811-35031 Telex: 524-228

COLOGNE

5 Koeln, Bismarckstrasse 7,
Telephone: 0221-522181 Telex: 888-2289
Telegram: Flip Chip Koeln

FRANKFURT

6078 Neu-Isenburg 2
Am Forsthaus Grevenbruch 5-7
Telephone: 06102-5526 Telex: 41-78-82

HANNOVER

3 Hannover, Podbielskistrasse 102
Telephone: 0511-69-70-95 Telex: 922-952

AUSTRIA

Digital Equipment Corporation Ges.m.b.H

VIENNA

Mariahilferstrasse 136, 1150 Vienna 15, Austria
Telephone: 85 51 86

UNITED KINGDOM

Digital Equipment Co., Ltd.

U.K. HEADQUARTERS

Arkwright Road, Reading, Berks.
Telephone: 0734-583555 Telex: 84327

READING

The Evening Post Building, Tessa Road
Reading, Berks.

BIRMINGHAM

29/31, Birmingham Road, Sutton Coldfield, Warwick.
Telephone: (0444) 21-355 5501 Telex: 337 060

MANCHESTER

13 Upper Precinct, Walkden, Manchester M28 5AZ
Telephone: 061-790-8411 Telex: 668666

LONDON

Bilton House, Uxbridge Road, Ealing, London W.5.
Telephone: 01-579-2334 Telex: 22371

EDINBURGH

Shiel House, Craighill, Livingston,
West Lothian, Scotland
Telephone: 32705 / Telex: 727113

NETHERLANDS

THE HAGUE

Digital Equipment N.V.
Sir Winston Churchillaan 370
Rijswijk/The Hague, Netherlands
Telephone: 070-995-180 Telex: 32533

BELGIUM

BRUSSELS

Digital Equipment N.V./S.A.
108 Rue D'Arlon
1040 Brussels, Belgium
Telephone: 02-136258 Telex: 25297

MID-ATLANTIC — SOUTHEAST (cont.)

KNOXVILLE

6311 Kingdon Pike, Suite 21E
Knoxville, Tennessee 37919
Telephone: (615)-583-6571 TWX: 810-583-0123

CENTRAL

REGIONAL OFFICE

1850 Frontage Road, Northbrook, Illinois 60062
Telephone: (312)-493-2500 TWX: 910-686-0655

PITTSBURGH

400 Penn Center Boulevard
Pittsburgh, Pennsylvania 15235
Telephone: (412)-243-9404 TWX: 710-797-3657

CHICAGO

1850 Frontage Road, Northbrook, Illinois 60062
Telephone: (312)-498-2500 TWX: 910-686-0655

ANN ARBOR

230 Huron View Boulevard, Ann Arbor, Michigan 48103
Telephone: (313)-761-1150 TWX: 810-223-6053

INDIANAPOLIS

21 Beachway Drive — Suite G
Indianapolis, Indiana 46224
Telephone: (317)-243-8341 TWX: 810-341-3436

MINNEAPOLIS

Suite 111, 8030 Cedar Avenue South,
Minneapolis, Minnesota 55420
Telephone: (612)-854-6562-3-4-5 TWX: 910-578-2818

CLEVELAND

Park Hill Bldg., 35104 Euclid Ave.
Willoughby, Ohio 44094
Telephone: (216)-945-8484 TWX: 810-427-2808

ST. LOUIS

Suite 110, 115 Progress Pky., Maryland Heights,
Missouri 63043
Telephone: (314)-878-4310 TWX: 910-784-0831

DAYTON

3101 Kettering Blvd., Dayton, Ohio 45439
Telephone: (513)-299-7377 TWX: 810-459-1676

MILWAUKEE

8531 W. Capitol Drive, Milwaukee, Wisconsin 53222
Telephone: (414)-463-9110 TWX: 910-262-1199

DALLAS

8855 North Stemmons Freeway
Dallas, Texas 75247
Telephone: (214)-638-4880 TWX: 810-881-4000

HOUSTON

3417 Milam Street, Suite A, Houston, Texas 77002
Telephone: (713)-524-2961 TWX: 810-881-1651

INTERNATIONAL

SWEDEN

Digital Equipment Aktiebolag

STOCKHOLM

Vretenvagen 2, S-171 54 Solna, Sweden
Telephone: 98 13 80 Telex: 170 50
Cable: Digital Stockholm

NORWAY

Digital Equipment

OSLO

c/o Firma Service
Waldemarstrasse 84-B-86
Oslo 1, Norway
Telephone: 37 19 85, 37 02 30 Telex: 166 43

DENMARK

Digital Equipment Corporation

COPENHAGEN

Vesterbrogade 140, 1620 Copenhagen V

SWITZERLAND

Digital Equipment Corporation S.A.

GENEVA

81 Route de l'Aire
1211 Geneva 26, Switzerland
Telephone: 42 79 50 Telex: 22 683

ZURICH

Scheuchzerstrasse 21
CH-8008 Zurich, Switzerland
Telephone: 01/60 35 66 Telex: 56059

ITALY

Digital Equipment S.p.A.

MILAN

Corso Garibaldi 49, 20121 Milano, Italy
Telephone: 872 748 694 384 Telex: 33815

SPAIN

MADRID

Atalo Ingenieros S.A., Enrique Larreta 12, Madrid 16
Telephone: 215 35 43 / Telex: 27246

BARCELONA

Atalo Ingenieros S.A., Ganduxer 78, Barcelona 6
Telephone: 221 44 66
Digital Equipment Corporation Ltd.

AUSTRALIA

Digital Equipment Australia Pty. Ltd.

SYDNEY

P.O. Box 491, Crows Nest
N.S.W. Australia 3065
Telephone: 439-2586 Telex: AA20740
Cable: Digital, Sydney

MELBOURNE

60 Park Street, South Melbourne, Victoria, 3205
Telephone: 696-142 Telex: AA40616

PERTH

643 Murray Street
West Perth, Western Australia 6005
Telephone: 214-983 Telex: AA92140

BRISBANE

139 Merivale Street, South Brisbane
Queensland, Australia 4101
Telephone: 444-047 Telex: AA40616

ADELAIDE

6 Montrose Avenue
Norwood, South Australia 5087
Telephone: 631-333 Telex: AA82825

CENTRAL (cont.)

NEW ORLEANS

3100 Ridgelaque Drive, Suite 108
Metairie, Louisiana 70002
Telephone: 504-837-0257

WEST

REGIONAL OFFICE

310 Sequel Way, Sunnyvale, California 94088
Telephone: (408)-735-9200

ANAHEIM

801 E. Ball Road, Anaheim, California 92805
Telephone: (714)-778-6932/8730 TWX: 910-591-1188

WEST LOS ANGELES

1510 Cotner Avenue, Los Angeles, California 90025
Telephone: (213)-479-3791/4318 TWX: 910-342-6669

SAN DIEGO

3444 Hancock Street
San Diego, California 92110
Telephone: (714)-296-0591, 0593 TWX: 910-335-1230

SAN FRANCISCO

1400 Terra Bella
Mountain View, California 94040
Telephone: (415)-964-6200 TWX: 910-373-1286

PALO ALTO

560 San Antonio Rd., Palo Alto, California 94306
Telephone: (415)-969-6200 TWX: 910-373-1296

OAKLAND

7850 Edgewater Drive
Oakland, California 94621
Telephone: (415)-635-5453/7830 TWX: 910-366-7238

ALBUQUERQUE

6303 Indian School Road, N.E.
Albuquerque, N.M. 87110
Telephone: (505)-296-5411/5426 TWX: 910-988-0614

DENVER

2305 South Colorado Blvd., Suite #5
Denver, Colorado 80222
Telephone: (303)-757-3332/758-1658/758-1659
TWX: 910-931-2650

SEATTLE

1521 130th N.E., Bellevue, Washington 98005
Telephone: (206)-454-4058/455-5404 TWX: 910-443-2308

SALT LAKE CITY

431 South 3rd East, Salt Lake City, Utah 84111
Telephone: (801)-328-9838 TWX: 910-925-5834

PHOENIX

4358 East Broadway Road
Phoenix, Arizona 85040
Telephone: (602)-288-3488 TWX: 910-950-4891

PORTLAND

Suite 188
5319 S.W. Canyon Court, Portland, Ore. 97221
Telephone: (503) 297-3781/3785

NEW ZEALAND

Digital Equipment Corporation Ltd.

AUCKLAND

Hilton House, 430 Queen Street, Box 2471 A,
Auckland, New Zealand
Telephone: 75-533

CANADA

Digital Equipment of Canada, Ltd.

CANADIAN HEADQUARTERS

150 Rosamond Street, Carleton Place, Ontario
Telephone: (613)-257-2615 Telex: 610-581-1651

OTTAWA

120 Holland Street, Ottawa 3, Ontario K1Y 0X7
Telephone: (613)-725-2193 TWX: 610-582-8807

TORONTO

230 Lakeshore Road East, Port Credit, Ontario
Telephone: (416)-274-1241 TWX: 610-492-4308

MONTREAL

9675 Cote de Liesse Road
Dorval, Quebec, Canada 760
Telephone: 514-636-9393 TWX: 610-422-4124

EDMONTON

5531 - 103 Street
Edmonton, Alberta, Canada
Telephone: (403)-434-9333 TWX: 610-831-2248

VANCOUVER

Digital Equipment of Canada, Ltd.
2210 West 12th Avenue
Vancouver 9, British Columbia, Canada
Telephone: (604)-736-5618 TWX: 610-929-2008

ARGENTINA

BUENOS AIRES

Cossin S.A.
Virrey del Pino 4071, Buenos Aires
Telephone: 52-3185 Telex: 012-2284

VENEZUELA

CARACAS

Cossin S.A. (Sales only)
Apartado 50939
Salina Grande No. 1, Caracas
Telephone: 72-9637 Cable: INSTRUVEN

CHILE