

12. Remove nonprocessor grant (NPG) wirewrap jumper (CA1 -- CB1) from row C of SPC slot selected for adapter module installation (Figure 2-3).
13. Install bottom cover. Carefully return mounting box to operating (horizontal) position.
14. If there is a module (or modules) in the next slot to the right of the selected mounting slot (facing cabinet), remove module(s) from that slot.

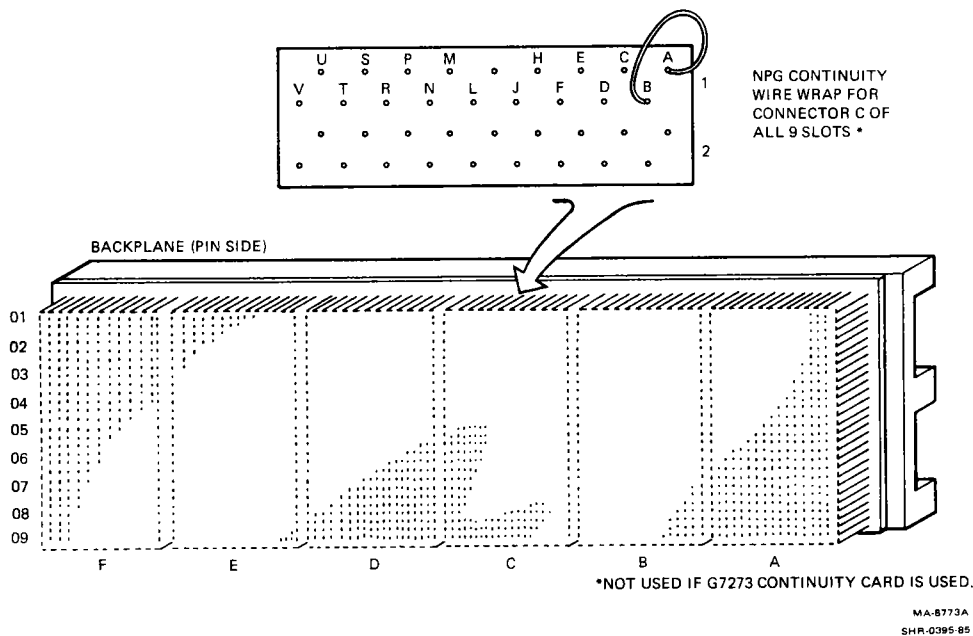


Figure 2-3 NPG Jumper