


15. Install shields on printed wiring side of the removed module(s) (Figure 2-4). Press pad end of each shield onto printed circuit etch.
16. Replace shielded module(s) in original slot.
17. With component side at right, carefully insert controller module into front card slide.

CAUTION: Plugging the adapter module in backwards damages the computer backplane.

18. When module connectors engage with the backplane, press both module handles at the same time until connectors are fully seated.

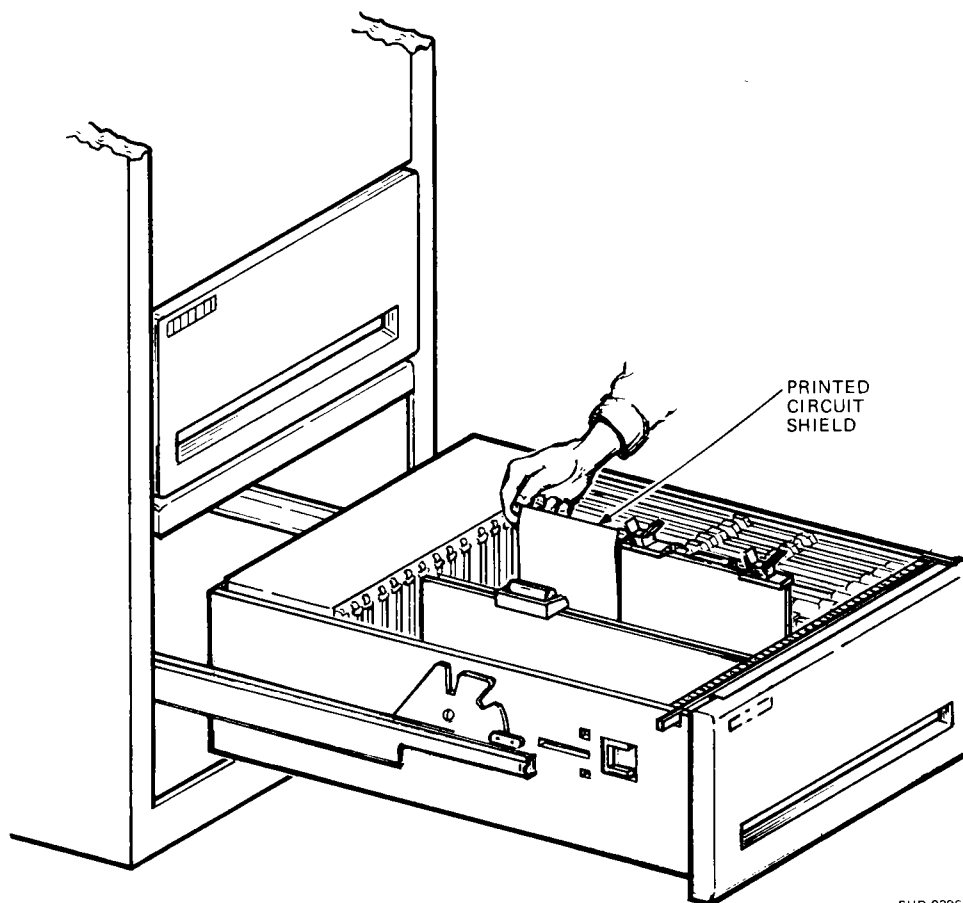

SHR-0396-85

Figure 2-4 Installing Shields on Modules