


18. At rear of cabinet, loosen screws securing side frame cable retainer (Figure 2-8). Swing slotted end of retainer out of the way.
19. Bend the cable 90 degrees and slide cable under retainer as shown (Figure 2-8).
20. Swing retainer back over cable. Engage slotted end and secure.
21. Install connector panel and internal interface cable connector on I/O distribution panel as follows.
 - a. Remove one blank insert on the I/O distribution panel (Figure 2-8).
 - b. Mount connector panel as shown (Figure 2-8) using two 4-32 shoulder screws (PN 12-19534-1) and washers (PN 90-6688). Tighten screws using small screwdriver. See also Figure 3-5.

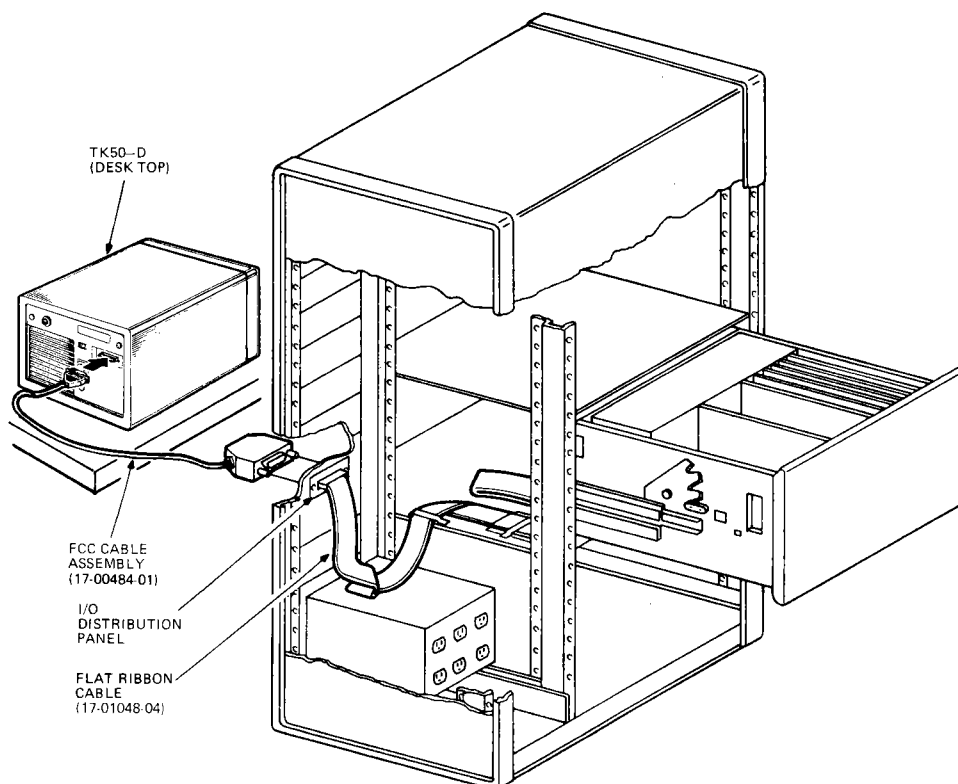

SHR 0400 85

Figure 2-8 Routing Ribbon Cable to Bulkhead