

8. Also in the same SPC slot, remove the nonprocessor grant (NPG) jumper (CA1 to CB1) on the pin side of the backplane (Figure 3-4).
9. Carefully insert the M7547 module into the SPC slot.

NOTE: Check the CPU for compliance with FCC specifications. The CPU should have the I/O bulkhead connector frame. If this frame is not installed, perform steps 10 and 11. Otherwise, go directly to step 12.

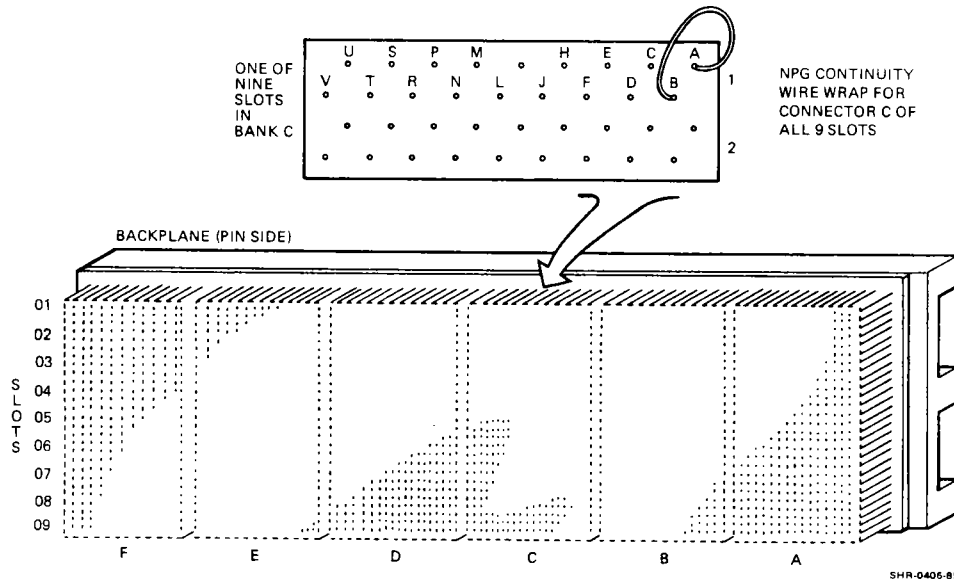


Figure 3-4 NPG Jumper