

DEC 2000 Model 300 AXP

Upgrade Information

Order Number: EK-D23AX-UP. A01

First Printing, December 1993

Digital Equipment Corporation makes no representations that the use of its products in the manner described in this publication will not infringe on existing or future patent rights, nor do the descriptions contained in this publication imply the granting of licenses to make, use, or sell equipment or software in accordance with the description.

Possession, use, or copying of the software described in this publication is authorized only pursuant to a valid written license from Digital or an authorized sublicensor.

© Digital Equipment Corporation 1993. All Rights Reserved.

The following are trademarks of Digital Equipment Corporation: Alpha AXP, AXP, Bookreader, DEC, DECAudio, DECchip, DECconnect, DEC GKS, DECpc, DEC PHIGS, DECstation, DECsystem, DECsystem 3100, DECwindows, DECwrite, DELNI, Digital, MicroVAX, MicroVAX I, MicroVAX II, OpenVMS, RX, ThinWire, TURBOchannel, ULTRIX, VAX, VAX DOCUMENT, VAXcluster, VAXstation, the AXP logo, and the DIGITAL logo.

Motif is a registered trademark of Open Software Foundation, Inc., licensed by Digital.

FCC Notice: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

S2410

This document was prepared using VAX DOCUMENT Version 2.1.

Contents

1 Options You Can Upgrade

Purpose of Guide	1-1
Options You Can Upgrade	1-1
Warning	1-2

2 Upgrading a DECsystem 5000 Model 133/150

Topics Covered in This Chapter	2-1
Upgrade Procedure	2-1
Step 1: If Your System Has Factory-Installed Drives	2-1
Step 2: Shut Down System	2-2
Step 3: Disconnect Cables	2-2
Step 4: Remove System Cover	2-3
Step 5: Remove Front Drive Panel	2-4
Step 6: Remove Removable Media Drives	2-5
Step 7: Remove Fixed Disk Drives	2-5
Step 8: Set the SCSI IDs on the Drives	2-6
Step 9: Install New Mounting Bracket	2-6
Step 10: Complete the Upgrade	2-6
Step 11: Return Your DECsystem to Digital	2-6

3 Upgrading a DECstation 5000 Model 20/25/33/50

Topics Covered in This Chapter	3-1
External Options Only	3-1
Upgrade Procedure	3-1
Step 1: If Your System Has Factory-Installed Drives	3-1
Step 2: Shut Down System	3-2
Step 3: Disconnect Cables	3-2
Step 4: Complete the Upgrade	3-3
Step 5: Return Your DECstation to Digital	3-3

4 Upgrading a DECsystem 3100

Topics Covered in This Chapter	4-1
External Options Only	4-1
Upgrade Procedure	4-1
Step 1: If Your System Has Factory-Installed Drives	4-1
Step 2: Shut Down System	4-2
Step 3: Disconnect Cables	4-2
Step 4: Set SCSI IDs on Drives	4-3
Step 5: Complete the Upgrade	4-3
Step 6: Return Your DECsystem to Digital	4-3
Step 7: Update Service Contract	4-3

5 Upgrading a DECsystem 5100

Topics Covered in This Chapter	5-1
Upgrade Procedure	5-1
Step 1: If Your System Has Factory-Installed Drives	5-1
Step 2: Shut Down System	5-2
Step 3: Disconnect the Cables	5-2
Step 4: Remove System Cover	5-3
Step 5: Remove Upper Drive Mounting Panel	5-3
Step 6: Remove EMI Shield, If Present	5-5
Step 7: Remove Communications Option, If Present	5-7
Step 8: Remove Lower Drive Mounting Panel	5-9
Step 9: Remove Device	5-10
Step 10: Set SCSI IDs on Drives	5-11
Step 11: Install New Mounting Bracket	5-11
Step 12: Complete the Upgrade	5-11
Step 13: Return Your DECsystem to Digital	5-11

6 Upgrading a DECsystem 5500

Topics Covered in This Chapter	6-1
Upgrade Procedure	6-1
Step 1: If Your System Has Factory-Installed Drives	6-1
Step 2: Shut Down System	6-2
Step 3: Complete the Upgrade	6-4
Step 4: Return Your DECsystem to Digital	6-4

7 Upgrading a MicroVAX 3100 Model 30

Topics Covered in This Chapter	7-1
Upgrade Procedure	7-1
Step 1: If Your System Has Factory-Installed Drives	7-1
Step 2: Shut Down System	7-2
Step 3: Disconnect Cables	7-2
Step 4: Remove System Cover	7-3
Step 5: Remove Fixed Disk Drives	7-3
Step 6: Remove Removable-Media Drive	7-4
Step 7: Set the SCSI IDs on the Drives	7-4
Step 8: Install New Mounting Bracket	7-5
Step 9: Complete the Upgrade	7-5
Step 10: Return Your MicroVAX System to Digital	7-5

8 Upgrading a MicroVAX 3300/3400

Topics Covered in This Chapter	8-1
Upgrade Procedure	8-1
Step 1: Move Tabletop Enclosure	8-1
Step 2: Complete the Upgrade	8-1
Step 3: Return Your MicroVAX to Digital	8-1

9 Upgrading a VAX 11/7xx, MicroVAX 2000, MicroVAX I and II, DECsystem 5400

No Options Can Be Upgraded	9-1
Upgrade Procedure	9-1
Step 1: Return Your Current System to Digital	9-1
Step 2: Update Service Contract	9-1

10 Upgrading a MicroVAX 3100 Model 40/80/90, VAX 4000 Model 100

Topics Covered in This Chapter	10-1
Upgrade Procedure	10-1
Step 1: If Your System Has Factory-Installed Drives	10-1
Step 2: Shut Down System	10-2
Step 3: Disconnect Cables	10-2
Step 4: Remove System Cover	10-2
Step 5: Remove Fixed Disk Drives	10-3
Step 6: Remove the Upper Drive Shelf	10-4
Step 7: Remove Removable-Media Drive	10-4

Step 8: Set the SCSI IDs on the Drives	10-5
Step 9: Install New Mounting Bracket	10-5
Step 10: Complete the Upgrade	10-5
Step 11: Return Your MicroVAX to Digital	10-5

Figures

5-1	Cables and Connectors	5-7
5-2	Location of Captive Screws and Standoffs	5-8
5-3	Drive Mounting Panel	5-10
6-1	Keylock Positions	6-3

1

Options You Can Upgrade

Purpose of Guide

The purpose of this guide is to tell customers and Digital Services which options can be removed from the current system and used, either internally or externally, in their DEC 2000 Model 300 AXP system. Step-by-step instructions are provided for removing the options.

Options You Can Upgrade

The following devices are supported in the upgrade to the DEC 2000 Model 300 AXP:

RZ24L	245 MB 3.5-inch SCSI disk drive
RZ25	426 MB 3.5-inch SCSI disk drive
RZ26	1.05 GB 3.5-inch SCSI disk drive
RRD42	600 MB CD-ROM
TLZ06	4 GB tape drive
TZK10	52 MB tape drive
VRC16-HA	Color monitor
SZ12/RZ5x	Dual drive expansion box
BA353	Desktop expansion enclosure
BA350	Pedestal expansion enclosure

Options You Can Upgrade

Warning

Attach an antistatic wrist strap before you begin this upgrade. As you remove options from your system, place them on an antistatic mat.

Static discharge can cause irreparable damage to options modules.

2

Upgrading a DECsystem 5000 Model 133/150

Topics Covered in This Chapter

- Upgrading your system
- Removing drives
- Completing the upgrade

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 2000 AXP system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To display the SCSI ID settings of the drives in your system:

1. Enter the command to shut down the software and put the system in console mode: `shutdown -h now`

Upgrade Procedure

2. Enter cnfg 3 at the console prompt (>>>). A screen similar to the following appears:

```
>>> cnfg 3
3: KN02  DEC  Vn.n  TCF0 (8 MB)
                               (enet: 08-00-2b-30-14-df)
                               (SCSI = 7)

-----
      DEV  PID      VID  REV  SCSI ID
-----
rz2    RZ24 (C) DEC DEC 0700  DIR
rz5    Rrd42 (C) DEC DEC 0700  CD-ROM
```

This display shows an RZ24 drive set to SCSI ID 2 and an RRD42 drive set to SCSI ID 5.

Write down the names of your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

Turn off the system unit by pressing O on the On/Off switch on the back of the system unit.


Caution: After you turn off the system, wait 15 seconds before you unplug the power cord.

Step 3: Disconnect Cables

Disconnect all the cables from the back of the system unit. Disconnect the power cord from the wall outlet and then from the system unit.

**Step 4:
Remove
System Cover**


1. Loosen the captive screw on the back of the system unit. This captive screw can be loosened but not removed.
2. Grasp each side of the cover with your hands, and pull the cover straight toward the front about 5.5 cm (2 inches). Pull the cover up and set it aside.

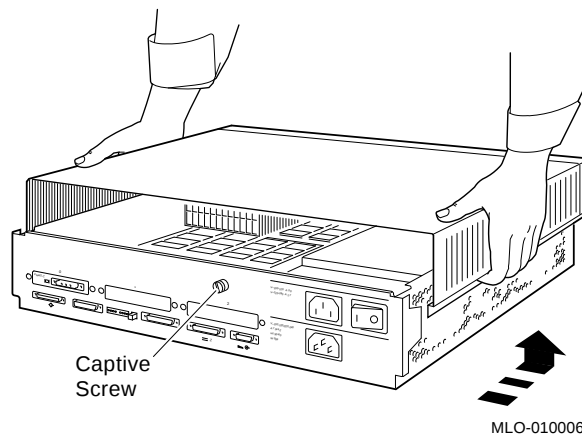

Upgrade Procedure

Step 5: Remove Front Drive Panel

1. Loosen the two captive screws that hold the front drive panel in place.
2. Loosen the two captive screws on the back of the drive bracket.
3. If there is a drive inside the bracket, disconnect the SCSI and power cables from the drive.

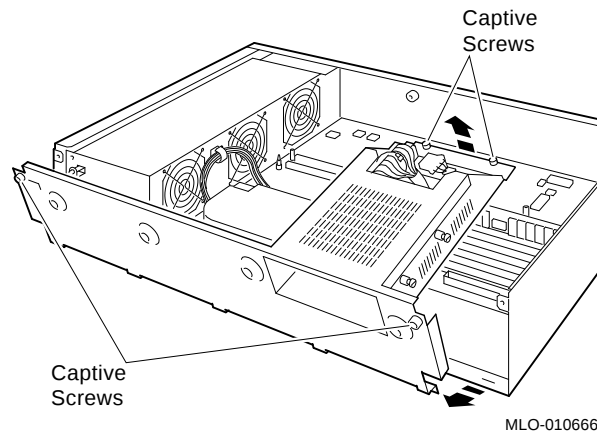


4. Pull up carefully from the back of the drive bracket. As you raise the end of the bracket, you can pull the disconnected ends of the cables through the cutout in the bracket.
5. Release the cables from the cable clamps on the inside of the front panel.
6. Set the front panel aside. Handle it carefully if it contains a drive.

**Step 6:
Remove
Removable
Media Drives**

1. Loosen the captive screws on either side of the drive bracket.
2. Slide the drive out of the bracket and through the opening in the front panel.
3. Set the drive aside on an antistatic mat.

**Step 7:
Remove Fixed
Disk Drives**

1. Press down on the disk drive and unlock the sliding latch.
2. Lift the drive off the mounting post and out of the chassis cutouts.

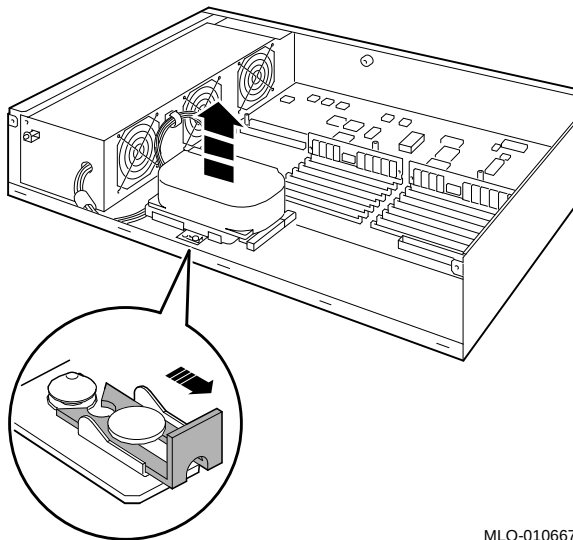

MLO-010667

3. Unplug the power cable and SCSI cable from the drive. Pull on the SCSI cable connector flap to remove the connector.
4. Set the drives aside on an antistatic mat.
5. Put all the disconnected ends of the cables back into the system unit.
6. Remove all drive mounting brackets by removing the four screws that secure the drive to the mounting bracket.

Upgrade Procedure

Step 8: Set the SCSI IDs on the Drives

If your DEC 2000 AXP system has a factory-installed disk drive, it is set to SCSI ID 0. Check the SCSI ID settings you noted earlier. If one of the drives you are upgrading is also set to SCSI ID 0, change that setting.

Settings for drives can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 9: Install New Mounting Bracket

You must install the mounting brackets included in your upgrade kit onto the drives you remove from your current system. Instructions for installing the mounting brackets are in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 10: Complete the Upgrade

1. Instructions for installing options that you have removed from your current system can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*. Follow the instructions in the *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* to complete the upgrade.
2. Update the customer service contract to the DEC 2000 Model 300 AXP system.

Step 11: Return Your DECsystem to Digital

Return your DECsystem and any devices that are not upgradeable to Digital.

1. Pack the DECsystem and devices securely in packing material.
2. Attach the return-address label that was in your upgrade kit.

3

Upgrading a DECstation 5000 Model 20/25/33/50

Topics Covered in This Chapter

- Upgrading your system
- Completing the upgrade

External Options Only

You can only upgrade expansion boxes from your DECstation 5000 Model 20/25/33/50 to the DEC 3000 Model 300 AXP.

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 3000 AXP system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To display the SCSI ID settings of the drives in your expansion box:

1. Enter the command to shut down the software and put the system in console mode: `shutdown -h now`

Upgrade Procedure

2. Enter cnfg 3 at the console prompt (>>>). A screen similar to the following appears:

```
>>> cnfg 3
3:      KN02  DEC  Vn.n    TCF0                (12 MB)
-----
      DEV  PID      VID    REV    SCSI ID
-----
      rz2   RZ24  (C) DEC    0700    DIR
      rz5   RX26  (C) DEC    0700    SEQ
```

This display shows an RZ24 drive set to SCSI ID 2 and an RX26 drive set to SCSI ID 5.

Write down the names of your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

Turn off the system unit by pressing O on the On/Off switch on the back of the system unit.

Disconnect the power cord from the wall outlet and then from the system unit.

Caution: After you turn off the system, wait 15 seconds before you unplug the power cord.

Step 3: Disconnect Cables

Disconnect all the cables from the back of the system unit.

Upgrade Procedure

Step 4: Complete the Upgrade

1. Instructions for installing options that you have removed from your current system can be found in the *DECpc AXP 150 and DEC 3000 Model 300 AXP Customer Technical Information*. Follow the instructions in the *DECpc AXP 150 and DEC 3000 Model 300 AXP User Information* to complete the upgrade.
2. Update the customer service contract to the DEC 3000 Model 300 AXP system.

Step 5: Return Your DECstation to Digital

Return your DECstation and any devices that are not upgradeable to Digital.

1. Pack the DECstation and devices securely in packing material.
2. Attach the return-address label that was in your upgrade kit.

4

Upgrading a DECsystem 3100

Topics Covered in This Chapter

- Upgrading your system
- Completing the upgrade

External Options Only

You can only upgrade expansion boxes from your DECsystem 3100 to the DEC 2000 Model 300 AXP.

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 2000 AXP system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To display the SCSI ID settings of the drives in your expansion box:

1. Enter the following command to shut down the software and put the system in console mode: `shutdown -h now`

Upgrade Procedure

2. Enter test -c at the console prompt (>>>). A screen similar to the following appears:

```
>>> test -c
.
.
Unit(2) Device type  0 DISK
        RME                0x0
        Version            1
        Response data format 1 CCS
        Additional length   31
        Vendor              DEC
        Product identification RZ24  (C)  DEC
        Firmware revision level 0700
Unit(1)
Unit(0) Device type  0 DISK
        RME                0x0
        Version            1
        Response data format 1 CCS
        Additional length   31
        Vendor              DEC
        Product identification RZ24  (C)  DEC
        Firmware revision level 0700

>>
```

This display shows one RZ24 set to SCSI ID 0 and a second RZ24 set to SCSI ID 2.

Write down the names of your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

Turn off the system unit. Disconnect the power cord from the wall outlet and then from the system unit.

Caution: After you turn off the system, wait 15 seconds before you unplug the power cord.

Step 3: Disconnect Cables

Disconnect all the cables from the back of the system unit.

Upgrade Procedure

Step 4: Set SCSI IDs on Drives

If your DEC 2000 AXP system has a factory-installed disk drive, it is set to SCSI ID 0.

Check the SCSI ID settings you noted earlier. If one of the drives you are upgrading is set to SCSI ID 0, then change that setting. SCSI settings can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 5: Complete the Upgrade

Follow the instructions found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information* and *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* to complete the upgrade.

Step 6: Return Your DECsystem to Digital

Return your DECsystem and any devices that are not upgradeable to Digital.

1. Pack the DECsystem and devices securely in packing material.
2. Attach the return-address label that was in your upgrade kit.

Step 7: Update Service Contract

Update the customer service contract to the DEC 2000 Model 300 AXP system.

5

Upgrading a DECsystem 5100

Topics Covered in This Chapter

- Upgrading your system
- Removing drives
- Completing the upgrade

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 2000 AXP system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To display the SCSI ID settings of the drives in your DECsystem:

1. Enter the command to shut down the software and put the system in console mode: `shutdown -h now`
2. Enter `conf -s` at the console prompt (`>>>`). A screen similar to the following appears:

```
>>> conf -s
.
.
scsi peripherals
  unit  type      product      removable/fixed  capacity
    0   disk      RZ56 (C) DEC  fixed           634 MBs
    3   disk      RZ24         fixed           209 MBs
    5   tape      TZ30         removable
    7   host adapter
```

Upgrade Procedure

This display shows an RZ56 set to SCSI ID 0, an RZ24 set to SCSI ID 3, and a TZ30 set to SCSI ID 5.

Write down the names of your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

Set the On/Off switch on the back of the system unit to the off (O) position.


Caution: After you turn off the system, wait 15 seconds before you unplug the power cord.

Step 3: Disconnect the Cables

Disconnect all the cables connected to the system unit.

**Step 4:
Remove
System Cover**

1. Loosen the two cover screws on the back of the system unit.
2. Slide the cover forward, and up, off the system unit.

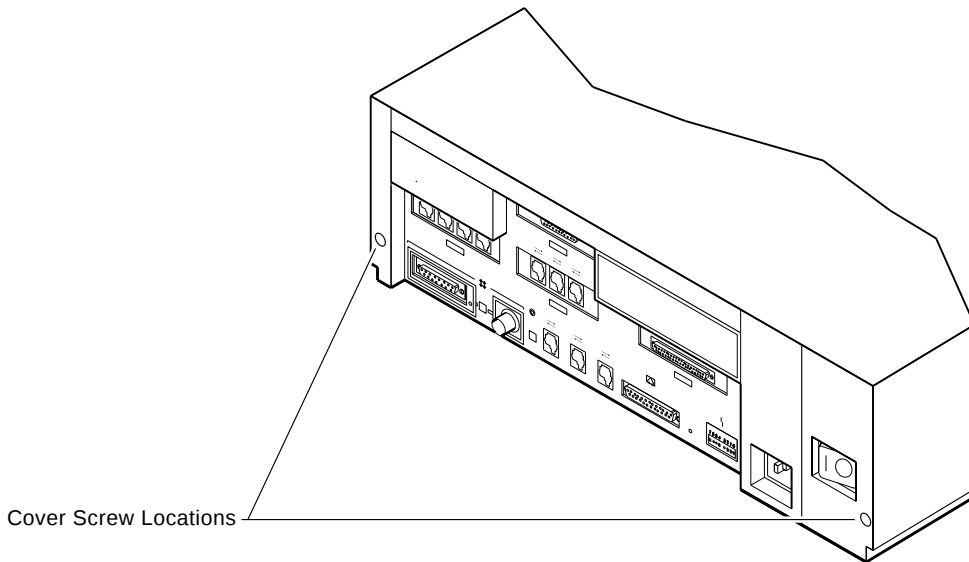

RE_EN05175A_90


**Step 5:
Remove Upper
Drive Mounting
Panel**

Depending on your system configuration, the upper drive mounting panel can contain one, two, or three hard disk drives. These drives can be either RZ23 or RZ24 disk drives.

To remove the upper drive mounting panel:


1. Disconnect the power cable and the SCSI cable from the drives on the upper mounting panel.
2. Loosen the four captive screws located on the upper drive mounting panel.

Upgrade Procedure

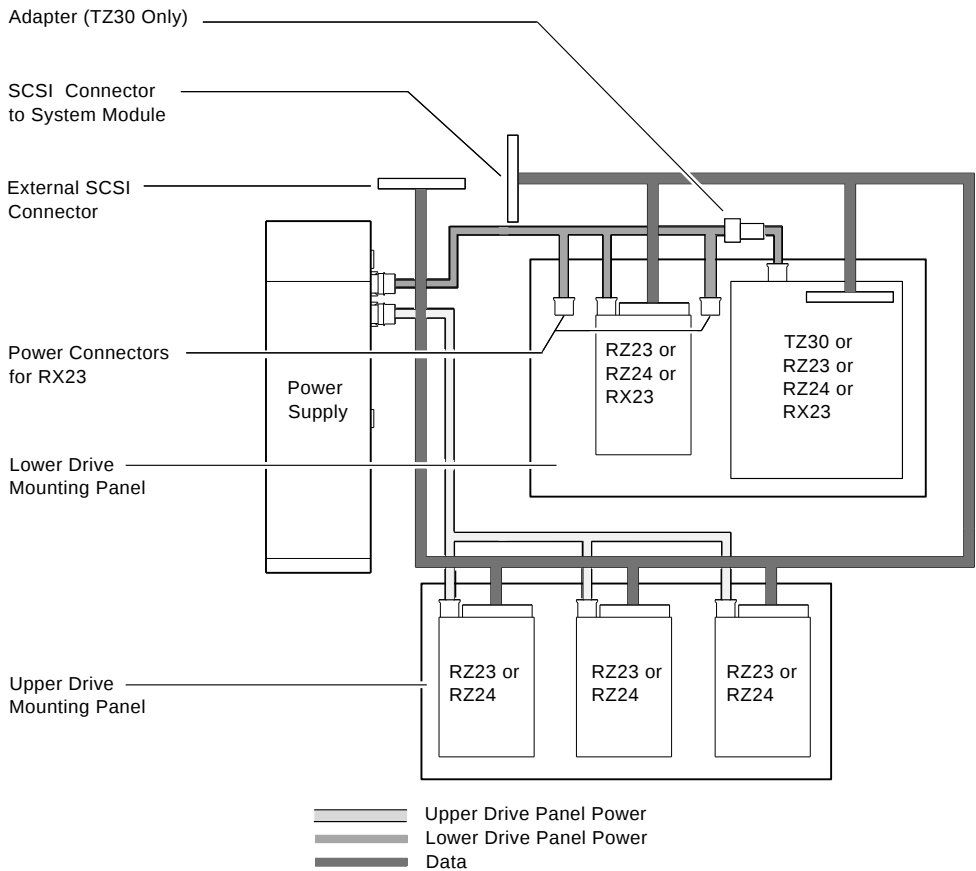

RE_EN05176A_90

Upgrade Procedure

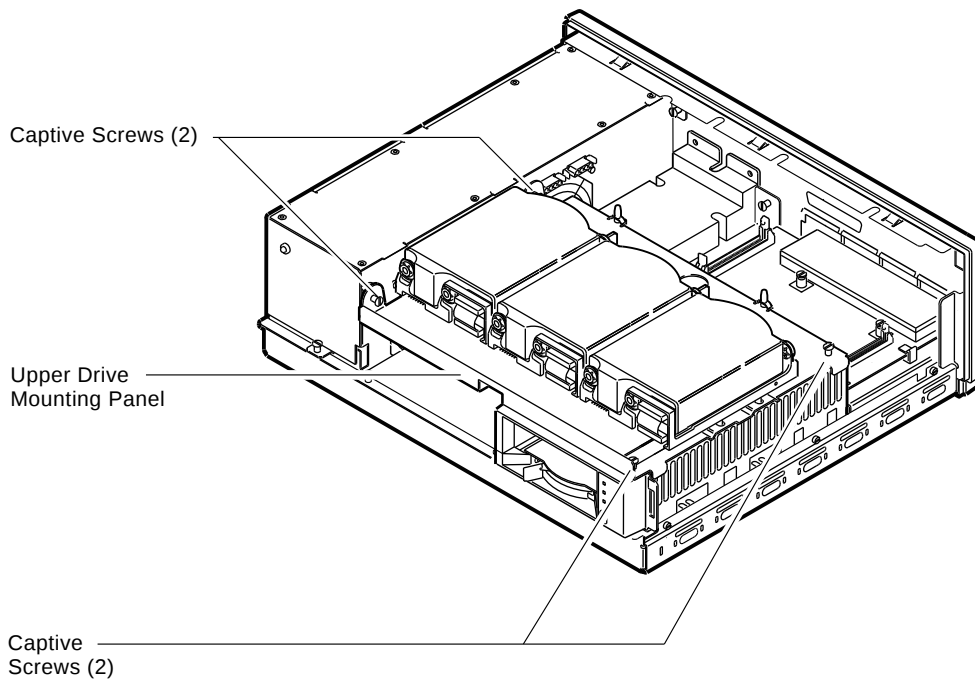

RE_EN05177A_90

3. Lift the upper drive mounting panel from the lower drive mounting panel and gently set it aside.

Step 6: Remove EMI Shield, If Present

Your system may have an EMI shield located between the upper and lower drive shelves. The shield has several "fingers" touching the upper shelf.

Warning

Do not pull the EMI shield directly up out of the system. This may cause injury.

Upgrade Procedure


To remove the shield from the lower shelf:

1. From the front of the enclosure, grasp the shield with both hands near the middle and gently pull it forward (towards the devices on the lower shelf, if present).

Lift the shield toward the front of the enclosure, simultaneously pulling forward to release the two tabs under the shelf.

2. Remove the SCSI and power cables from the slots in the EMI shield. Set the shield aside.

Figure 5-1 Cables and Connectors

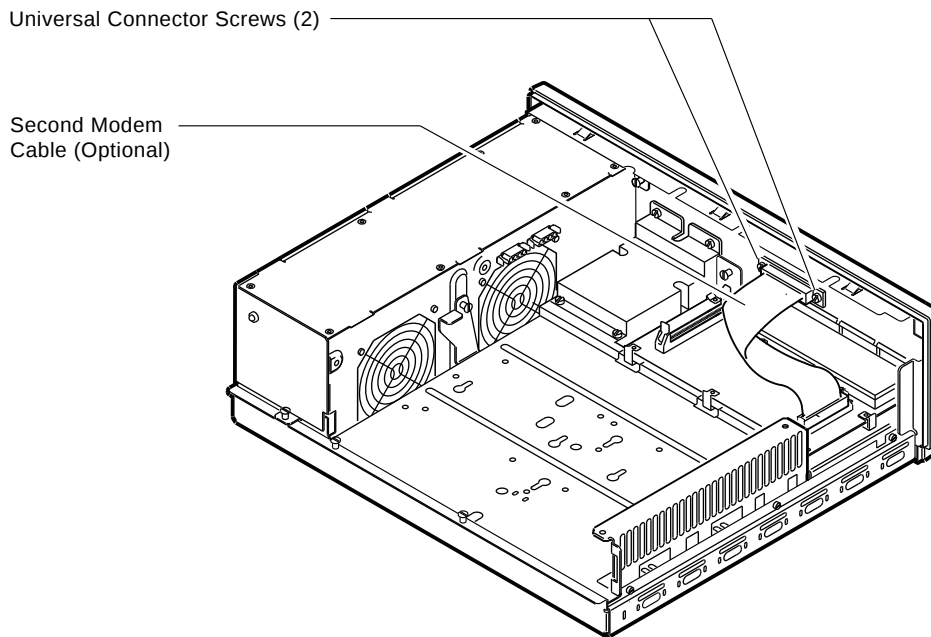

RE_EN05178A_90

**Step 7:
Remove
Communications
Option, If
Present**

Your system may have a communications option installed on the lower drive shelf.


To remove this option:

1. Disconnect the cable from the second modem port connector on the option.
2. Remove the two universal connector screws, and then remove the second modem cable from the system unit.
3. Disconnect the signal cable from the system module.
4. Unscrew the three captive screws on the communications module.

Upgrade Procedure

5. Release the communications module from the five standoffs and remove it from the system unit.

Figure 5-2 Location of Captive Screws and Standoffs

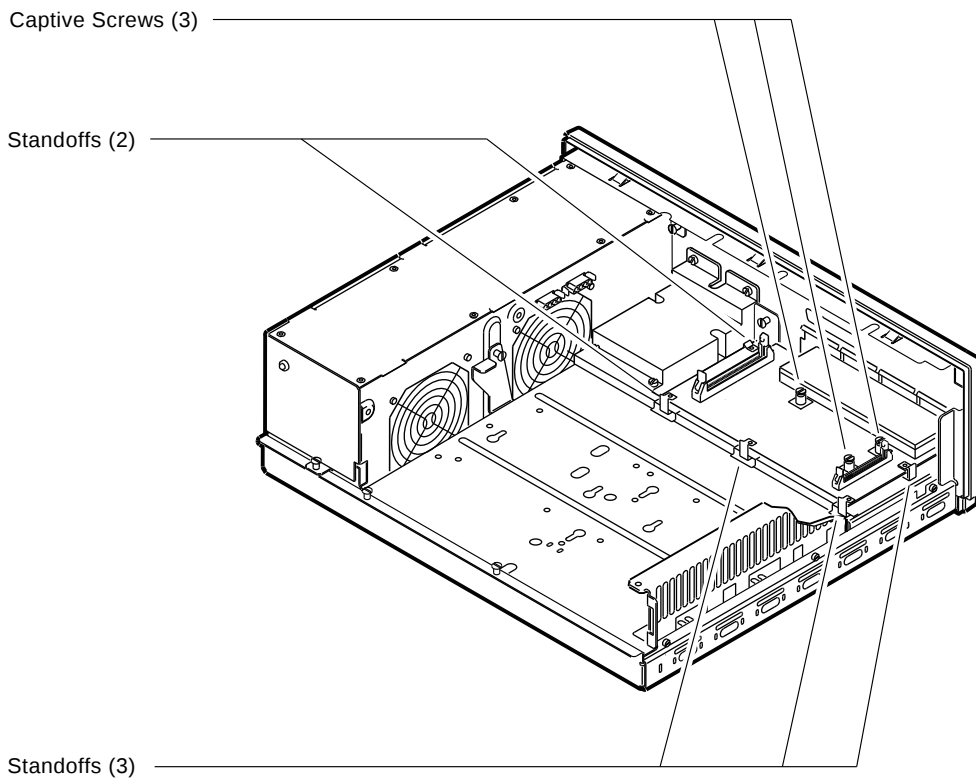


RE_EN05179A_90

**Step 8:
Remove Lower
Drive Mounting
Panel**

The lower drive mounting panel can contain RZ23 disk drives, RX23 disk drives, a TZ30 tape drive, an RRD42 CD ROM, or a TZK10 tape drive. To remove the lower drive mounting panel:

1. Disconnect the SCSI cable and the power cable connected to the drives.
2. Remove the two screws securing the cover plate to the lower drive mounting panel. Remove the two screws securing the cover plate to the back panel of the system unit. Remove the cover plate.

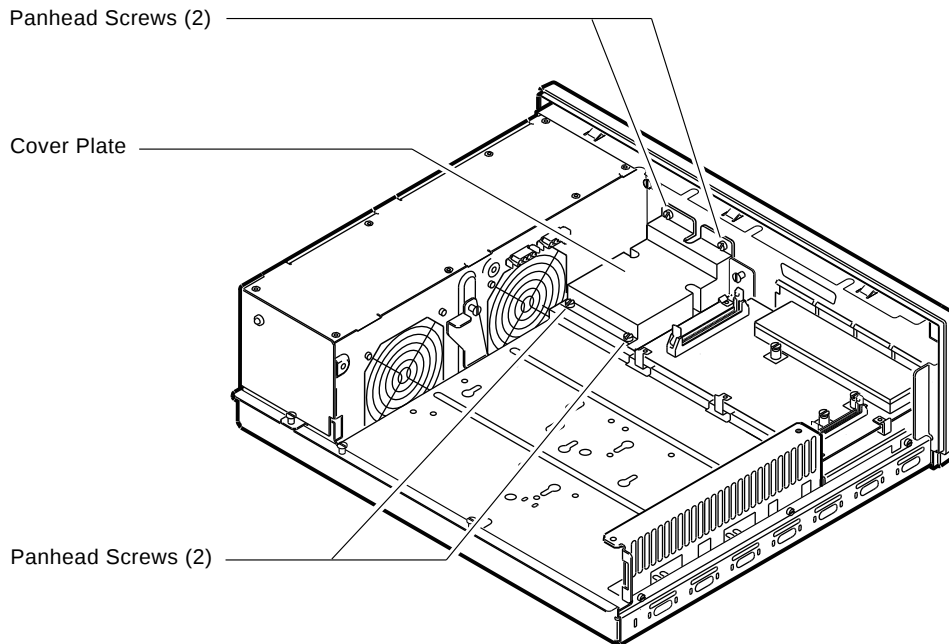


RE_EN05180A_90

3. Loosen the four captive screws on the lower drive mounting panel. Two are located near the back panel. Two are located near the power supply. Loosen the three screws on the right side of the panel. Slide the panel forward and away from the system unit.

Upgrade Procedure

Figure 5-3 Drive Mounting Panel

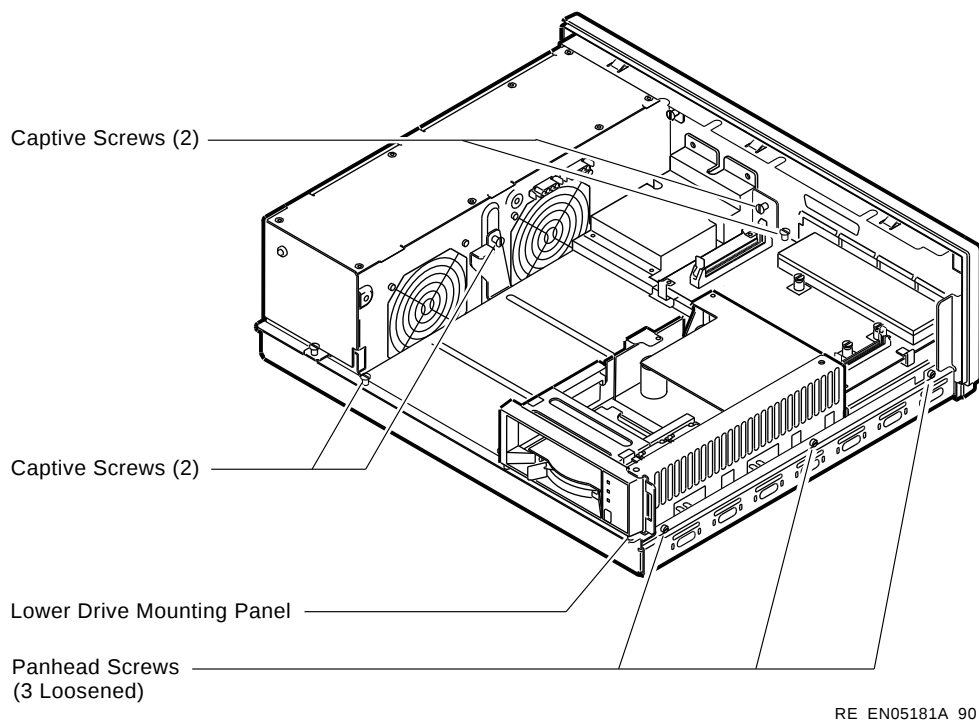

Step 9: Remove Device

To remove the device:

1. Turn the drive mounting panel over, and while supporting the device with one hand, loosen the two screws in the keyhold slots holding the device to the mounting panel. Remove the other two screws.
2. Slide the device to one side and remove it from the mounting panel.
3. Remove the drive mounting bracket by removing the screws that secure the drive to the mounting bracket.

Upgrade Procedure

Step 10: Set SCSI IDs on Drives

If your DEC 2000 AXP system has a factory-installed disk drive, it is set to SCSI ID 0.

Check the SCSI ID settings you noted earlier. If one of the drives you are upgrading is set to SCSI ID 0, then change that setting. SCSI settings can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 11: Install New Mounting Bracket

You must install the mounting brackets included in your upgrade kit onto the drives you remove from your current system. Instructions for installing the mounting brackets are in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 12: Complete the Upgrade

Follow the instructions in the *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* and the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information* to complete the upgrade.

Update the customer service contract to the DEC 2000 Model 300 AXP system.

Step 13: Return Your DECsystem to Digital

Return your DECsystem and any devices that are not upgradeable to Digital.

1. Pack the DECsystem and devices securely in packing material.
2. Attach the return address label that was in your upgrade kit.

6

Upgrading a DECsystem 5500

Topics Covered in This Chapter

- Upgrading your system
- Completing the upgrade

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 2000 system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To display the SCSI ID settings of the drives in your expansion box:

1. Enter the command to shut down the software and put the system in console mode: `shutdown -h now`
2. Enter `maint` at the prompt (`>>`).
3. Enter `show scsi` at the prompt (`>>>`).

Upgrade Procedure

```
>> maint
>>>show scsi
SCSI Node 0
  -tz(0,0*)  (TLZ04)
SCSI Node 1
  -rz(0,1,*) (RZ56)
.
.
>>>exit
>>
```


This display shows a TLZ04 set to SCSI ID 0 and an RZ56 set to SCSI ID 1.

Write down your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

1. To access the power switch, you must turn the keylock to the bottom position. Pull the door open.
2. Turn off power switch.
Caution: After you turn off the system, wait 15 seconds before unplugging the power cord.
3. Remove external cables.

Figure 6-1 Keylock Positions

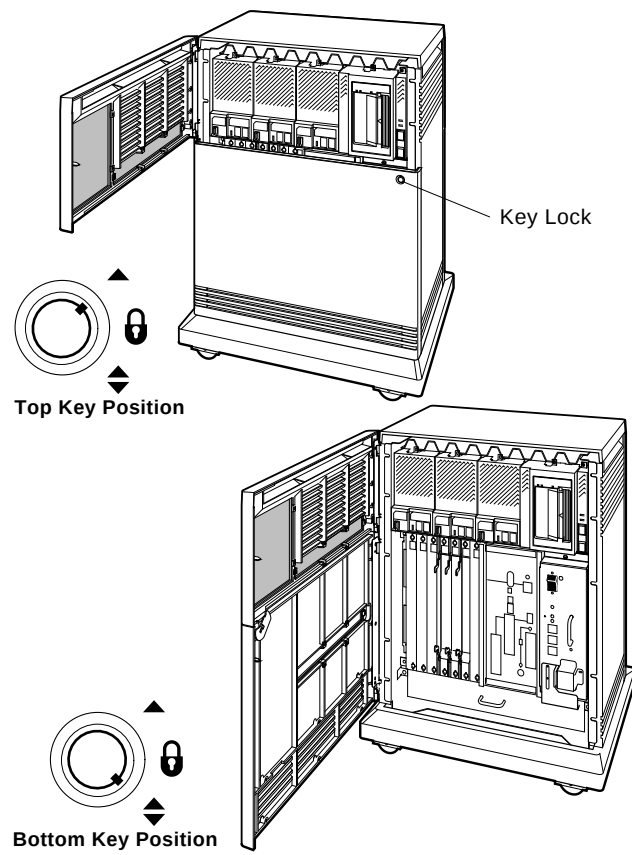

MLO-004207

Upgrade Procedure

Step 3: Complete the Upgrade

Follow the instructions in the *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* and the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information* to complete the upgrade.

Update the customer service contract to the DEC 2000 Model 300 AXP system.

Step 4: Return Your DECsystem to Digital

Return your DECsystem and any devices that are not upgradeable to Digital.

1. Pack the DECsystem and devices securely in packing material.
2. Attach the return address label that was in your upgrade kit.

7

Upgrading a MicroVAX 3100 Model 30

Topics Covered in This Chapter

- Upgrading your system
- Removing drives
- Completing the upgrade

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 2000 AXP system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To determine the SCSI ID settings on your drives:

1. Shut down your software following the instructions in your software documentation.
2. Enter the SHOW CONFIG command.

Upgrade Procedure

A screen similar to the following appears:

```
>>> show config
```

DEVNBR	DEVNAM	INFO
1	NVR	OK
3	DZ	OK
4	CACHE	OK
5	MEM	OK
		16MB = SY=8MB, S0/1=8MB, S2/3=0MB, S4/5= 0MB
6	FPU	OK
7	IT	OK
8	SYS	OK
9	NI	OK
10	SCSI	OK
		3-RZ24 6-INITR

This information shows an RZ24 drive set to SCSI ID 3.

Write down your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

Turn off the system unit by pressing O on the On/Off switch on the back of the system unit.

Disconnect the power cord from the wall outlet and then from the system unit.


Caution: After you turn off the system, wait 15 seconds before unplugging the power cord.

Step 3: Disconnect Cables

Disconnect all the cables from the back of the system unit.


**Step 4:
Remove
System Cover**

1. Loosen the two captive screws on the back of the system unit. These screws can be loosened but not removed.
2. Slide the cover forward and lift it up from the system unit. Set the cover aside.

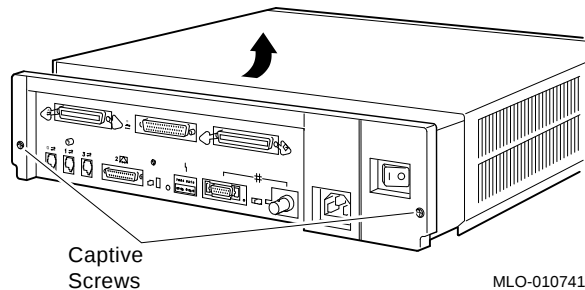

**Step 5:
Remove Fixed
Disk Drives**

1. Press and hold the spring clip that locks the disk drive in position.
2. Refer to the figure, and push the disk drive towards the spring clip until the rubber grommets on the bottom of the disk drive release from the cutouts in the drive mounting shelf.

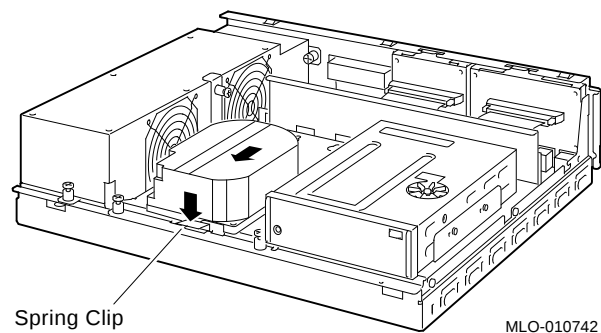

3. Lift the disk drive up from the drive mounting shelf and release the spring clip.
4. Disconnect the SCSI and power cables from the back of the drive.


Upgrade Procedure

5. Remove all drive mounting brackets by removing the screws that secure the mounting bracket to the drive.
6. Set the drive aside on an antistatic mat.

Step 6: Remove Removable-Media Drive

Follow these steps to remove a removable-media drive from the lower drive shelf:

1. Loosen the captive screw that secures the drive mounting bracket to the drive shelf.

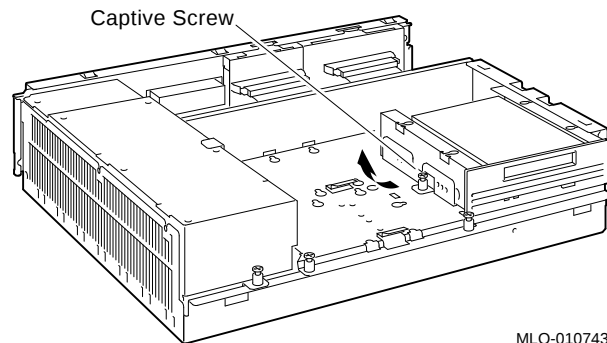

MLO-010743

2. Lift the left side of the drive until the tabs on the right side clear the cutouts in the lower drive shelf.
3. Disconnect the SCSI and power cables from the back of the drive.
4. Remove all drive mounting brackets by removing the screws that secure the mounting bracket to the drive.
5. Set the drive aside on an antistatic mat.

Step 7: Set the SCSI IDs on the Drives

If your DEC 2000 AXP system has a factory-installed disk drive, it is set to SCSI ID 0. Check the SCSI ID settings you noted earlier. If one of the drives you are upgrading is also set to SCSI ID 0, change that setting.

SCSI settings for drives can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Upgrade Procedure

Step 8: Install New Mounting Bracket

You must install the mounting brackets included in your upgrade kit onto the drives you remove from your current system. Instructions for installing the mounting brackets are in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 9: Complete the Upgrade

1. Instructions for installing options that you have removed from your current system can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*. Follow the instructions in the *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* to complete the upgrade.
2. Update the customer service contract to the DEC 2000 Model 300 AXP system.

Step 10: Return Your MicroVAX System to Digital

Return your MicroVAX system and any devices that are not upgradeable to Digital.

1. Pack the MicroVAX system and devices securely in packing material.
2. Attach the return address label that was in your upgrade kit.

8

Upgrading a MicroVAX 3300/3400

Topics Covered in This Chapter

- Upgrading your system
- Completing the upgrade

Upgrade Procedure

Step 1: Move Tabletop Enclosure

If you have an RRD42 CD-ROM in a tabletop enclosure on your MicroVAX system, you can use it on your DEC 2000 Model 300 AXP system.

Step 2: Complete the Upgrade

1. Follow the instructions in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information* and *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* to complete the upgrade.
2. Update the customer service contract to the DEC 2000 Model 300 AXP system.

Step 3: Return Your MicroVAX to Digital

Return your MicroVAX system and any devices that are not upgradeable to Digital.

1. Pack the MicroVAX system and devices securely in packing material.
2. Attach the return address label that was in your upgrade kit.

9

Upgrading a VAX 11/7xx, MicroVAX 2000, MicroVAX I and II, DECsystem 5400

No Options Can Be Upgraded

There are no internal or external options that you can move from your VAX 11/7xx, MicroVAX 2000, MicroVAX II, or DECsystem 5400 and install in your DEC 2000 Model 300 AXP.

Upgrade Procedure

To upgrade your current system, follow the two steps listed below.

Step 1: Return Your Current System to Digital

Return your current system and devices to Digital.

1. Pack the system and devices securely in packing material.
2. Attach the return address label that was in your upgrade kit.

Step 2: Update Service Contract

After installing the DEC 2000 Model 300 AXP, update the customer service contract to the DEC 2000 Model 300 AXP system.

10

Upgrading a MicroVAX 3100 Model 40/80/90, VAX 4000 Model 100

Topics Covered in This Chapter

- Upgrading your system
- Removing drives
- Completing the upgrade

Upgrade Procedure

Step 1: If Your System Has Factory-Installed Drives

If your DEC 2000 Model 300 AXP system has factory-installed drives, you may need to change the SCSI IDs on the drives you are upgrading.

To display the SCSI ID settings of the drives in your system:

1. Shut down your software following the instructions in your software documentation.
2. Enter SHOW CONFIG at the console prompt (>>>). A screen similar to the following appears:

Upgrade Procedure

```
>>> SHOW CONFIG
DEVNBR  DEVNAM      INFO
-----
1       NVR         OK
3       DZ          OK
4       CACHE       OK
5       MEM          OK
        16MB = SY=8MB, S0/1=8MB, SE/3=0MB, S4/5= 0MB
6       FPU         OK
7       IT          OK
8       SYS         OK
9       NI          OK
10      SCSI        OK
        3-RZ24      6-INITR
```

This display shows an RZ24 drive set to SCSI ID 3.

Write down your system drives and SCSI ID settings here. You will need them for future use.

Step 2: Shut Down System

Turn off the system unit by pressing O on the On/Off switch on the system unit.

Disconnect the power cord from the wall outlet and then from the system unit.


Caution: After you turn off the system, wait 15 seconds before unplugging the power cord.

Step 3: Disconnect Cables

Disconnect all the cables from the back of the system unit.


Step 4: Remove System Cover

1. Loosen the two captive screws on the back of the system unit. This screw can be loosened but not removed.
2. Slide the cover forward and lift it up from the system unit. Set the cover aside.

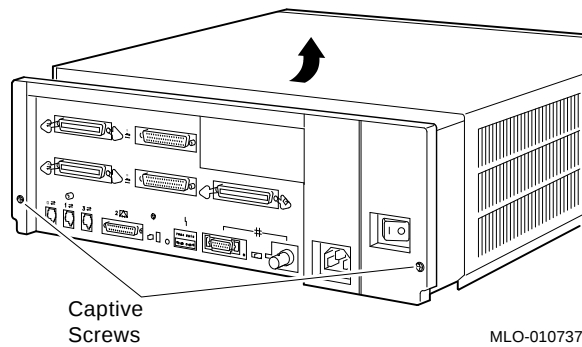

Step 5: Remove Fixed Disk Drives

1. Press and hold the spring clip that locks the disk drive in position.
2. Refer to the figure. Push the disk drive towards the spring clip until the rubber grommets on the bottom of the disk drive release from the cutouts in the drive mounting shelf.

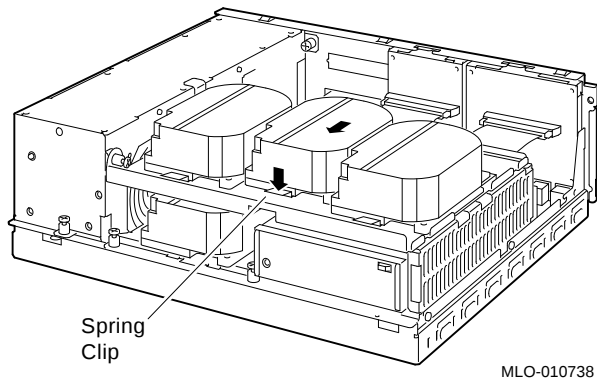


3. Lift the disk drive up from the drive mounting shelf and release the spring clip.
4. Disconnect the SCSI and power cables from the back of the drive.
5. Remove all drive mounting brackets by removing the screws that secure the drive to the mounting bracket.
6. Set the drive aside on an antistatic mat.

Upgrade Procedure

Step 6: Remove the Upper Drive Shelf

1. Disconnect the power cable from the power supply. Remove the power cable from the enclosure.
2. Refer to the figure. Loosen the three captive screws that hold the drive shelf in place.

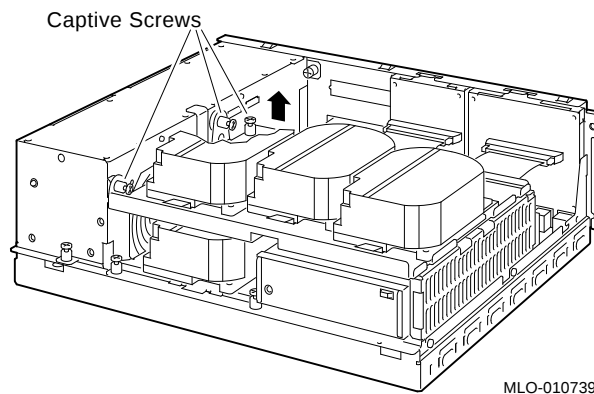


3. Lift the left side of the shelf and pull the shelf to the left until the tabs on the right clear the cutouts in the lower drive shelf.
4. Set the drive shelf aside.

Step 7: Remove Removable-Media Drive

Follow these steps to remove a removable-media drive from the lower drive shelf:

1. Loosen the captive screw that secures the drive mounting bracket to the drive shelf.

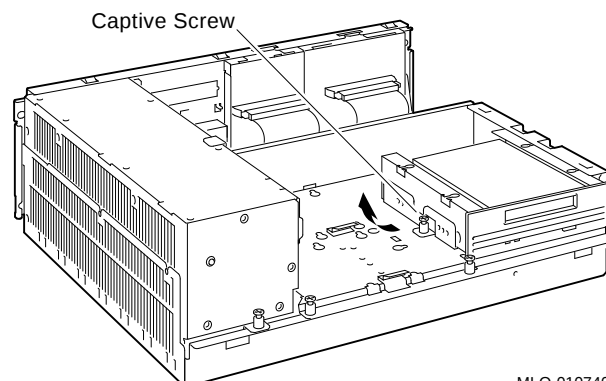

Upgrade Procedure

2. Lift the left side of the drive until the tabs on the right side clear the cutouts in the drive shelf.
3. Disconnect the SCSI and power cables from the back of the drive.
4. Remove all drive mounting brackets by removing the screws that secure the drive to the mounting bracket.
5. Set the drive aside on an antistatic mat.

Step 8: Set the SCSI IDs on the Drives

If your DEC 2000 AXP system has a factory-installed disk drive, it is set to SCSI ID 0. Check the SCSI ID settings you noted earlier. If one of the drives you are upgrading is also set to SCSI ID 0, change that setting.

SCSI settings for drives can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 9: Install New Mounting Bracket

You must install the mounting brackets included in your upgrade kit onto the drives you remove from your current system. Instructions for installing the mounting brackets are in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*.

Step 10: Complete the Upgrade

1. Instructions for installing options that you have removed from your current system can be found in the *DECpc AXP 150 and DEC 2000 Model 300 AXP Customer Technical Information*. Follow the instructions in the *DECpc AXP 150 and DEC 2000 Model 300 AXP User Information* to complete the upgrade.
2. Update the customer service contract to the DEC 2000 Model 300 AXP system.

Step 11: Return Your MicroVAX to Digital

Return your MicroVAX system and any devices that are not upgradeable to Digital.

1. Pack the MicroVAX system and devices securely in packing material.
2. Attach the return-address label that was in your upgrade kit.

