

DL11

OVERLAY FOR ITEP
CZDL0D0

AH-8533D-MC


COPYRIGHT © 74-78

FICHE 1 OF 1

JUN 1978

digital

MADE IN USA

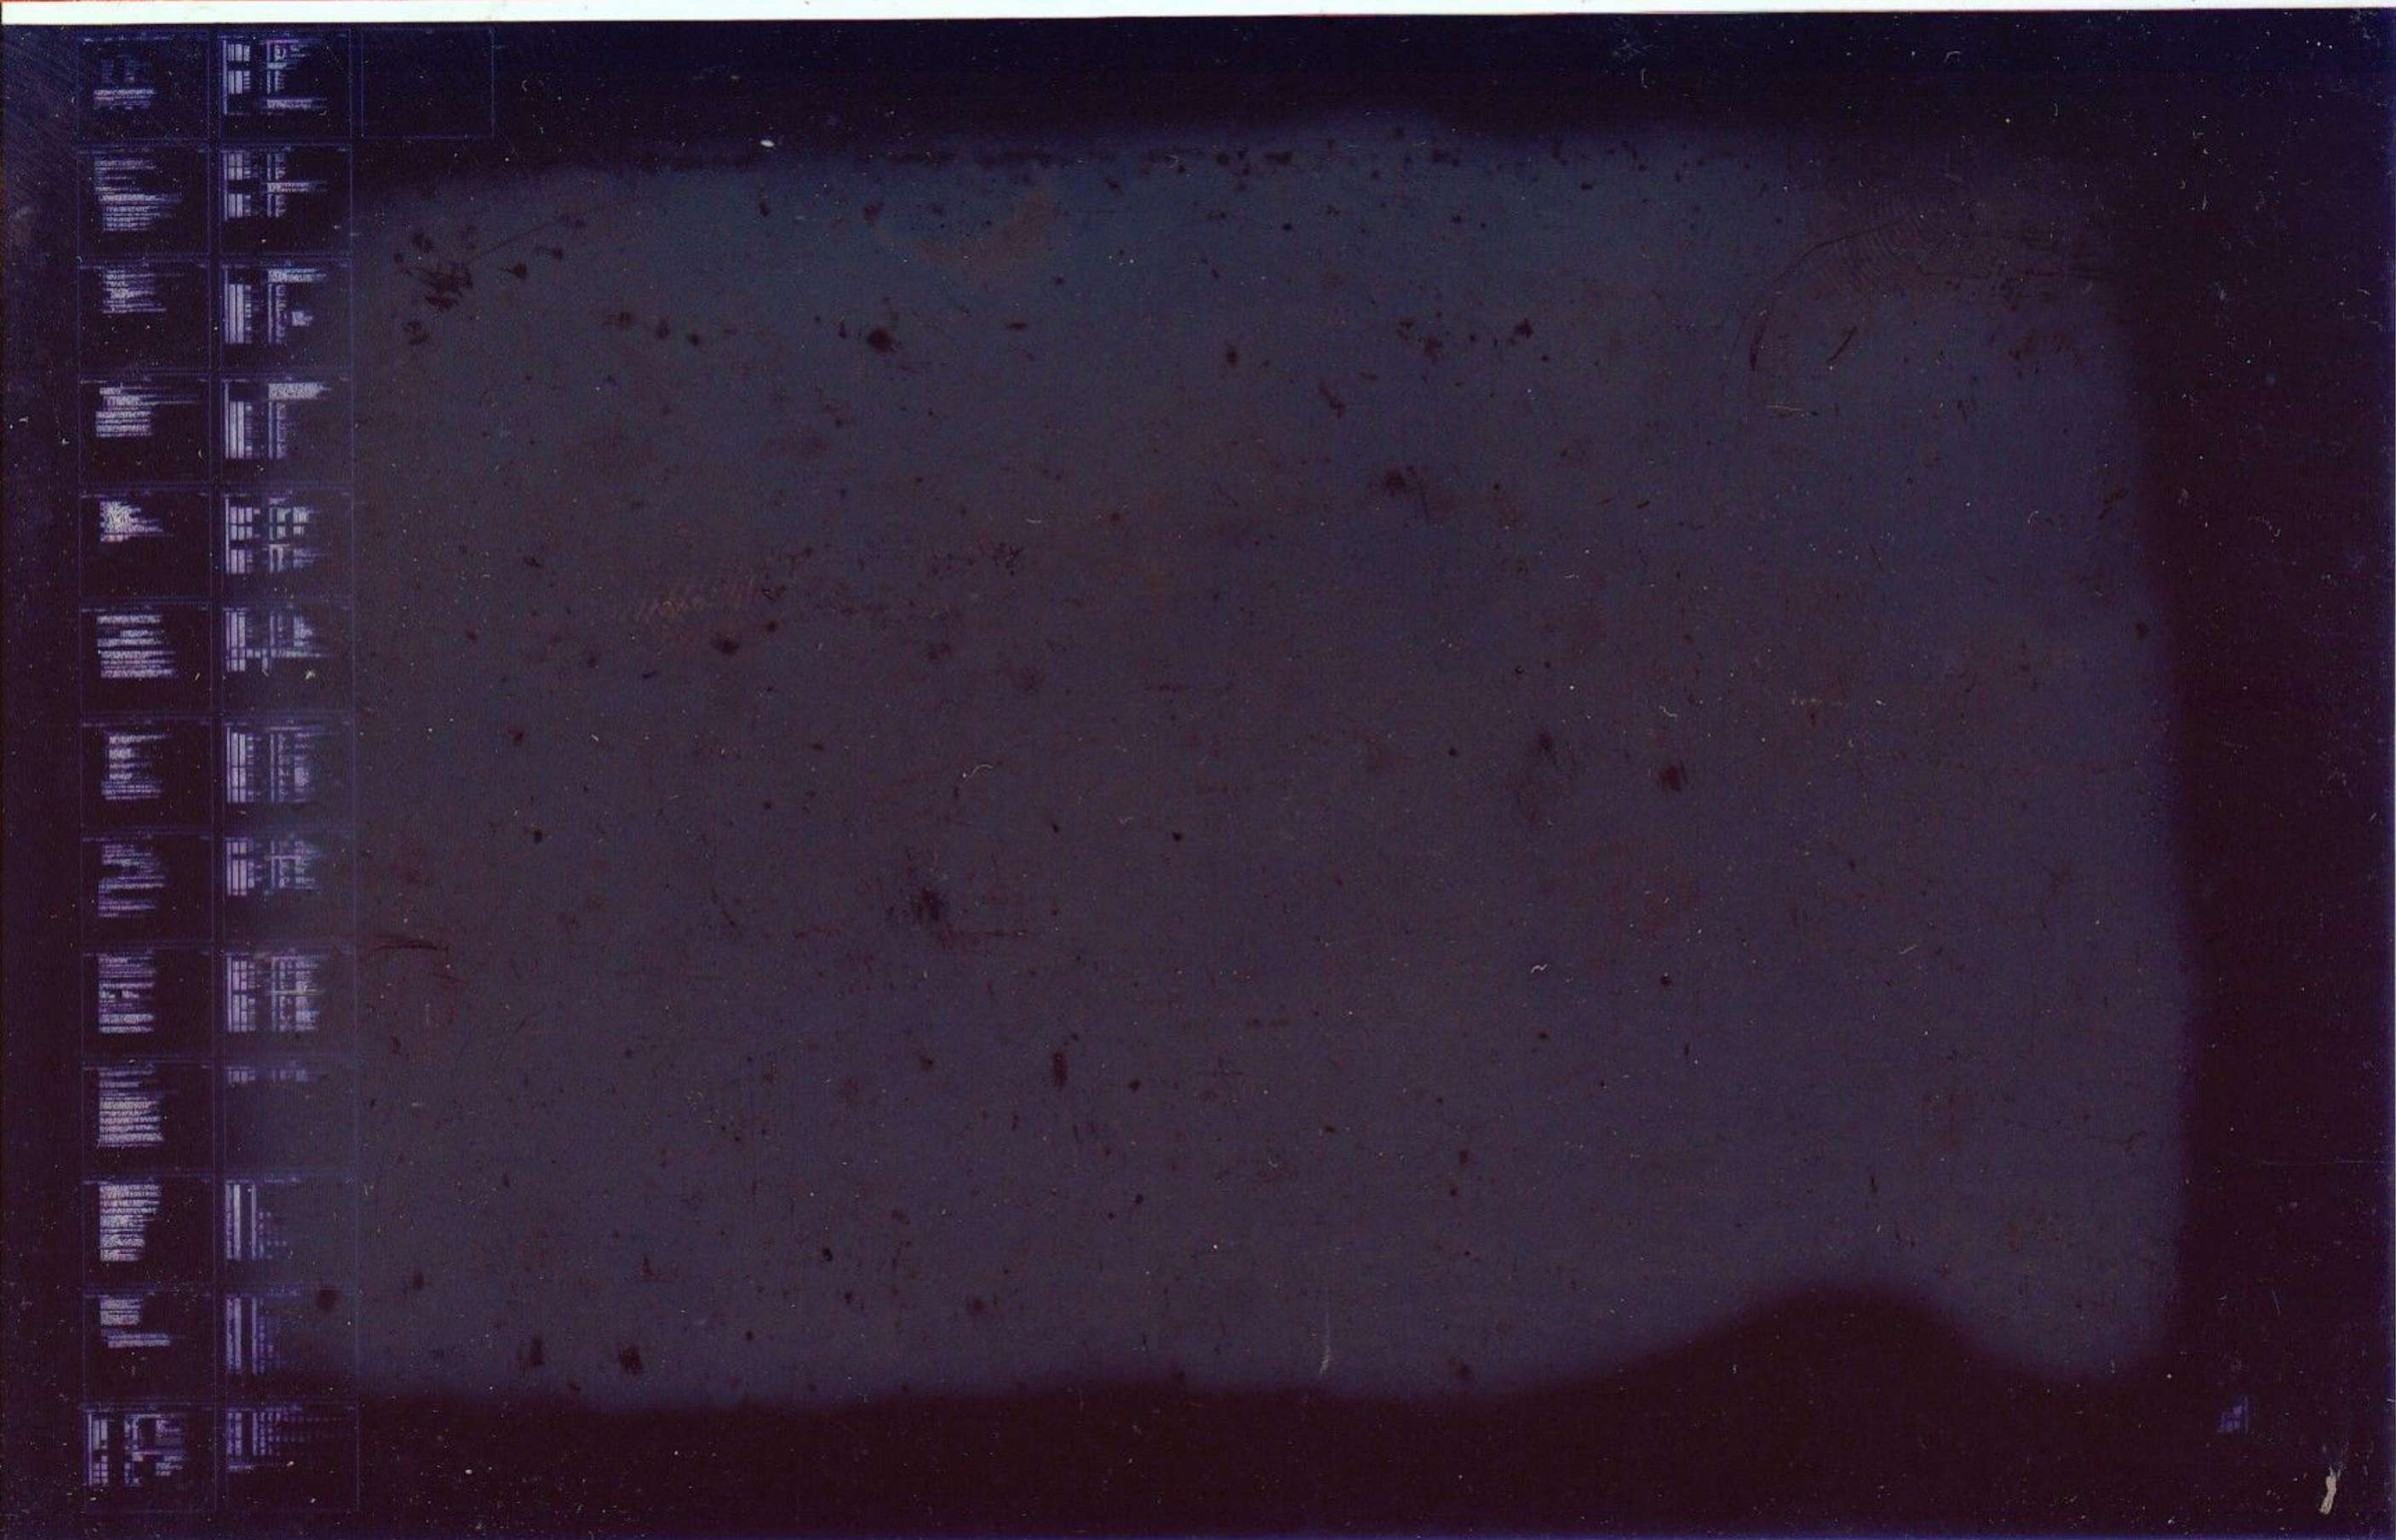

IDENTIFICATION

PRODUCT CODE: AC-8532D-MC
PRODUCT NAME: CZDLOD0 DL11 OVRLY FOR ITEP
PROGRAM DATE: MARCH 1978
MAINTAINER: DIAGNOSTICS
AUTHORS: R A JONES
JOHN EGOLF
REVISED BY: FAY BASHAW 1/21/75

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR IT'S AFFILIATED COMPANIES.

COOPYRIGHT (C)1974, 1978 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL
DEC

PDP
DECUS

UNIBUS
DECTAPE

MASSBUSS

1.0 ABSTRACT.

THIS PROGRAM IS DESIGNED AS A MAINTENANCE AID FOR FIELD SERVICE PERSONEL. IT WILL VERIFY THE PROPER OPERATION OF A COMPLETE COMMUNICATION LINK FROM ONE PDP-11 SYSTEM TO ANOTHER OR TO A COMMUNICATION TEST CENTER.

THIS PROGRAM MUST BE USED IN CONJUNCTION WITH THE INTERPROCESSOR TEST PROGRAM(DZITP) ON A PDP-11 SYSTEM WITH A DL-11 INTERFACE.

2.0 REQUIREMENTS.

2.1 EQUIPMENT

- A. PDP-11 SYSTEM WITH 4K OF CORE.
- B. A CZDLODD DL11 COMMUNICATION INTERFACE.

2.2 STORAGE.

4K OF CORE

3.0 LOADING PROCEDURE

THIS PROGRAM IS IN ABSOLUTE FORMAT.
THE ABS LOADER MUST BE USED TO LOAD THE PROGRAM.

4.0 OPERATING PROCEDURES.

- A. TWO METHODS OF ENTERING PARAMETERS ARE PROVIDED
 - 1. LOAD ADDRESS 200 AND START TO ENTER PARAMS FROM CONSOLE TTY, PROCEED TO SECTION B.
 - 2. LOAD ADDRESS 200 AND SET SWITCH REGISTER BIT 15 BEFORE STARTING TO ENTER PARAMS FROM CONSOLE SWITCHES, PROCEED TO SECTION C.
*THE PROGRAM MAY BE RESTARTED AT LOC 204 (ONCE PARAMETERS HAVE ALREADY BEEN SELECTED)
- B. CONSOLE DIALOGUE PARAMETER INPUT (CURRENT VALUES FOR PARAMETERS ARE FOUND IN OVERLAY)
 - 1. THE PROGRAM WILL TYPEOUT THE NAME OF THE VARIABLE OVERLAY.
 - A. IF YOU WISH TO SETUP JUST THE INDICATED OVERLAY, TYPE A CARAGE RETURN
 - B. IF YOU WISH TO SETUP A DN11, TYPE IN DN.
 - C. IF YOU WISH TO SETUP A DM11BB, TYPE IN DMB.
 - IF DN OR DMB WAS TYPED IN STEP 1 ABOVE THEN THE BUS ADDRESS VECTOR ETC. REFERED TO IN STEPS 2 THRU 7, PERTAIN TO THE DN11 OR DMBB.
 - 2. THE PROGRAM WILL TYPE THE DEFAULT BUS ADDRESS OF THE INTERFACE UNDER TEST.
 - A. TYPE A CAR. RETURN TO USE DEFAULT BUS ADDRESS
 - B. TYPEIN ACTUAL BUS ADDRESS
 - 3. THE PROGRAM WILL TYPE OUT THE DEFAULT VECTOR ADDRESS
 - A. TYPE A CAR. RETURN TO USE DEFAULT ADDRESS
 - B. TYPEIN ACTUAL VECTOR ADDRESS
 - 4. THE PROGRAM WILL TYPE OUT THE DEFAULT INTERFACE PRIORITY
NOTE: 200=PRIO 4, 240=PRIO 5, 300=PRIO 6, ETC.

- A. TYPE A CAR. RETURN TO USE DEFAULT VALUE
- B. TYPEIN ACTUAL VALUE
- 5. THE PROGRAM WILL TYPEOUT THE DEFAULT VALUE OF PARAM#1
IF REQUIRED BY THE ISR. (SEE SECT. 10.0 IN OVERLAY LISTING FOR PARAMETER DESCRIPTION)
 - A. TYPE A CAR. RETURN TO USE DEFAULT VALUE
 - B. TYPEIN ACTUAL VALUE
- 6. THE PROGRAM WILL TYPEOUT THE DEFAULT VALUE OF PARAM#2
IF REQUIRED BY THE ISR.
 - A. TYPE A CAR. RETURN TO USE DEFAULT VALUE
 - B. ENTER ACTUAL VALUE
- 7. THE PROGRAM WILL TYPEOUT THE DEFAULT VALUE OF PARAM#3
IF REQUIRED BY THE OVERLAY.
 - A. TYPE A CAR. RETURN TO USE DEFAULT VALUE
THE DN-11 WILL USE PARAM #3 AS THE # TO DIAL.
IF USING A MODEM WITHOUT AUTOMATIC HANDSHAKING,
THE NUMBER MUST TERMINATE WITH A
"END-OF-NUMBER" CHARACTER (:).
 - B. ENTER ACTUAL VALUE.
- 8. THE PROGRAM WILL RETURN TO STEP B1 IF THIS SETUP
WAS FOR DN11 OR DM11BB.
- 9. THE PROGRAM WILL REQUEST THAT SWITCH REGISTER BE SET.
 - A. SETUP SWITCH REGISTER AS SPECIFIED IN STEP D.
AND TYPE A CAR. RETURN.

NOTE: IF ANY OF THE ABOVE ITEMS 2 THRU 7 WERE CHANGED BY ENTERING
NEW VALUES, THE NEW VALUE BECOMES THE DEFAULT VALUE FOR SUBSEQUENT
RESTARTS OF THE PROGRAM.

- C. MANUAL PARAMETER INPUT FROM SWITCH REGISTER
1. THE PROGRAM HALTS FOR ISR(INTERFACE SERVICE ROUTINE) SPECIFICATION
SWR14=SETUP DN-11B ISR
SWR13=SETUP DN-11 ISR
SWR=000000=SETUP VARIABLE ISR
 2. THE FOLLOWING HALTS ARE REPEATED FOR EACH ISR SPECIFIED.
SETUP SEQUENCE IS: DN11, DN11-BB THEN VARIABLE OVERLAY. (EACH ENTRY SET SWICHES THEN HIT CONTINUE.)
 - A. HALT FOR BUS ADDRESS OF INTERFACE
 - B. HALT FOR VECTOR ADDRESS OF INTERFACE
 - C. HALT FOR PRIORITY OF INTERFACE
 - D. HALT FOR INTERFACE PARAM #1 (SEE SECT. 10.0 IN OVERLAY LISTING FOR PARAMETER DESCRIPTION)
 - E. HALT FOR INTERFACE PARAM #2 (DN11 AND DMBB PARAMETERS ARE DISCUSSED IN SECT. 10.0 OF THE MONITOR.
 - F. GO BACK TO STEP A IF THIS SETUP WAS FOR DN OR DMB.
 3. HALT FOR OPERATIONAL SWITCH SETTINGS. (SEE STEP D.)
 - A. PRESS CONTINUE TO START TESTING

BEFORE ATTEMPTING TO RUN THIS PROGRAM, THE OPERATOR MUST ACCERTAIN THE COMPLETE COMMUNICATION LOOP AND PROCEEDURES TO BE USED, INCLUDING THE TYPE OF MODEMS, THE TYPE OF INTERFACE BEING USED AT THE OTHER CPU AND THE MODES OF OPERATION, DATA AND PARAMETERS TO BE USED AT EACH CPU.

THIS WILL REQUIRED VOCAL COMMUNICATION WITH THE OPERATOR AT THE OTHER CPU UNLESS ITS CONFIGURATION AND OPERATION ARE FIXED AS A TEST CENTER.

AFTER DETERMINING THAT THE EQUIPMENTS ARE COMPATIBLE AND AGREEING ON THE MODE AND VARIABLE PARAMETERS TO BE USED, THE SYSTEM WHICH IS TO RECEIVE DATA FIRST SHOULD BE LOADED AND STARTED. IF THE MODEM BEING USED ON THIS SYSTEM HAS AN AUTOMATIC ANSWER FEATURE, IT SHOULD BE ENABLED.

THE SYSTEM WHICH IS TO TRANSMIT FIRST SHOULD THEN BE LOADED AND STARTED AND THE CONNECTION ESTABLISHED EITHER MANUALLY OR AUTOMATICALLY (VIA DN-11).

D. OPERATIONAL SWITCH SETTINGS.

SW15=1 HALT ON ERROR
SW14=1 SINGLE PASS
SW14 HAS NO EFFECT IF SW04=0
SW13=1 INHIBIT ERROR TYPEOUTS
SW12=1 INHIBIT ALL TYPEOUTS EXCEPT ERRORS
IF SW12=0 AND SW04=1 END PASS IS TYPED
AND TRANSMITTED/RECEIVED DATA IS TYPED.
SW11=1 USE PREVIOUSLY SPECIFIED DATA
SW10=1 DATA SELECT (WITH SW09)
SW09=1 DATA SELECT (WITH SW10)
00=1 GET DATA FROM OPERATOR
01=1 TEST MESSAGE #1 (SA QUICK BROWN FOX)
10=1 TEST MESSAGE #2 (SB NUMERICS)
11=1 TEST MESSAGE #3 (SC COMTEST/QUICK BROWN FOX/NUMERICS)
SW08=1 TRANSMIT RECEIVED DATA (INTERNAL LOOPBACK MODE)
SW07=1 DO NOT TEST RECEIVED DATA
SW06=1 MONITOR TRANSMITTED DATA ON CONSOLE TTY.*
SW05=1 MONITOR RECEIVED DATA ON CONSOLE TTY.*
* IN MANY CASES, NOT ALL DATA WILL APPEAR ON THE CONSOLE
TTY. THIS IS ESPECIALLY TRUE WHEN THE COMM INTERFACE IS
RUNNING AT A FASTER BAUD THAN THE CONSOLE, BUT EVEN AT EQUAL
OR SLOWER BAUDS, ALL CHARACTERS MAY NOT APPEAR ON THE CONSOLE.
SW04=1 RETURN TO MONITOR FOR END PASS
WHEN SW04=0 PROGRAM LOOPS IN THE OVERLAY NEVER RETURNING TO THE MONITOR.
SW03=1 INTERNAL LOOPBACK MODE
SW02=1 EXTERNAL LOOPBACK MODE
SW01=1 ONE-WAY-IN MODE
SW00=1 ONE-WAY-OUT MODE

THIS PROGRAM HAS BEEN MODIFIED TO RUN ON A PROCESSOR WITH OR WITHOUT A HARDWARE SWITCH REGISTER. WHEN FIRST EXECUTED THE PROGRAM TESTS THE EXISTENCE OF A HARDWARE SWITCH REGISTER. IF NOT FOUND A SOFTWARE SWITCH REGISTER LOCATION (SWREG=LOC. 176) IS DEFAULTED TO. IF THIS IS THE CASE, UPON EXECUTION THE CONTENTS OF THE SWREG ARE DUMPED IN OCTAL ON THE CONSOLE TTY AND ANY CHANGES ARE REQUESTED

(IE) SWR=XXXXXX NEW=

POSSIBLE RESPONSES ARE:

1. <CR> IF NO CHANGES ARE TO BE MADE
2. 6 DIGITS 0-7 TO REPRESENT IN OCTAL THE NEW SWITCH REGISTER VALUE ;LAST DIGIT FOLLOWED BY <CR>.
3. ↑U TO ALLOW REENTERING VALUE IF ERROR IS COMMITTED KEYING IN SWREG VALUE.

BUILT INTO THE PROGRAM IS THE ABILITY TO DYNAMICALLY CHANGE THE CONTENTS OF SWREG DURING PROGRAM EXECUTION. BY STRIKING ↑G (CNTRL G) ON CONSOLE TTY THE OPERATOR SETS A REQUEST FLAG TO CHANGE THE CONTENTS OF SWREG, WHICH IS PROCESSED IN KEY AREAS OF THE PROGRAM CODE (IE) ERROR ROUTINES, AFTER HALTS END OF PASS, AND OTHER APPLICABLE AREAS.

IF OPERATOR SPECIFIED DATA WAS INDICATED, THE PROGRAM WILL TYPE A REQUEST FOR THE DATA. DATA MAY BE ENTERED AS ASCII CHARACTERS OR OCTAL CODE. TYPE IN THE DATA TERMINATED WITH A CR. OCTAL CODE MAY BE ENTERED BY TYPING AN ↑(UP ARROW) FOLLOWED BY THE OCTAL CODE (IN THE RANGE 000 TO 377) SEPERATED BY SPACES AND TERMINATED BY ↑(UP ARROW).
I.E. ABCD↑ 000 123 377↑ EFG (CAR.RETURN)

A TYPICAL SWITCH SETTING FOR HALF-DUPLEX=003150 THIS SETTING USES INTERNAL LOOPBACK MODE, LOOPS IN OVERLAY, MONITORS TRANSMITTED AND RECEIVED DATA ON THE CONSOLE TTY, AND TESTS RECEIVED DATA USING TEST MESSAGE #3.

A TYPICAL SWITCH SETTING FOR FULL-DUPLEX=003144 THIS SETTING IS THE SAME AS ABOVE EXCEPT IT USES THE EXTERNAL LOOPBACK MODE.

ALL STANDARD MESSAGES(TEST MESSAGES 1-3) ARE PRECEDED BY 2 FILL CHARACTERS(177), AND ARE FOLLOWED BY A CR(015), LF(012), RECEIVE TERMINATING CHARACTER(001), 4 FILLS(177), AND A TRANSMIT TERMINATING CHARACTER(000). DURING TRANSMISSION, WHEN A 000 CHARACTER IS SEEN THE TRANSMISSION IS STOPPED. DURING RECEPTION, WHEN A 001 CHARACTER IS RECEIVED, THE RECEIVER IS SHUT OFF. IF THE MESSAGE WAS INPUTED BY THE OPERATER, THE TERMINATING CHARACTERS ARE ADDED.

TEST MODES

INTERNAL LOOPBACK MODE

1. THE OVERLAY WAITS TO RECEIVE A MESSAGE (TERMINATED BY <001>)
2. VERIFIES THE DATA AGAINST THE DATA SELECTED BY SW09 AND SW10 (SW7=0)
3. TRANSMIT THE DATA SELECTED BY SW09 AND SW10 (SW8=0) OR
TRANSMIT THE RECEIVED DATA (SW8=1)
4. RETURNS TO MONITOR FOR "END PASS" (SW4=1) OR
GO TO STEP 1. (SW4=0)

EXTERNAL LOOPBACK MODE

1. THE OVERLAY SETS REQUEST TO SEND
2. WAIT FOR CLEAR TO SEND
3. TRANSMITS THE SELECTED DATA
4. RESETS REQUEST TO SEND
5. WAIT FOR MESSAGE TO BE RECEIVED
6. VERIFIES THE DATA (SW07=0)
7. RETURNS TO MONITOR FOR "END PASS". (SW04=1) OR
GO TO STEP 1 (SW04=0)

ONE-WAY-IN MODE

1. THE OVERLAY WAITS FOR MESSAGE TO BE RECEIVED.
2. VERIFIES THE DATA (SW07=0)
3. RETURNS TO MONITOR FOR "END PASS" (SW04=1) OR
GO TO STEP 1 (SW04=0)

ONE-WAY-OUT MODE

1. THE OVERLAY SETS REQUEST TO SEND
2. WAITS FOR CLEAR TO SEND
3. TRANSMITS SELECTED DATA
4. RETURNS TO MONITOR FOR "END PASS". (SW04=1) OR
GO TO STEP 1 (SW04=0)

- E. THE OVERLAY IS THEN ENTERED AND A CONNECTION ESTABLISHED EITHER
MANUALLY OR AUTOMATICALLY.

IF ONE-WAY-IN OR INTERNAL LOOPBACK MODES ARE SELECTED.
THE OVERLAY WILL SET DATA TERMINAL READY AND WAIT FOR DATA.

IF ONE-WAY-OUT OR EXTERNAL LOOPBACK MODES WERE SELECTED.
THE OVERLAY WILL SET DATA TERMINAL READY AND REQUEST TO SEND.
THE OVERLAY WILL THEN WAIT FOR CLEAR TO SEND BEFORE ATTEMPTING TO
TRANSMIT DATA.

THE PROGRAM WILL PRINTOUT A "WAITING FOR CLEAR TO SEND"
MESSAGE AND THE CONTENTS OF THE XMIT CSR EVERY 60 SECS.
UNTIL CLEAR TO SEND IS ASSERTED.

F. IF SW04=0 THE OVERLAY WILL CONTINUE TO TRANSMIT/RECEIVE DATA.

IF SW04=1 THE OVERLAY WILL RETURN TO THE MONITOR AND TYPE "END PASS".

IF BOTH SW04=1 AND SW14=1, THE PROGRAM WILL REQUEST NEW INTERFACE PARAMS AFTER ONE PASS OF THE SELECTED TEST MODE.

TEST EXECUTION MAY BE INTERRUPTED BY TYPING THE FOLLOWING CHARACTERS ON THE CONSOLE TTY.

LINE FEED = RESTART PROGRAM AT LOCATION 200.

QUESTION MARK = PRINTOUT FIRST 8 WORDS OF INPUT BUFFER.(ASCII)

THEN TYPE EITHER:

*WXXXXXX

TO PRINTOUT THE 8 WORDS
AT LOC XXXXXX.

*BXXXXXX

TO PRINTOUT THE 16 BYTES
AFTER LOC XXXXXX.

*C

TO CONTINUE

PROGRAM MUST BE RESTARTED AT 200 AFTER PRINTING.
CARRIAGE RETURN = RESTART AT REQUEST FOR NEW OPERATIONAL SWITCHES.

5.0 PROGRAM AND/OR OPERATOR ACTION

IF THE OPERATOR WISHES TO MANUALLY EXAMINE THE TRANSMIT OR RECEIVE BUFFERS, DO THE FOLLOWING: TO FIND THE STARTING ADDRESS OF THE RECEIVE BUFFER, LOAD ADDRESS 11020 AND EXAMINE. TO FIND THE STARTING ADDRESS OF THE TRANSMIT BUFFER, LOAD ADDRESS 11022 AND EXAMINE.

5.1 NORMAL HALTS SEE SECTION 4.

6.0 ERRORS

6.1 ERROR REPORTING

THE ONLY ERROR REPORT FROM THE CONTROL PROGRAM OCCURS IF THE INTERFACE SPECIFIED IS NOT LOADED.

IF DATA IS RECEIVED AND SWITCH 7 (NO DATA COMPARE) IS RESET, THE DATA WILL BE COMPARED AGAINST THE PRESELECTED DATA AFTER A LINE FEED CHARACTER IS RECEIVED. IF THERE IS A MISMATCH, THE FOLLOWING ERROR REPORT IS PRINTED:

RECEIVED DATA=RRRRRR
DATA SHOULD BE TTTTTT
DATA COMPARE ERROR; BAD DATA=BBB GOOD DATA=GGG

WHERE RRRRRR IS THE RECEIVE BUFFER (UP TO 512 CHARACTERS)
TTTTT IS THE TRANSMIT BUFFER (UP TO 512 CHARACTERS)
BBB IS THE BAD DATA CHARACTER
GGG IS THE GOOD DATA CHARACTER

IF THE INTERFACE DETECTS A DATA ERROR, THE FOLLOWING
WILL BE PRINTED BEFORE THE DATA IS COMPARED:

THERE WAS A RECEIVER ERROR. RECEIVER DATA REGISTER =XXXXXX

WHERE XXXXXX IS THE CONTENTS OF THE RECEIVER DATA REGISTER
THE LOW BYTE IS THE DATA, AND THE HIGH BYTE IS THE ERROR BITS.

IF A RECEIVE TERMINATING CHARACTER<DD1> IS NOT DETECTED
WITHIN 512 CHARACTERS A "BUFFER FULL" PRINTOUT WILL OCCUR.

7.0 RESTRICTIONS

THE OPERATION OF THIS PROGRAM REQUIRES COORDINATION BETWEEN
THE OPERATOR AND THE OPERATOR OF ANOTHER PDP-11 SYSTEM
UNLESS ONE OF THE SYSTEMS IS ALWAYS OPERATING IN A FIXED
MODE. THE FOLLOWING TABLE LISTS THE VALID COMBINATIONS:

CPU #1	CPU #2
ONE-WAY-OUT	ONE-WAY-IN
ONE-WAY-IN	ONE-WAY-OUT
EXTERNAL-LOOPBACK	INTERNAL-LOOPBACK
INTERNAL-LOOPBACK	EXTERNAL-LOOPBACK
EXTERNAL-LOOPBACK	EXTERNAL-LOOPBACK (FULL DUPLEX)

WHEN THE COMMUNICATION LINK INVOLVES MODEMS THE FOLLOWING
RESTRICTION APPLY:

IF RUNNING IN FULL DUPLEX MODE BOTH SYSTEMS
MUST BE IN EXTERNAL LOOP BACK MODE.

BOTH SYSTEMS SHOULD BE RUNNING IDENTICAL ROUTINES.

EXAMPLE:
SWITCHES 14,13,7,4 SHOULD BE THE SAME
ON BOTH CPU S

IF PROGRAM IS WAITING IN A SCAN ROUTINE AND TYPES OUT
A "WAITING MESSAGE", IF AN INCOMING MESSAGE STARTS DURING
THE TYPE OUT, IT WILL BE LOST BECAUSE THE TYPEOUT PRIORITY
IS AT LEVEL 7. THIS WILL RESULT IN OVERRUN OR SILO OVER-
RUN ERRORS, DEPENDING ON THE DEVICE. TO AVOID THIS SITUATION
RUN WITH SWITCH 13 UP. IF OVERRUN DOES OCCURE DURING A
TYPEOUT THE PROGRAM SHOULD BE RESTARTED.

IF USING AN ASYNCHRONOUS DEVICE, MODEMS AND THE
MAYNARD TEST STATION AND INITIALIZE DOES NOT CLEAR THE
CONNECTION (EXAMPLE THE DJ11) IF THE PROGRAM IS RESTARTED
IN THE MIDDLE OF A MESSAGE AT LOC 204 OR BY HITTING CR
AN IMMEDIATE ERROR MESSAGE FROM MAYNARD WILL BE RE-

CEIVED. THIS IS BECAUSE THE TEST STATION IS STILL LOOKING
FOR THE REST OF THE INTERRUPTED MESSAGE. TO AVOID THIS
ERROR, RESTART PROGRAM ONLY AT THE END OF THE MESSAGE
CURRENTLY BEING TRANSMITTED.

8.0 MISCELLANEOUS

ITEP WAS CHECKED OUT USING THE FOLLOWING BELL TELEPHONE MODEMS.
201A (HALF-DUPLEX SYNCHRONOUS 2000 BAUD)
202C (HALF-DUPLEX ASYNCHRONOUS 1200 BAUD)
103A (FULL-DUPLEX ASYNCHRONOUS 110 BAUD)

9.0 PROGRAM DESCRIPTION

9.1 THE CZDLODD DL11 INTERFACE SERVICE PARAMS ARE SETUP, AS SPECIFIED BY THE OPERATOR,
BY THE ITEP CONTROL PROGRAM.

TIME: PROVIDES A MEANS OF MEASURING ELAPSED TIME. IT IS INCREMENTED
EVERY SECOND BY A CLOCK INTERRUPT ROUTINE IN ITEP.

9.2 WHEN THE OVERLAY IS FIRST ENTERED BY ITEP AT LOCATION START:,
THE CONTENTS OF THE SWITCH REGISTER ARE STORED IN REGISTER 0.
THE MODE AND DATA SELECTIONS ARE FIXED AT THIS TIME AND CANNOT
BE ALTERED WITHOUT RETURNING TO THE CONTROL PROGRAM.
THE INTERRUPT VECTORS AND VARIABLES ARE THEN SETUP.
THE SELECTED ROUTINE DETERMINED BY THE MODE IS THEN ENTERED

9.3 THE OVERLAY THEN LOOPS IN ROUTINES: SOWI, IF "ONE WAY IN" MODE
WAS SELECTED. SOWO, IF "ONE WAY OUT" MODE WAS SELECTED.
\$ILB, IF "INTERNAL LOOP BACK" MODE WAS SELECTED.
\$XLB, IF "EXTERNAL LOOP BACK" WAS SELECTED.

9.31 SOWI: IN THIS ROUTINE THE RECEIVER IS INITIALIZED AND PROGRAM
LOOPS WAITING FOR THE RECEIVER TO FINISH. IF NOTHING IS RECEIVED
FOR 60 SECS A "WAITING" MESSAGE IS TYPED. WHEN THE RECEIVER IS
DONE, THE PROGRAM CHECKS DATA IF SWITCHES PERMIT, AND TYPES END
PASS DEPENDING ON SWITCH SETTINGS.

9.32 SOWO: THE TRANSMITTER IS INITIALIZED AND PROGRAM LOOPS
WAITING FOR TRANSMITTER TO FINISH. A "WAITING" MESSAGE IS TYPED
EVERY 60 SECS IF THERE IS NO ACTION. WHEN THE TRANSMITTER IS
DONE, THE PROGRAM EITHER LOOPS BACK TO SOWO OR TYPES END PASS
DEPENDING ON SWITCH SETTINGS.

9.33 \$ILB: THE RECEIVER IS INITIALIZED AND PROGRAM LOOPS WAITING FOR
RECEIVER TO FINISH. A "WAITING" MESSAGE IS TYPED EVERY 60 SEC
IF NO ACTION. WHEN RECEIVER IS DONE PROGRAM CHECKS DATA IF SWITCH
SETTINGS PERMIT, AND END PASS IS TYPED IF SWITCH SETTINGS PERMIT.
THEN THE TRANSMITTER IS INITIALIZED, A "WAITING" MESSAGE IS TYPED
EVERY 60 SEC IF NO ACTION. WHEN TRANSMITTER IS DONE PROGRAM RETURNS
TO START OF ROUTINE. (\$ILB)

9.34 \$XLB: IF IN HALF DUPLEX THE TRANSMITTER IS INITIALIZED,
A "WAITING MESSAGE IS TYPED EVERY 60 SEC IF THERE IS NO ACTION

WHEN THE TRANSMITTER IS DONE THE RECEIVER IS INITIALIZED
A "WAITING" MESSAGE IS TYPED EVERY 60 SEC IF THERE IS NO ACTION.
WHEN THE RECEIVER IS DONE DATA IS CHECKED IF SWITCH SETTINGS
PERMIT AND END PASS IS TYPED IF SWITCHES ALLOW. THE PROGRAM NOW
REPEATS CYCLE STARTING AT \$XLB.
IF IN FULL DUPLEX THE RECEIVER AND TRANSMITTER ARE INITIALIZED
A "WAITING" MESSAGE IS TYPED EVERY 60 SEC IF THERE IS NO
ACTION. WHEN BOTH THE RECEIVER AND TRANSMITTER ARE DONE DATA IS
CHECKED. END PASS IS TYPED AND PROGRAM LOOPS TO \$XLB DEPENDING
ON THE SWITCH SETTINGS.

- 9.4 THE RETURN TO MONITOR ROUTINE FOR END PASS AT EOP:
LOCKS OUT INTERRUPTS AND SAVES THE TRANSMITTER INTERRUPT ENABLE
BIT AND ALL GENERAL REGISTERS. IT THEN RETURNS TO THE MONITOR
TO TYPE "END PASS". THE MONITOR CHECKS SW14 IF UP IT RETURNS
TO ENTER:, OTHERWISE IT RESTARTS THE PROGRAM.
- 9.5 ENTER: IS ENTERED FROM THE MONITOR AFTER TYPEING "END PASS",
IT RESTORES THE GENERAL REGISTERS AND THE TRANSMITTER CSR
AS SAVED IN EOP. THE DELAY FLAG IS SET AND PROGRAM RETURNS TO
THE SCAN ROUTINE(OWO,OWI,ILB,XLB) WHERE IT CAME FROM.
- 9.6 THE INITIALIZE TRANSMIT SUBROUTINE AT STARTX:
SETS UP THE INTERFACE AND POINTERS NECESSARY TO
INITIATE A TRANSMIT OPERATION.
AFTER SETTING "DATA TERMINAL READY" AND "REQUEST TO SEND" A CHECK
IS MADE ON PARAM2 TO DETERMINE IF HALF DUPLEX OPERATION
WAS SELECTED BY THE OPERATOR. IF IT WAS, THE
SUBROUTINE WAITS FOR CLEAR TO SEND.
A 'WAITING FOR CLEAR TO SEND' PRINTOUT OCCURS
EVERY 30 SECONDS UNTIL CLEAR TO SEND IS ASSERTED.
- 9.7 THE INITIALIZE RECEIVED SUBROUTINE AT STARTR:
SETS UP THE INTERFACE AND POINTERS NECESSARY TO
RECEIVE A MESSAGE.
- 9.8 THE TRANSMIT INTERRUPT SERVICE ROUTINE
AT XISR: IS ENTERED VIA TRANSMIT INTERRUPTS
FROM THE INTERFACE.
A TEST IS MADE TO SEE IF THE LAST CHARACTER
TRANSMITTED WAS A NULL (ALL ZEROS) CHARACTER.
IF IT WAS, THE TRANSMIT LOGIC IN THE INTERFACE
IS RESET AND THE TRANSMIT COMPLETE FLAG IS SET.
AT XISR1: THE NEXT CHARACTER IS TRANSMITTED
AND PRINTED ON THE TTY IF THE MONITOR TRANSMIT
SWITCH IS SET.
- 9.9 THE RECEIVE INTERRUPT SERVICE ROUTINE
AT RISR: IS ENTERED VIA RECEIVER INTERRUPTS
FROM THE INTERFACE.
THE RECEIVED CHARACTER IS STORED IN
THE INPUT BUFFER AND PRINTED ON THE TTY IF
THE MONITOR RECEIVER SWITCH IS SET.
IF THE INPUT BUFFER IS FULL, A 'BUFFER FULL'
PRINTOUT WILL OCCUR. THIS INDICATES THAT A
LINE FEED CHARACTER WAS NOT RECOGNIZED

IN THE RECEIVED DATA (WITHIN 1000 CHARACTERS).
IF THE RECEIVED CHARACTER IS A LINE FEED,
THE RECEIVED LOGIC IS RESET AND THE
RECEIVE COMPLETE FLAG IS SET.
IF A 'RECEIVE ERROR' IS DETECTED AT RISR, THE
CSR AND DSR WILL BE SAVED AND PRINTED OUT
AFTER THE COMPLETE MESSAGE HAS BEEN RECEIVED.

9.10 THE DATA TEST SUBROUTINE AT TESTD: IS
ENTERED AFTER A COMPLETE MESSAGE HAS BEEN
RECEIVED.
IF A 'RECEIVE ERROR' HAD BEEN DETECTED,
THE CONTENTS OF THE 'RECEIVE BUFFER' AT THE
TIME THE ERROR OCCURRED WILL BE PRINTED.
THE DATA IS COMPARED UNTIL A 'ALL ZEROS'
CHARACTER IS RECOGNIZED. 'FILL' (ALL ONES)
CHARACTERS ARE IGNORED. IF A MISMATCH
IS DETECTED, THE COMPLETE CONTENTS OF THE
INPUT BUFFER AND GOOD DATA IS PRINTED.

10.0 PARAMETERS FOR THE DL11

PARAM#1 MUST BE ALL ZEROS.

PARAM#2 BIT 0 OF THIS PARAMETER IS CHECKED BY THE SOFTWARE TO RUN
EITHER FULL-DUPLEX OR HALF-DUPLEX. BIT0=1 SELECTS FULL-DUPLEX,
BIT0=0 SELECTS HALF-DUPLEX. DEFAULT IS HALF-DUPLEX, ALL OTHER BITS MUST BE ZEROS.

PARAM#3 IS USED BY SOFTWARE TO DETERMINE IF TEST IS TO BE RUN A MODEM
OTHER THAN A STANDARD AMERICAN MODEM. FOR EXAMPLE, EUROPEAN MODEMS
EMPLOY A CLAMP TO INHIBIT CARRIER DETECT (BIT12) WHEN REQUEST TO
SEND IS ASSERTED. IF THIS DIAGNOSTIC WILL BE RUN ON A EUROPEAN
MODEM, MANUALLY SET PARAM3 TO ZERO(0). OTHERWISE LEAVE VALUE AT
MINUS ONE(177777). ; ; ++D


```

581
582
583
584
585      011000      011000
586      011000      046104      000040
587      011004      175610
588      011006      000300
589      011010      000200
590      011012      000000
591      011014      000000
592      011016      177777
593      011020      000000
594      011022      000000
595      011024      000000
596      011026      000000
597      011030      000000
598      011032      000000
599      011034      000000
600      011036      011102
601      011040
602      011040      000
603      011041
604      011041      001
605      011042      000000
606      011044      177570
607      011046      177570
608
609
610
611
612      000000
613      100000
614      040000
615      020000
616      020000
617
618      011050      000000
619      011052      000000
620      011054      000000
621      011056      000000
622      011060      000000
623
624      011062      000000
625      011064      000000
626      011066      000000
627      011070      000000
628
629      011072      177560
630      011074      177562
631      011076      177564
632      011100      177566
633
634      000001

```

```

*****
DL11 INTERFACE SERVICE PARAMS
*****
DL11:      .=11000
BA:        .ASCIZ /DL /
RIV:       300
PRIOR:     200
PARAM1:    000000
PARAM2:    000000
PARAM3:    177777
IRDA:      .WORD 0
IXDA:      .WORD 0
SETTLE:    .WORD 0
B2016:     .WORD 0
TIME:      .WORD 0
           .WORD 0
           .WORD START
TX. TERM:  .BYTE 000
RX. TERM:  .BYTE 001
FLAG:      .WORD 0
SWR:       177570
DISPLAY:   177570

```

```

;ISR NAME
;BUS ADDRESS
;VECTOR ADDRESS
;PRIORITY
;PARAM #1
;PARAM #2
;PARAM #3
;INITIAL READ DATA ADDRESS
;INITIAL XMIT DATA ADDRESS
;LINE SETTLE DELAY FLAG
;ADDR OF BIN TO OCT TYPE ROUTINE
;TIMER
;ADDR OF START OF PROGRAM
;TRANSMITTER TERMINATING CHAR.
;RECEIVER TERMINATING CHAR.

```

```

*****
CONSTANTS + WORKING STORAGE
*****
STAT=R0
XFLG=100000
RFLG=40000
DSFLG=20000
BIT13=20000
;XMIT COMPLETE FLAG
;RCV COMPLETE FLAG
;DATA SET STATUS CHANGE FLAG
;INHIBIT PRINTOUTS

SXCSR: 0
SRCSR: 0
ERCSR: 0
ERDBR: 0
DSSTAT: 0
;SAVED XMIT CSR
;SAVED RCV CSR
;RCV CSR SAVED ON ERROR
;RCV DATA REG SAVED ON ERROR
;RCV CSR SAVED ON DS CHANGE

XCC: 0
RCC: 0
RDA: 0
XDA: 0
;XMIT CHAR COUNT
;RCV CHAR COUNT
;RCV DATA ADDR.
;XMIT DATA ADDR.

TKS: 177560
TKB: 177562
TPS: 177564
TPB: 177566

FULL.DUPLEX=000001

```

```

635
636
637
638 011102 000240
639 011104 017700 177734
640 011110 042700 177400
641 011114 013702 011006
642 011120 012722 013662
643 011124 013722 011010
644 011130 012722 013544
645 011134 013722 011010
646 011140 013704 011004
647 011144 013714 011012
648 011150 013702 011014
649 011154 042702 000001
650 011160 010264 000004
651
652
653
654
655
656
657
658 011164 005037 011032
659 011170 005037 013054
660 011174 005037 013060
661 011200 032700 000001
662 011204 001402
663 011206 000137 011362
664 011212 032700 000002
665 011216 001402
666 011220 000137 011254
667 011224 032700 000010
668 011230 001402
669 011232 000137 011460
670 011236 032700 000004
671 011242 001402
672 011244 000137 011710
673 011250 000000
674 011252 000776
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689 011254 104416
690 011256 004737 013402

```

```

*****
DL11-X INTERFACE SERVICE ROUTINE
*****
START:  NOP
        MOV     JSWR,  R0      ;SETUP MODE IN R0
        BIC     #177400, R0    ;STRIP JUNK
        MOV     RIV,  R2      ;SETUP
        MOV     #RISR, (R2)+  ;INTERRUPT
        MOV     #PRIOR, (R2)+ ;VECTORS
        MOV     #XISR, (R2)+
        MOV     #PRIOR, (R2)+
        MOV     BA,  R4       ;SETUP BUS ADDR INDEX
        MOV     PARAM1, RCSR  ;SETUP VARIABLES
        MOV     PARAM2, R2
        BIC     #0001, R2
        MOV     R2,  XCSR(R4); IN CSR'S

```

```

*****
ROUTINE USED TO GOTO
SUBROUTINE DEPENDENT
ON MODE SELECTED.
*****

```

```

GO:  CLR     TIME
      CLR     DELAY
      CLR     STOP
      BIT     #OWO, MODE
      BEQ     1$
      JMP     SOWO
1$:  BIT     #OWI, MODE
      BEQ     2$
      JMP     SOWI
2$:  BIT     #ILB, MODE
      BEQ     3$
      JMP     $ILB
3$:  BIT     #XLB, MODE
      BEQ     4$
      JMP     $XLB
4$:  HALT
      BR      -2

```

```

*****
ROUTINE USED IF "ONE WAY IN" MODE WAS SELECTED.
NOTE THAT WHEN IN THIS MODE HALF DUPLEX IS THE
ONLY MODE AVAILABLE.
"ONE WAY IN" MEANS THAT ONLY THE RECEIVER IS
ENABLED. THE TRANSMITTER IS NEVER "TURNED ON".
*****

```

```

SOWI:  KBDIN
        JSR    PC, STARTR

```


691	011262	032700	040000		1S:	BIT	#RFLG, STAT
692	011266	001013				BNE	2S
693	011270	023727	011032	000100		CMP	TIME, #100
694	011276	103771				BLO	1S
695	011300	011402				MOV	3RCSR, R2
696	011302	016403	000004			MOV	XCSR(R4), R3
697	011306	104001				HLT	1
698	011310	005037	011032			CLR	TIME
699	011314	000762				BR	1S
700							
701	011316	032777	000200	177520	2S:	BIT	#NODAT, 3SWR
702	011324	001002				BNE	3S
703	011326	004737	012300			JSR	PC, TESTD
704	011332	042700	040000		3S:	BIC	#RFLG, STAT
705	011336	032777	000020	177500		BIT	#LOOP, 3SWR
706	011344	001405				BEQ	4S
707	011346	012737	011360	013056		MOV	#4S, BACK
708	011354	000137	012140			JMP	EOP
709	011360	000735			4S:	BR	SOWI

```

*****
ROUTINE USED IF "ONE WAY OUT" WAS SELECTED.
NOTE THAT WHEN IN THIS MODE HALF DUPLEX IS THE ONLY
MODE AVAILABLE.
"ONE WAY OUT" MEANS THAT ONLY THE TRANSMITTER IS
ENABLED. THE RECEIVER IS NEVER "TURNED ON."
*****

```

720	011362	104416			SOWO:	KBDIN	
721	011364	004737	013062			JSR	PC, STARTX
722	011370	005037	011032			CLR	TIME
723	011374	032700	100000		1S:	BIT	#XFLG, STAT
724	011400	001013				BNE	2S
725	011402	023727	011032	000100		CMP	TIME, #100
726	011410	103771				BLO	1S
727	011412	011402				MOV	3RCSR, R2
728	011414	016403	000004			MOV	XCSR(R4), R3
729	011420	104001				HLT	1
730	011422	005037	011032			CLR	TIME
731	011426	000762				BR	1S
732	011430	042700	100000		2S:	BIC	#XFLG, STAT
733	011434	032777	000020	177402		BIT	#LOOP, 3SWR
734	011442	001405				BEQ	3S
735	011444	012737	011456	013056		MOV	#3S, BACK
736	011452	000137	012140			JMP	EOP
737	011456	000741			3S:	BR	SOWO
738							
739							
740							

```

741
742
743
744
745
746
747
748
749
750
751
752 011460 104416
753 011462 004737 013402
754 011466 005037 011032
755 011472 032700 040000
756 011476 001013
757 011500 023727 011032 000100
758 011506 103771
759 011510 011402
760 011512 016403 000004
761 011516 104001
762 011520 005037 011032
763 011524 000762
764 011526 032777 000200 177310
765 011534 001002
766 011536 004737 012300
767 011542 042700 040000
768 011546 032777 000020 177270
769 011554 001405
770 011556 012737 011570 013056
771 011564 000137 012140
772 011570 032777 000400 177246
773 011576 001416
774 011600 013702 011020
775 011604 013703 011022
776 011610 010337 011070
777 011614 112223
778 011616 001376
779 011620 112743 000177
780 011624 005203
781 011626 112723 000177
782 011632 105023
783 011634 005037 011032
784 011640 004737 013062
785 011644 032700 100000
786 011650 001013
787 011652 023727 011032 000100
788 011660 103771
789 011662 011402
790 011664 016403 000004
791 011670 104001
792 011672 005037 011032
793 011676 000762
794 011700 042700 100000
795 011704 000137 011460

```

```

*****
ROUTINE USED IF INTERNAL LOOP BACK" WAS SELECTED.
NOTE THAT WHEN IN THIS MODE; HALF DUPLEX IS THE
ONLY MODE AVAILABLE.
"INTERNAL LOOP BACK" MEANS THAT THE RECEIVER IS "TURNED ON"
AND A COMPLETE MESSAGE IS RECEIVED. IF DATA IS TO BE CHECKED
IT IS: IF "END PASS" IS DESIRED; IT IS GIVEN.
THEN THE TRANSMITTER IS ENABLED. AFTER THE WHOLE MESSAGE
IS TRANSMITTED; THE CYCLE IS REPETED AS ABOVE.
*****
SILB: KBDIN
JSR PC, STARTR
CLR TIME
1$: BIT #RFLG, STAT
BNE 2$
CMP TIME, #100
BLO 1$
MOV #RCSR, R2
MOV XCSR(R4), R3
HLT 1
CLR TIME
BR 1$
BIT #NODAT, JSWR
BNE 3$
JSR PC, TESTD
BIC #RFLG, STAT
BIT #LOOP, JSWR
BEQ 4$
MOV #4$, BACK
JMP EOP
4$: BIT #400, JSWR
BEQ 7$
MOV IRDA, R2
MOV IXDA, R3
MOV R3, XDA
MOVB (R2)+, (R3)+
BNE -2
MOVB #177, -(R3)
INC R3
MOVB #177, (R3)+
CLRB (R3)+
7$: CLR TIME
JSR PC, STARTX
5$: BIT #XFLG, STAT
BNE 6$
CMP TIME, #100
BLO 5$
MOV #RCSR, R2
MOV XCSR(R4), R3
HLT 1
CLR TIME
BR 5$
6$: BIC #XFLG, STAT
JMP SILB

```

```

:USE EXTERNAL DATA?
:BR IF NO
:SET POINTER
:SET POINTER
:SETUP XMIT DATA ADDR
:MOVE INPUT TO OUTPUT
:LOOP IF NOT ZERO CHAR
:INSERT A FILL CHAR
:BUMP ADDRESS
:INSERT ANOTHER FILL
:INSERT ZERO CHAR

```


796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851

011710	104416		
011712	032737	000001	011014
011720	001402		
011722	004737	013402	
011726	004737	013062	
011732	005037	011032	
011736	032700	100000	
011742	001016		
011744	032700	040000	
011750	001024		
011752	023727	011032	000100
011760	103766		
011762	011402		
011764	016403	000004	
011770	104001		
011772	005037	011032	
011776	000757		
012000	032737	000001	011014
012006	001356		
012010	042700	100000	
012014	004737	013402	
012020	000746		
012022	032737	000001	011014
012030	001420		
012032	032700	100000	
012036	001013		
012040	023727	011032	000100
012046	103765		
012050	011402		
012052	016403	000004	
012056	104001		
012060	005037	011032	
012064	000756		
012066	042700	100000	
012072	042700	040000	
012076	005037	011032	
012102	032777	000200	176734
012110	001002		
012112	004737	012300	
012116	032777	000020	176720
012124	001671		
012126	012737	011710	013056
012134	000137	012140	

```
*****
ROUTINE USED IF "EXTERNAL LOOP BACK" WAS SELECTED.
EITHER HALF OR FULL DUPLEX MAY BE SELECTED IN THIS MODE.
"EXTERNAL LOOP BACK" MEANS THAT THE TRANSMITTER IS FIRST
TURNED ON (IF HALF DUPLEX) AND THE WHOLE MESSAGE IS TRANSMITTED;
THEN THE RECEIVER IS ENABLED. AFTER THE WHOLE MESSAGE IS RECEIVED
DATA WILL THEN BE CHECKED IF DESIRED AND END PASS WILL
BE GIVEN IF DESIRED. THEN THE CYCLE IS REPEATED
AS ABOVE. IF RUNNING IN FULL DUPLEX THE PROGRAM
WAITS FOR BOTH THE RECEIVER AND TRANSMITTER TO
FINISH THEN RESTARTS THE RECEIVER AND TRANSMITTER.
*****

$XLB: KBDIN
      BIT      #FULL.DUPLEX,PARAM2
      BEQ      1$
      JSR      PC,STARTR
      1$:      JSR      PC,STARTX
      CLR      TIME
      2$:      BIT      #XFLG,STAT
      BNE      3$
      7$:      BIT      #RFLG,STAT
      BNE      4$
      CMP      TIME,#100
      BLO      2$
      MOV      @RCSR,R2
      MOV      XCSR(R4),R3
      HLT      1
      CLR      TIME
      BR       2$
      3$:      BIT      #FULL.DUPLEX,PARAM2
      BNE      7$
      BIC      #XFLG,STAT
      JSR      PC,STARTR
      BR       2$
      4$:      BIT      #FULL.DUPLEX,PARAM2
      BEQ      8$
      BIT      #XFLG,STAT
      BNE      6$
      CMP      TIME,#100
      BLO      4$
      MOV      @RCSR,R2
      MOV      XCSR(R4),R3
      HLT      1
      CLR      TIME
      BR       4$
      6$:      BIC      #XFLG,STAT
      8$:      BIC      #RFLG,STAT
      CLR      TIME
      BIT      #NODAT,JSWR
      BNE      5$
      JSR      PC,TESTD
      BIT      #LOOP,JSWR
      BEQ      $XLB
      MOV      #XLB,BACK
      JMP      EOP
```

852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907012140
012140 104414 000340
012144 016437 000004
012152 042737 177677
012160 042764 000100
012166 012766 012226
012174 010037 013040
012200 010137 013042
012204 010237 013044
012210 010337 013046
012214 010437 013050
012220 010537 013052
012224 000207
012226
012226 013700 013040
012232 013701 013042
012236 013702 013044
012242 013703 013046
012246 013704 013050
012252 013705 013052
012256 012737 177777
012264 053764 012276
012272 000177 000560
012276 000000
012300 013746 011056
012304 001413
012306 032777 020000
012314 001007
012316 104400 012500
012322 004077 176502
012326 005746
012330 104400 012561
012334 013701 011022
012340 013702 011020
012344 122122
012346 001776
012350 123741 011040
012354 001447
012356 122742 000002
012362 001005
012364 010237 012372
012370 104400012276
012276
000004
000002013054
000004

176530

ROUTINE TO RETURN
TO MONITOR FOR
END PASS.

EOP:

STPS,PRTY7
MOV XCSR(R4),QTPIE ;SET PS PRIORITY TO 7
BIC #C<TIE>,QTPIE ;SAVE TX CSR
BIC #TIE,XCSR(R4) ;CLEAR ALL BUT TX IE.
MOV #ENTER,2(SP) ;CLEAR TX IE (EVEN IF IT WASN'T SET)
MOV R0,SAVR0 ;SET FOR RETURN IF SW 14=1
MOV R1,SAVR1 ;SAVE REGISTER 0
MOV R2,SAVR2 ;SAVE REGISTER 1
MOV R3,SAVR3 ;SAVE REGISTER 2
MOV R4,SAVR4 ;SAVE REGISTER 3
MOV R5,SAVR5 ;SAVE REGISTER 4
RTS PC ;SAVE REGISTER 5
;RETURN TO CONTROL PROGRAM

ENTER:

MOV SAVR0,R0 ;RESTORE R0
MOV SAVR1,R1 ;RESTORE R1
MOV SAVR2,R2 ;RESTORE R2
MOV SAVR3,R3 ;RESTORE R3
MOV SAVR4,R4 ;RESTORE R4
MOV SAVR5,R5 ;RESTORE R5
MOV #1,DELAY ;IF ORIGINALLY SET; SET TX IE
BIS QTPIE,XCSR(R4)
JMP @BACK

QTPIE: 000000

SUBROUTINE TO CHECK
RECEIVER DATA.
*****TESTD: MOV EROBR, -(SP) ;WAS THERE A RECEIVE ERROR?
BEQ TSTDAT ;BR IF NO
BIT #BIT13,JSWR ;INHIBIT PRINTOUTS?
BNE TSTDAT ;BR IF YES
TYPE MSG0 ;<15><12>THERE WAS A RECEIVE ERROR. RBUF=
JSR R0,@2016 ;PRINT CONTENTS OF RBUF
TST -(SP)
TYPE MSG1 ;<15><12>
TSTDAT: MOV IXDA, R1 ;SETUP XMIT DATA ADDR
MOV IXDA, R2 ;SETUP RCV DATA ADDR
SCAN4: CMPB (R1)+, (R2)+ ;DATA OK ?
BEQ SCAN4 ;BR IF OK
CMPB TX.TERM, -(R1) ;IS IT END OF DATA
BEQ TESTDX ;BR IF YES
CMPB #002, -(R2)
BNE 2\$
MOV R2,1\$
TYPE


```
908 012372 000000 15: .WORD 0
909 012374 000437 BR TESTDX
910 012376 105712 25: TSTB (R2)
911 012376 001435 BEQ TESTDX ; BR IF YES
912 012400 122721 000177 CMPB #177, (R1)+ ; IS IT FILL CHAR?
913 012402 001756 BEQ SCAN4 ; BR IF YES
914 012406 005301 DEC R1 ; BACKUP
915 012410 122722 000177 CMPB #177, (R2)+ ; IS IT FILL?
916 012412 001752 BEQ SCAN4 ; BR IF YES
917 012416 000240 SCANS: NOP ; DATA ERROR
918 012420 032777 020000 176414 BIT #BIT13, DSWR ; INHIBIT PRINTOUTS
919 012422 001016 BNE DERR ; BR IF YES
920 012430 104400 012564 012446 TYPE MSG2 ; <15><12>RECEIVED DATA = <15><12>
921 012432 013737 011020 012446 MOV IRDA, RDAX ; SETUP DATA ADRESS
922 012436 104400 RDAX: 0 ; PRINT RECEIVED DATA
923 012444 000000 TYPE MSG3 ; RECEIVED DATA ADDR.
924 012446 104400 012611 012464 MOV IXDA, .+10 ; <15><12>DATA SHOULD BE<15><12>
925 012450 013737 011022 012464 TYPE IXDA ; SETUP ADDR.
926 012454 111103 DERR: MOV B (R1), R3 ; SETUP XMIT DATA
927 012462 114202 MOV B -(R2), R2 ; SETUP RCV DATA
928 012464 104007 HLT+7 ; DATA ERROR HALT
929 012466 005726 TESTDX: TST (SP)+ ; POP STACK
930 012470 000207 RTS PC ; RETURN FROM SUB/ROUT
931 012472 000000
932 012474 000000
933 012476 000000
934 012500 005015 044124 051105 MSG0: .ASCIZ <15><12>/THERE WAS A RECEIVER ERROR. REGISTER (SEL 2) =/
935 012561 015 000012 MSG1: .ASCIZ <15><12>
936 012564 005015 042522 042503 MSG2: .ASCIZ <15><12>/RECEIVED DATA = /<15><12>
937 012611 015 042012 052101 MSG3: .ASCIZ <15><12>/DATA SHOULD BE/<15><12>
938 012634 005015 046120 040505 MSG4: .ASCIZ <15><12>/PLEASE MAKE CONNECTION (DIAL NUMBER)./
939 012703 015 053412 042510 MSG5: .ASCIZ <15><12>/WHEN CONNECTION COMPLETE: HIT CONTINUE SWITCH./<15><12>
940 012766 005015 046120 040505 MSG5: .ASCIZ <15><12>/PLEASE MAKE CONNECTION (DIAL NUMBER)./<15><12>
941 013040 000000 .EVEN
942 013042 000000 SAVR0: 0
943 013044 000000 SAVR1: 0
944 013046 000000 SAVR2: 0
945 013048 000000 SAVR3: 0
946 013050 000000 SAVR4: 0
947 013052 000000 SAVR5: 0
948 013054 000000 DELAY: 0
949 013056 000000 BACK: 0
950 013060 000000 STOP: 0
```

```
945  
946  
947  
948  
949 013062  
950 013062 005737 013054  
951 013066 001416  
952 013070 005037 013534  
953 013074 012737 000007 013536  
954 013102 062737 000001 013534  
955 013110 001374  
956 013112 005337 013536  
957 013116 001371  
958 013120 005037 013054  
959 013124 013737 011022 011070 1S:  
960 013132 052714 000002  
961 013136 005737 013060  
962 013142 001005  
963 013144 104400 012634  
964 013150 000000  
965 013152 005137 013060  
966 013156 032737 000001 011014 2S:  
967 013164 001003  
968 013166 032714 010000  
969 013172 001375  
970 013174 052714 000004 3S:  
971 013200 032714 000002  
972 013204 001430  
973  
974 013206 032714 020000 CTSW:  
975 013212 001017  
976 013214 023727 011032 000036  
977 013222 103771  
978 013224 011402  
979 013226 016403 000004  
980 013232 032777 010000 175604  
981 013240 001001  
982 013242 104002  
983 013244 005037 011032 1S:  
984 013250 000756  
985 013252 005737 011016 2S:  
986 013256 001403  
987 013260 032714 010000 3S:  
988 013264 001775  
989  
990 013266 005737 011024 CTSOK:  
991 013272 001416  
992 013274 005037 013534  
993 013300 012737 000030 013536  
994 013306 062737 000001 013534  
995 013314 001374  
996 013316 005337 013536  
997 013322 001371  
998 013324 005037 011024  
999 013330 032737 000001 011014 2S:  
1000 013336 001415
```

```
*****  
INITIALIZE TRANSMIT SUBROUTINE  
*****  
STARTX: TST DELAY ;IF SW04=1 & SW14=0 WAIT BEFORE TURNING ON TX  
BEQ 1S ;NO GO AHEAD AND TURN ON TX  
CLR TEMP1 ;PREPARE FOR DELAY  
MOV #7,TEMP2  
ADD #1,TEMP1 ;INCREMENT DELAY.....  
BNE -6  
DEC TEMP2  
BNE -14  
CLR DELAY ;ZERO POINTER.  
MOV IXDA,XDA ;SETUP XMIT DATA ADDR.  
BIS #DTR,DRCSR ;SET REQUEST TO SEND  
TST STOP  
BNE 2S  
TYPE ,MSG4  
HALT  
COM STOP  
BIT #FULL.DUPLEX,PARAM2;FULL DUPLEX?  
BNE 3S ;BR IF YES  
BIT #10000,DRCSR ;CARRIER UP?  
BNE -4 ;BR IF YES  
BIS #RQTS,DRCSR  
BIT #DTR,DRCSR ;IS THIS A DL11-E?  
BEQ CTSOK ;BR IF NO  
CTSW: BIT #CTS,DRCSR ;IS CLEAR TO SEND SET?  
BNE 2S ;BR IF YES  
CMP TIME,#36 ;30 SECS ELAPSED?  
BLO CTSW ;BR IF NO  
MOV DRCSR,R2 ;SETUP RCV CSR  
MOV XCSR(R4),R3 ;SETUP XMIT CSR  
BIT #SW12,DSWR ;INHIBIT PRINTOUTS?  
BNE 1S ;BR IF YES  
HLT+2 ;PRINTOUT 'WAITING TO XMIT'  
CLR TIME ;RESET TIMER  
BR CTSW ;WAIT SOME MORE  
TST PARAM3 ;STANDARD MODEM?  
BEQ CTSOK ;IF NO BR  
BIT #10000,DRCSR ;IS CARRIER UP?  
BEQ 3S ;BR IF NO  
CTSOX: TST SETTLE ;CONNECTION JUST MADE?  
BEQ 2S ;BR IF NO  
CLR TEMP1 ;YES PREPARE FOR DELAY  
MOV #14*2,TEMP2  
ADD #1,TEMP1 ;INCREMENT DELAY  
BNE -6  
DEC TEMP2  
BNE -14  
CLR SETTLE ;CLEAR DELAY FLAG  
BIT #FULL.DUPLEX,PARAM2;FULL DUPLEX?  
BEQ 1S ;BR IF NO
```

```
;;++D  
;;++D  
;;++D  
;;++D
```


CZDL000 DL11 ITP OVERLAY
CZDL00.P11 23-MAR-78 15:25

MACY11 30A(1052) 23-MAR-78 15:06 PAGE 22

SEQ 0021
SEQ 0021

```

1001 013340 032700 000004      BIT      #XLB,MODE      :XLB MODE?
1002 013344 001412      BEQ      1$      :BR IF NO
1003 013346 012737 177777 013542  MOV      #-1,TRNFLG      :SET FLAG
1004 013354 052764 000100 000004  BIS      #TIE,XCSR(R4) :SET INTERRUPT ENABLE
1005 013362 000001      WAIT
1006 013364 005737 013540      TST      SNCFLG      :FIRST CHAR RECEIVED YET?
1007 013370 001375      BNE      -4      :BR IF NO
1008 013372 052764 000100 000004 1$: BIS      #TIE, XCSR(R4) :SET XMIT INTERRUPT ENABLE
1009 013400 000207      RTS      PC      :EXIT FROM SUBROUTINE
1010
1011      ;*****
1012      ;INITIALIZE RECEIVER SUBROUTINE
1013      ;*****
1014 013402 005737 013060  STARTR: TST      STOP      :FIRST TIME HERE?
1015 013406 001012      BNE      1$      :BR IF NO
1016 013410 052714 000002      BIS      #DTR,DRCR      :SET DTR
1017 013414 104400 012766      TYPE      MSG$      :MAKE CONNECTION
1018 013420 012737 177777 011024 2$: MOV      #-1,SETTLE      :YES SET DELAY FLAG
1019 013426 012737 177777 013060  MOV      #-1,STOP
1020 013434 032737 000001 011014 1$: BIT      #FULL.DUPLEX,PARAM2;FULL DUPLEX?
1021 013442 001410      BEQ      3$      :BR IF NO
1022 013444 032700 000004      BIT      #XLB,MODE      :XLB MODE?
1023 013450 001405      BEQ      3$      :BR IF NO
1024 013452 005037 013534      CLR      TEMP1      :START DELAY
1025 013456 005237 013534      INC      TEMP1
1026 013462 001375      BNE      -4
1027 013464 012737 177777 013540 3$: MOV      #-1,SNCFLG      :SET FLAG
1028 013472 013737 011020 011066  MOV      IRDA, RDA      :SETUP RCV DATA ADDR
1029 013500 012737 001000 011064  MOV      #1000, RCC      :SETUP RCV CHAR COUNT
1030 013506 042700 040000      BIC      #RFLG,STAT      :CLEAR RFLG
1031 013512 005037 011054      CLR      ERCSR      :RESET ERROR RECORDS
1032 013516 005037 011056      CLR      ERDOR
1033 013522 005764 000002      TST      RBUF(R4)
1034 013526 052714 000143      BIS      #RIE+DTR+DIE+RE,DRCR;SET INTERRUPT ENABLES
1035 013532 000207      RTS      PC      :EXIT FROM SUBROUTINE
1036
1037 013534 000000      TEMP1: 0
1038 013536 000000      TEMP2: 0
1039 013540 000000      SNCFLG: 0
1040 013542 000000      TRNFLG: 0

```

```
1041  
1042  
1043  
1044 013544 000240  
1045 013546 127737 175316 011040  
1046 013554 001010  
1047 013556 052700 100000  
1048 013562 042714 000004  
1049 013566 042764 000100 000004  
1050 013574 000417  
1051  
1052 013576 117764 175266 000006  
1053 013604 032777 000100 175232  
1054 013612 001406  
1055 013614 105777 175256  
1056 013620 100003  
1057 013622 117777 175242 175250  
1058 013630  
1059 013630 005237 011070  
1060 013634 005737 013542  
1061 013640 001403  
1062 013642 042764 000100 000004  
1063 013650 005037 011032  
1064 013654 005037 013542  
1065 013660 000002  
1066  
1067  
1068  
1069 013662 000240  
1070 013664 105714  
1071 013666 100055  
1072 013670 116401 000002  
1073 013674 142701 000200  
1074 013700 110177 175162  
1075 013704 032777 000040 175132  
1076 013712 001405  
1077 013714 105777 175156  
1078 013720 100002  
1079 013722 110177 175152  
1080 013726  
1081 013726 005237 011066  
1082 013732 105077 175130  
1083 013736 005337 011064  
1084 013742 001010  
1085 013744 042714 000100  
1086 013750 011402  
1087 013752 016403 000004  
1088 013756 104006  
1089 013760 004737 013402  
1090  
1091 013764 123701 011041  
1092 013770 001004  
1093 013772 042714 000140  
1094 013776 052700 040000  
1095 014002 005764 000002  
1096 014006 100005
```

```
*****  
: TRANSMIT INTERRUPT SERVICE ROUTINE  
*****  
XISR: NOP  
CMPB 2XDA, TX.TERM : FINISHED XMITTING?  
BNE XISR1 : BR IF NO  
BIS 2XFLG, STAT : SET XMIT COMPLETE FLAG  
BIC 2RQTS, 2RCSR : RESET REQUEST TO SEND  
BIC 2TIE, XCSR(24) : RESET XMIT INTERRUPT ENABLE  
BR XISR2  
XISR1: MOVB 2XDA, XBUF(24) : XMIT NEXT CHAR.  
BIT 2100, 2SWR : MONITOR OUTPUT?  
BEQ NOXMON : BR IF NO  
TSTB 2TPS : IS TTY AVAILABLE  
BPL NOXMON : BR IF NO  
MOVB 2XDA, 2TPB : TYPE THE CHAR  
NOXMON: INC XDA : INCREMENT ADDRESS  
XISR2: TST TRNFLG : FIRST CHAR?  
BEQ 15 : BR IF NO  
BIC 2TIE, XCSR(24) : CLEAR INTERRUPT ENABLE  
15: CLR TIME : RESET TIMER  
CLR TRNFLG : CLEAR FLAG  
RTI : RETURN FROM INTERRUPT  
*****  
: RECEIVE INTERRUPT SERVICE ROUTINE  
*****  
RISR: NOP  
TSTB 2RCSR : IS RECEIVER DONE BIT SET  
BPL RISR2 : BR IF NO  
MOVB RBUF(24), R1 : STORE CHAR.  
BICB 2200, R1 : STRIP A BIT  
MOVB R1, 2RDA : MOVE CHAR TO INBUF  
BIT 240, 2SWR : MONITOR INPUT?  
BEQ NORMON : BR IF NO  
TSTB 2TPS : IS TTY AVAILABLE?  
BPL NORMON : BR IF NO  
MOVB R1, 2TPB : TYPE THE CHAR  
NORMON: INC RDA : BUMP POINTER  
CLRB 2RDA : CLEAR NEXT CHAR POSITION  
DEC RCC : DECREMENT CHAR. COUNTER  
BNE 15 : BR IF BUFFER NOT FULL  
BIC 2RIE, 2RCSR : RESET INTERRUPT ENAB  
MOV 2RCSA, R2 : SETUP RCY CSR  
MOV XCSR(24), R3 : SETUP XMIT CSR  
HLT+6 : RECEIVER BUFFER FULL  
JSR PC, STARTR : INITIALIZE RECEIVER  
15: CMPB RX.TERM, R1 : IS IT LINE FEED?  
BNE RISR1 : BR IF NO  
BIC 2RIF+DIE, 2RCSR : DISABLE INTERRUPTS  
BIS 2RFLG, STAT : SET RCVR COMPLETE FLAG  
RISR1: TST RBUF(24) : IS THERE A DATA ERROR  
BPL RISR2 : BR IF NO
```


1097	014010	011437	011054		MOV	RCRCSR, ERCSR	:SAVE RCSR
1098	014014	016437	000002	011056	MOV	RBUF(R4), ERDBR	:SAVE RDBR
1099	014022	005714			RISR2: TST	RCRCSR	:IS THERE A DATA SET STATUS CHANGE
1100	014024	100004			BPL	RISR3	:BR IF NO
1101	014026	011437	011060		MOV	RCRCSR, DSSTAT	:SAVE STATUS
1102	014032	052700	020000		BIS	#DSFLG, STAT	:SET FLAG
1103	014036	005037	013540		RISR3: CLR	SNCFLG	:CLEAR FLAG
1104	014042	005037	011032		CLR	TIME	:RESET TIMER
1105	014046	000002			RTI		:RETURN FROM INTERRUPT
1106							
1107		000001			.END		

CZDL000 DL11 ITP OVERLAY
CZDL00.P11 23-MAR-78 15:25MACY11 30A(1052) 23-MAR-78 15:06 PAGE 26
CROSS REFERENCE TABLE -- USER SYMBOLSSEQ 0024
SEQ 0024

BA	011004	587#	646						
BACK	013056	707#	735*	770*	850*	881	942#		
BIT0	= 000001	581#							
BIT1	= 000002	581#							
BIT10	= 002000	581#							
BIT11	= 004000	581#							
BIT12	= 010000	581#							
BIT13	= 020000	581#	616#	892	919				
BIT14	= 040000	581#							
BIT15	= 100000	581#							
BIT2	= 000004	581#							
BIT3	= 000010	581#							
BIT4	= 000020	581#							
BIT5	= 000040	581#							
BIT6	= 000100	581#							
BIT7	= 000200	581#							
BIT8	= 000400	581#							
BIT9	= 001000	581#							
B2016	= 011030	597#	895						
CD	= 010000	581#							
CTS	= 020000	581#	974						
CTSOK	013266	972	986	990#					
CTSW	013206	974#	977	984					
DELAY	013054	659#	879#	941#	950	958*			
DERR	012466	920	929#						
DIE	= 000040	581#	1034	1093					
DISPLA	011046	607#							
DL11	011000	586#							
DSC	= 100000	581#							
DSFLG	= 020000	581#	615#	1102					
DSSTAT	011060	622#	1101#						
DTR	= 000002	581#	960	971	1016	1034			
ENTER	012226	863	872#						
EOP	012140	708	736	771	851	858#			
ER	= 100000	581#							
ERCSR	011054	620#	1031#	1097*					
ERDBR	011056	621#	890	1032*	1098*				
FE	= 020000	581#							
FLAG	011042	605#							
FULL.D	= 000001	634#	810	826	831	966	999	1020	
GO	011164	658#							
ILB	= 000010	581#	667						
IRDA	011020	593#	774	899	922	1028			
IXDA	011022	594#	775	898	926	928	959		
KBDIN	= 104416	581#	689	720	752	809			
LOOP	= 000020	581#	705	733	768	848			
MSG0	012500	894	935#						
MSG1	012561	897	935#						
MSG2	012564	921	935#						
MSG3	012611	925	935#						
MSG4	012634	935#	963						
MSG5	012766	935#	1017						
NODAT	= 000200	581#	701	764	845				
NORMON	013726	1076	1078	1080#					
NOXMON	013630	1054	1056	1058#					
OR	= 040000	581#							

Variable	Value	Variable	Value	810	826	831	966	999	1020
OWI	= 000002	581#	664						
OWO	= 000001	581#	661						
PARAM1	011012	590#	647						
PARAM2	011014	591#	648	810	826	831	966	999	1020
PARAM3	011016	592#	985						
PE	= 010000	581#							
PRIOR	011010	589#	643	645					
PRTY0	= 000000	581#							
PRTY1	= 000040	581#							
PRTY2	= 000100	581#							
PRTY3	= 000140	581#							
PRTY4	= 000200	581#							
PRTY5	= 000240	581#							
PRTY6	= 000300	581#							
PRTY7	= 000340	581#	859						
QTPIE	012276	860#	861#	880	882#				
RA	= 004000	581#							
RBUF	= 000002	581#	1033	1072	1095	1098			
RCC	011064	625#	1029#	1083#					
RD	= 000200	581#							
RDA	011066	626#	1028#	1074#	1081#	1082#			
RDAX	012446	922#	924#						
RE	= 000001	581#	1034						
RFLG	= 040000	614#	691	704	755	767	817	843	1030
RI	= 040000	581#							1094
RIE	= 000100	581#	1034	1085	1093				
RISR	013662	642	1069#						
RISR1	014002	1092	1095#						
RISR2	014022	1071	1096	1099#					
RISR3	014036	1100	1103#						
RIV	011006	588#	641						
RATS	= 000004	581#	970	1048					
RWAIT	= 104410	581#							
RX.TER	011041	603#	1091						
SAVR0	013040	864#	873	935#					
SAVR1	013042	865#	874	936#					
SAVR2	013044	866#	875	937#					
SAVR3	013046	867#	876	938#					
SAVR4	013050	868#	877	939#					
SAVR5	013052	869#	878	940#					
SCAN4	012344	900#	901	914	917				
SCAN5	012420	918#							
SETTLE	011024	595#	990	998#	1018#				
SNCFLG	013540	1006	1027#	1039#	1103#				
SRC5R	011052	619#							
SRO	= 002000	581#							
START	011102	600	638#						
STARTR	013402	690	753	812	829	1014#	1089		
STARTX	013062	721	784	813	949#				
STD	= 000010	581#							
STOP	013060	660#	943#	961	965#	1014	1019#		
STPS	= 104414	581#	859						
SWR	011044	606#	639	701	705	733	764	768	772
SW12	= 010000	1053	1075						845
SXCSR	011050	581#	980						
		618#							

CZDL000 DL11 ITEP OVERLAY
CZDL00.P11 23-MAR-78 15:25MACY11 30A(1052) 23-MAR-78 16:06 PAGE 28
CROSS REFERENCE TABLE -- USER SYMBOLSSEQ 0026
SEQ 0026

TEMP1	013534	952*	954*	992*	994*	1024*	1025*	1037*						
TEMP2	013536	953*	956*	993*	996*	1038*								
TESTD	012300	703	766	847	890*									
TESTDX	012474	903	909	912	932*									
TIE =	000100	581*	861	862	1004	1008	1049	1062						
TIME	011032	598*	658*	693	698*	722*	725	730*	754*	757	762*	783*	787	792*
		814*	819	824*	835	840*	844*	976	983*	1063*	1104*			
TKB	011074	630*												
TKS	011072	629*												
TPB	011100	632*	1057*	1079*										
TPS	011076	631*	1055	1077										
TR	= 000200	581*												
TRNFLG	013542	1003*	1040*	1060	1064*									
TSTDAT	012334	891	893	898*										
TX.TER	011040	601*	902	1045										
TYPE =	104400	581*	894	897	907	921	923	925	927	963	1017			
XBUF =	000006	581*	1052*											
XCC	011062	624*												
XCSR =	000004	581*	650*	696	728	760	790	822	838	860	862*	880*	979	1004*
		1008*	1049*	1062*	1087									
XDA	011070	627*	776*	959*	1045	1052	1057	1059*						
XFLG =	100000	613*	723	732	785	794	815	828	833	842	1047			
XISR	013544	644	1044*											
XISR1	013576	1046	1052*											
XISR2	013634	1050	1060*											
XLB =	000004	581*	670	1001	1022									
XWAIT =	104412	581*												
\$ILB	011460	669	752*	795										
\$OWI	011254	666	689*	709										
\$OWO	011362	663	720*	737										
\$XLB	011710	672	809*	849	850									
.	= 014050	585*	674	778	926*	955	957	969	995	997	1007	1026		

. ABS. 014050 000

ERRORS DETECTED: 0

DSKZ:CZDL0D,DSKZ:CZDL0D.SEG=DSKZ:ITEP1.MAC,DSKZ:CZDL0D.P11

RUN-TIME: 3 5 .3 SECONDS

RUN-TIME RATIO: 65/9=7.1

CORE USED: 16K (31 PAGES)

DOCUMENT PAGES: 26

