


VT20

BOOTSTRAP LOADER
MD-11-DZBMK-B

EP-DZBMK-B-DL
COPYRIGHT 73-74
FICHE 1 OF 1

MAY 1978
digital
MADE IN USA

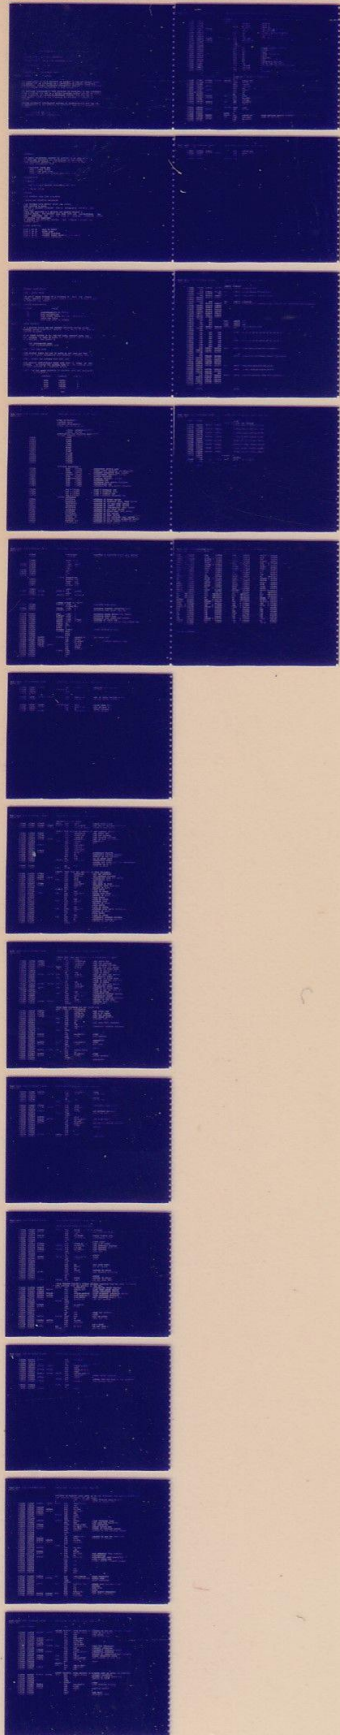

IDENTIFICATION

PRODUCT CODE: MAINDEC-11-DZBMK-R-D

PRODUCT NAME: M792YK VT20 BOOTSTRAP LOADER

DATE CREATED JANUARY 11, 1974

MAINTAINER: DIAGNOSTIC GROUP

AUTHOR: ED BADGER

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS MANUAL.

THE SOFTWARE DESCRIBED IN THIS DOCUMENT IS FURNISHED TO THE PURCHASER UNDER A LICENSE FOR USE ON A SINGLE COMPUTER SYSTEM AND CAN BE COPIED (WITH INCLUSION OF DIGITAL'S COPYRIGHT NOTICE) ONLY FOR USE IN SUCH SYSTEM, EXCEPT AS MAY OTHERWISE BE PROVIDED IN WRITING BY DIGITAL.

DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL.

COPYRIGHT © 1973, 1974
DIGITAL EQUIPMENT CORPORATION

1. ABSTRACT

THE DZBNK DIAGNOSTIC PROGRAM IS WRITTEN TO BE USED AS AN AID TO HARDWARE DEBUGGING AND MAINTENANCE OF THE M792YK VI20 BOOTSTRAP LOADER). THIS PROGRAM MAY ALSO BE USED AS A DATA RELIABILITY TEST.

THE AVAILABLE TESTS ARE

- PRG0 - LOGIC TESTS
- PRG1 - ROM DATA DUMP
- PRG2 - SINGLE ROM ADDRESS READ DATA LOOP

2. REQUIREMENTS

2.1 EQUIPMENT

- A. PDP 11 FAMILY CENTRAL PROCESSOR/WITH VI20
- B. M792-YK MODULE

2.2 STORAGE

THIS PROGRAM USES CORE 0-4100(8)

3. LOADING AND STARTING PROCEDURE

LOAD PROGRAM INTO MEMORY USING ABS LOADER.

LOAD ADDRESS = 00200

SET SWR = DESIRED STANDARD PDP-11 DIAGNOSTIC OPTIONS (SEE SECT 4.0)

NOTE: ALL SWITCHES = 0 SELECTS AND STARTS PROGRAM 0

DEPRESS START. THE PROGRAM WILL THEN TYPE OUT INSTRUCTIONS. ALL USER RESPONSES ARE VIA THE "TUBE 0" KEYBOARD (CARRIAGE RETURN TERMINATES THE RESPONSE)

TO RESTART THE SELECTED PROGRAM LOAD ADDRESS = 000210 AND DEPRESS START

4.0 SWITCH SETTINGS

- | | |
|--------------|-----------------------------------|
| SW15 1 OR UP | HALT ON ERROR |
| SW14 1 OR UP | SCOPE LOOP |
| SW13 1 OR UP | INHIBIT PRINTOUT |
| SW12 1 OR UP | INHIBIT TRACE TRAPPING (NOT USED) |
| SW11 1 OR UP | INHIBIT ITERATION |

5. PROGRAM DESCRIPTIONS

5.1 PRG0 - LOGIC TESTS

THE LOGIC TESTS CONSIST OF 4 ROUTINES TO TEST THE M792YK LOGIC. PROGRAM 0 LOOPS WITHIN ITSELF UNTIL A NEW PROGRAM NUMBER IS PROVIDED I.E., PRG# = ?

5.1.1 ROUTINE DESCRIPTIONS

ROUTINE	TESTS
T1	ADDRESSABILITY OF M792YK
T2	DATA RELIABILITY
T3	THAT M792YK TIMES OUT WHEN REFERENCED BY A DATIP BUS CYCLE
T4	THAT DATA READ IS CORRECT

5.1.2 ERROR PRINTOUT

IF A ROUTINE FAILS AND THE INHIBIT PRINTOUT SWITCH IS NOT ENABLED (SW13) A PRINTOUT RESULTS. I.E., THE PC AT THE TIME OF FAILURE IS TYPED.

IF AN ERROR OCCURS IN T4, THE ROM DATA, CORRECT DATA, AND THE ADDRESS OF EACH IS TYPED OUT (THE ERROR TYPEOUT CANNOT BE DISABLED). THE FORMAT IS

ROM ADDRESS/ROM DATA
IMAGE ADDRESS*CORRECT DATA

5.2 PRG1 - ROM DATA DUMP

THIS PROGRAM TYPES OUT THE 32 WORDS OF ROM DATA AND THEN TYPES OUT 'PRG#=' REQUESTING WHAT PROGRAM TO PERFORM NEXT.

5.3 PRG2 - SINGLE ROM ADDRESS READ DATA LOOP

THIS PROGRAM CONTINUOUSLY READS DATA FROM A TYPED IN ROM ADDRESS. TO CHANGE THE ADDRESS TYPE IN A NEW ADDRESS. (MUST BE EVEN) FOLLOWED BY A CARRIAGE RETURN.

NOTE: THE ROM WORDS STARTING AT LOCATION 4000 ARE DESIGNATED AS FOLLOWS -

LOCATION	CONTENTS	WORD NO.
4000	012701	0
4002	160000	2
4004	012702	4
4006	000006	6
4010	012703	10

ETC.

!LOAD ADDRESS=0200
!DEPRESS START
!RESTART ADDRESS=0210
!STACK POINTER IS AT 500

!MCALL SCPREGS,SCPVECS
!MCALL SCMTAG
!DEFINITIONS AND REGISTER ASSIGNMENTS
!GENERAL REGISTER ASSIGNMENTS

000000
000001
000002
000003
000004
000005
000006
000007
000000
000001
000002
000003
000004
000005

R0=R0
R1=R1
R2=R2
R3=R3
R4=R4
R5=R5
SP=R6
PC=R7
R10=R0
R11=R1
R12=R2
R13=R3
R14=R4
R15=R5

!REGISTER ADDRESSES

177776
177774
177772
177770
177570
177570
177560
177562
177564
177566

PSW= 177776
SLR= 177774
PIRQ= 177772
UBREAK= 177770
SRR= 177570
DISPLAY=177570
TKS= 177560
TKB= 177562
TPS= 177564
TPB= 177566

!PROCESSOR STATUS WORD
!STACK LIMIT REGISTER (11/40,11/45)
!PROGRAM INTERRUPT REQ. (11/45)
!MICRO-BREAK REGISTER (11/45)
!SWITCH REGISTER
!DISPLAY REGISTER (11/45)
!KEYBOARD CSR
!KEYBOARD DATA BUFFER REGISTER
!TELEPRINTER CSR
!TELEPRINTER DATA BUFFER REGISTER

170334
170336
170304
170302

FKS = 170334
FKB = 170336
VTC = 170304
VIS = 170302

!TUBE 0 KEYBOARD CSR
!TUBE 0 KEYBOARD DATA
!TUBE 0 DISPLAY CSR
!TUBE 0 DISPLAY STARTING ADR.

!VECTOR ADDRESSES

000004
000010
000014
000014
000014
000020
000024
000030
000034
000060
000064
000114
000240

ERRVEC=4
RESVEC=10
TBITVEC=14
TRTVEC=14
BPTVEC=14
IOTVEC=20
PFVEC=24
EMTVEC=30
TRAPVEC=34
TKVEC= 60
TPVEC=64
PARVEC= 114
PIRVEC=240

!ADDRESS OF ERROR VECTOR
!ADDRESS OF RESERVED INST. TRAP VECTOR
!ADDRESS OF 'T' BIT TRAP VECTOR
!ADDRESS OF 'TRACE' TRAP VECTOR
!ADDRESS OF 'BREAKPOINT' TRAP VECTOR
!ADDRESS OF IOT TRAP VECTOR
!ADDRESS OF POWER FAIL TRAP VECTOR
!ADDRESS OF EMT VECTOR
!ADDRESS OF TRAP VECTOR
!ADDRESS OF TTY KEYBOARD INT. VECTOR
!ADDRESS OF TTY PRINTER INTERRUPT VECTOR
!ADDRESS OF MA/MF PARITY ERROR VECTOR
!ADDRESS OF PIRQ VECTOR

	000244		FPEVFC=244	ADDRESS OF FLOATING POINT INT. VECTOR
	000250		MMVEC=250	ADDRESS OF MEM MGMT ERROR TRAP VECTOR
	000320		FKVEC = 320	
	000020		.=20	
000020	003234		.WORD VTOUT	
000022	000240		.WORD 240	
	000030		.=30	
000030	002764		.SCOPE	
000032	000340		340	
000034	003074		.HLT	
000036	000000		0	
		;EQUATE	STATEMENTS	
	000500		STKPTR= 500	
	000004		TYPE= 10T	
	104400		HLT= TRAP	
	104000		SCOPE= ENT	
	000200		.=200	
000200	000167	001132	START1: JMP PRMTRS	
	000210		.=210	
000210	000167	001210	START3: JMP RESTART	
	001300		.=1300	
		;WORDS LOADED BY 'SCOPE'		
001300	000000	SCPBLK:	.WORD 0	CONTAINS PASS COUNT
	001300		ICNT=SCPBLK	
001302	000002	ITCNT:	.WORD 2	CONTAINS SUBTEST ITERATION COUNT
001304	000004	LASTPC:	.WORD 4	CONTAINS LAST SCOPE CALL PC
001306	000000	EPC:	.WORD 0	CONTAINS SCOPE RETURN FOR ERRORS
001310	000000	ERRFLG:	.WORD 0	CONTAINS ERROR FLAG
001312	000000	TICKS:	.WORD 0	CONTAINS TICK COUNT FOR CLOCKS
001314	177560	INCSR:	.WORD 177560	ADDRESS OF INPUT CSR
001316	177562	INDAT:	.WORD 177562	ADDRESS OF INPUT DEVICE DATA BUFFER REG
001320	000040	WORDS:	32.	
001322	004000	IMAGE:	4000	
001324	000000	TEMP:	0	
001326	173000	ROMADD:	173000	FIRST ADDRESS OF DATA
001330	001442	PRGTAB:	PRG0	
001332	002202		PRG1	
001334	002322		PRG2	
001336	012706	PRMTRS:	MOV #STKPTR, %6	SET STACK PTR
001342	005067		CLR PRGNUM	
001346	004767		JSR %7, RESBF	OVERLAY PRINTOUT AREA
001352	010467		MOV R4, VTS	
001356	012767		MOV #1, VTC	
001364	005737		TST @%SWR	
001370	001415		BEG RESTART	
001372	000004	FIXED:	TYPE	
001374	003553		MHED	
001376	000004		TYPE	
001400	003365		M6	

TEST DZRMK VT20 BOOTSTRAP LOADER
DZRMK.SPC

VACY11.624 21-JAN-74 10:05 PAGE 1-2

001402	004567	001120	JSP	5,RECD	RECEIVE DATA AND PUT
001406	000000		PRGNUM: 0		IT HERE
001410	000004		TYPE		
001412	003414		MB		
001414	026727	177766	000002	CMP	PRGNUM,02
001422	003345			BGT	PRMPS
					SEE IF LEGAL PROGRAM NUMBER
					IF NOT RETYPE QUESTION
001424	005067	000550	PESTART:CLP	PCNT	CLEAR PASS COUNT
001430	016700	177752	MOV	PRGNUM,00	GET PROGRAM *
001434	006300		ASL	00	SHIFT PROGRAM *
001436	000170	001330	JMP	0PEGTAB(0)	GO TO PROGRAM

```

;PROGRAM 0 LOGIC TESTS
001442 005067 177632 PRG0: CLR ICNT ICLEAR PASS COUNT
001446 012767 001462 177630 PRG0R: MOV #T1,LASTPC ISET RETURN ADDRESS FOR SCOPE
001454 016737 177620 177570 MOV ICNT,#DISPLAY IDISPLAY PASS COUNT

;TEST1 TEST ABILITY TO REFERENCE ROM WITHOUT TIMING OUT
001462 012706 000500 T1: MOV #STKPTR,SP ISET STACK PTR
001466 016700 177634 MOV ROMADD,#0 IGET ROM ADDRESS
001472 016701 177622 MOV WORDS,#1 IGET ADDRESS COUNTER
001476 012767 001536 176300 MOV #ERROR1,4 ISET UP TIME OUT VECTOR
001504 011003 T1A: MOV (0),#3 IREFERENCE
001506 005720 TST (0)+ IROM
001510 064067 177610 ADD #-(0),TEMP I
001514 021010 CMP (0),(0) I
001516 132020 BITH (0)+,(0)+ I
001520 164067 177600 SUB #-(0),TEMP I
001524 062700 000002 ADD #2,#0 IINCREMENT POINTER
001530 005301 DEC #1 IDECREMENT ADDRESS COUNTER
001532 001364 BNE T1A IBRANCH IF NOT FINISHED
001534 000403 BR T1B IGO TO SCOPE LOOP
001536 022626 ERROR1: CMP (6)+,(6)+ IREPOSITION STACK
001540 104400 HLT IERROR! ROM TIMED OUT WHEN REFERENCED
                                IADDRESS IS IN R0
                                ILOOP ON ERROR

001542 000760 BR T1A
001544 104000 T1B: SCOPE

;TEST2 TEST THAT ROM DATA CAN BE READ RELIABLY.
001546 016700 177554 T2: MOV ROMADD,#0 IGET ROM ADDRESS
001552 016701 177542 MOV WORDS,#1 IGET ADDRESS COUNTER
001556 012767 000006 176220 MOV #6,4 IINITIALIZE TIME OUT VECTOR
001564 005067 177534 T2A: CLR TEMP IINITIALIZE TEMP
001570 011003 MOV (0),#3 IGET DATA
001572 062067 177526 ADD (0)+,TEMP IADD DATA TO TEMP
001576 166703 177522 SUB TEMP,#3 ISUBTRACT DATA FROM DATA
001602 001402 BEQ T2B IBRANCH IF EQUAL
001604 104400 ERROR2: HLT IDATA ERROR
001606 000766 BR T2A ILOOP ON ERROR
001610 044067 177510 T2B: BIC #-(0),TEMP ICLEAR TEMP BITS
001614 001402 BEQ T2C IBRANCH IF EQUAL TO 0
001616 104400 HLT IDATA ERROR
001620 000773 BR T2B ILOOP ON ERROR
001622 021010 T2C: CMP (0),(0) ICOMPARE DATA
001624 001402 BEQ T2D IBRANCH IF EQUAL
001626 104400 HLT IDATA ERROR
001630 000774 BR T2C ILOOP ON ERROR
001632 122040 T2D: CMPB (0)+,#-(0) ICOMPARE DATA (BYTE OPERATION)
001634 001402 BEQ T2E IBRANCH IF EQUAL
001636 104400 HLT IDATA ERROR
001640 000774 BR T2D ILOOP ON ERROR
001642 005720 T2E: TST (0)+ IINCREMENT ADDRESS POINTER
001644 005301 DEC #1 IDECREMENT ADDRESS COUNTER
001646 001364 BNE T2A IRETURN IF NOT DONE
001650 104000 SCOPE

```

```

;TEST3 TEST THAT ROM TIMES OUT IF REFERENCED BY OTHER
;THAN DATA BUS CYCLE
001652 012706 000500 T3: MOV $STKPTR,%6 ;SET STACK PTR
001656 016700 177444 MOV ROMADD,%0 ;GET ROM ADDRESS
001662 016701 177432 MOV WORDS,%1 ;GET ADDRESS COUNTER
001666 012767 001702 176110 T3AA: MOV $T3B,4 ;SET UP TIME OUT VECTOR
001674 010010 T3A: MOV $0,(0) ;ATTEMPT TO ALTER DATA
001676 104400 HLT ;HERE IF DID NOT TIME OUT
001700 000775 BR T3A ;LOOP ON ERROR
001702 012767 001720 176074 T3B: MOV $T3D,4 ;SET UP TIME OUT VECTOR
001710 022626 CMP (6)+,(6)+ ;REPOSITION STACK
001712 005210 T3C: INC (0) ;ATTEMPT TO ALTER DATA
001714 104400 HLT ;HERE IF DID NOT TIME OUT
001716 000775 BR T3C ;LOOP ON ERROR
001720 012767 001740 176056 T3D: MOV $T3F,4 ;SET UP TIME OUT VECTOR
001726 022626 CMP (6)+,(6)+ ;REPOSITION STACK
001730 005077 177372 T3E: CLR $ROMADD ;ATTEMPT TO ALTER DATA
001734 104400 HLT ;HERE IF DID NOT TIME OUT
001736 000774 BR T3E ;LOOP ON ERROR
001740 005720 T3F: TST (0)+ ;INCREMENT ADDRESS POINTER
001742 022626 CMP (6)+,(6)+ ;REPOSITION STACK
001744 005301 DEC %1 ;DECREMENT ADDRESS COUNTER
001746 001347 BNE T3AA ;RETURN IF NOT DONE
001750 012737 000006 000004 MOV $6,%#4 ;RESTORE TIME OUT TRAP
001756 104000 SCOPE ;SCOPE LOOP

```

```

;THIS TEST COMPARES ROM AND IMAGE DATA
;AND TYPES OUT DIFFERENCES
001760 012706 000500 T4: MOV $STKPTR,%6 ;SET STACK PTR
001764 016701 177330 MOV WORDS,%1 ;GET # OF WORDS
001770 016700 177332 MOV ROMADD,%0 ;GET ROM ADDRESS
001774 016703 177322 MOV IMAGE,%3 ;GET IMAGE ADDRESS
002000 021013 T4B: CMP (0),(3) ;COMPARE DATA
002002 001004 BNE T4D
002004 005301 T4C: DEC %1 ;ALL DATA BEEN COMPARED
002006 001441 BEQ T4E
002010 022023 CMP (0)+,(3)+ ;INCREMENT ADDRESS POINTERS
002012 000772 BR T4B
002014 000004 T4D: TYPE
002016 003414 M8
002020 010067 001110 MOV $0,D2BTYP ;TYPE
002024 004767 001106 JSR 7,02A ;FROM ADDRESS
002030 000004 TYPE
002032 003501 M10 ;SEPARATOR
002034 011067 001074 MOV (0),D2BTYP ;TYPE
002040 004767 001072 JSR 7,02A ;FROM DATA
002044 000004 TYPE
002046 003414 M8 ;CR/LF
002050 032737 040000 177570 18: BIT $40000,%#SWR
002056 001374 BNE 18
002060 010367 001050 MOV $3,D2BTYP ;TYPE
002064 004767 001046 JSR 7,02A ;IMAGE ADDRESS
002070 000004 TYPE
002072 003505 M12 ;SEPARATOR

```

002074	011367	001034		MOV	(3),D2BTYP	ITYPE
002100	004767	001032		JSP	7,02A	IMAGE DATA
002104	000004			TYPE		
002106	003414			MB		ICR/LF
002110	000735			PR	T4C	IGO TO T4C
002112	104000		T4E:	SCOPE		
002114	005267	177160		END:	INC	ICNT
002120	026727	177154	000100	CMP	ICNT,=100	INCREMENT PASS COUNT
002126	001402			BEG	DONE	
002130	000167	177312		JMP	PRGOR	GO RESTART PROGRAM
002134	000004		DONE:	TYPE		RING THE BELL
002136	003507			MBELL		
002140	005267	000034		INC	PCNT	
002144	016767	000030	000762	MOV	PCNT,D2BTYP	GET PASS COUNT
002152	004767	000760		JSR	7,02A	
002156	013700	000042		MOV	0=42,80	RETURN TO DECTAPE MONITOR?
002162	001404			BEG	DONE1	
002164	004710			JSR	7,(0)	RETURN!
002166	000240			NOP		
002170	000240			NOP		
002172	000240			NOP		
002174	000167	177242	DONE1:	JMP	PRGO	
002200	000000		PCNT:	0		PASS COUNT

THIS PROGRAM TYPES OUT ROM DATA

002202 005067 000234
002206 005267 000230
002212 001375
002214 004767 001102
002220 012706 000500
002224 000004
002226 003377
002230 016701 177064
002234 016700 177066
002240 012702 000011
002244 010067 000664
002250 004767 000662
002254 000004
002256 003414
002260 012067 000650
002264 004767 000646
002270 000004
002272 003503
002274 005301
002276 001407
002300 005302
002302 001366
002304 012702 000011
002310 000004
002312 003414
002314 000753
002316 000167 177050

PRG1: CLR PRG2H INITATE A DELAY
INC PRG2B AND EXECUTE DELAY
BNE ,=4
JSR %7,RESBF RESET BUFFER AREA
MOV %STKPTR,%6 INITIALIZE STACK
TYPE
M7 ;'ROM DATA'
MOV WORDS,%1 ;GET # OF WORDS
PRG1A: MOV ROMADD,%0 ;GET STARTING ADDRESS
MOV %11,%2 ;GET ADDRESS INDICATOR
PRG1B: MOV %0,D2BTYP ;GET ADDRESS
JSR 7,02A ;AND TYPE IT
TYPE
M6 ;CR/LF
PRG1C: MOV (%),D2BTYP ;TYPE
JSR 7,02A ;DATA
TYPE
M11
DEC %1 ;ALL DATA TYPED,
BEG PRG1D ;GO TO FINISH
DEC %2
BNE PRG1C ;RETURN TO PRG1B
MOV %11,%2 ;GET ADDRESS INDICATOR
TYPE
M8 ;CR/LF
BR PRG1B ;RETURN TO PRG1B
PRG1D: JMP FIXED ;GO GET NEXT TEST

THIS PROGRAM CYCLES A SINGLE ADDRESS (ADDRESS MUST BE EVEN) TO CHANGE
THE ADDRESS TYPE NEW ADDRESS ON THE TTY.

002322 012706 000500
002326 012737 002510 000004
002334 005067 175436
002340 012737 002412 000320
002346 012737 000340 000322
002354 052737 000101 170334
002362 016700 176740
002366 000004
002370 003663
002372 010067 000536
002376 004767 000534
002402 000004
002404 003414
002406 005710
002410 000776
002412 105767 165716
002416 100407
002420 052767 000002 165706
002426 052767 000101 165700
002434 000002
002436 004567 000064
002442 000000

PRG2: MOV %STKPTR,%6 INITIALIZE STACK POINTER
MOV %PRG2C,%4 ;LOAD TRAP ERROR VECTOR
CLR PSW ;CLEAR PROCESSOR STATUS
MOV %PRG2A,%FKVEC ;LOAD KEYBOARD INTERRUPT VECTOR
MOV %340,%FKVEC+2 ;LOAD KEYBOARD PRIORITY
BIS %101,%FKS ;SET INTERRUPT ENABLE BIT
MOV ROMADD,%0 ;GET ROM ADDRESS
PRG20: TYPE
MCYC
MOV %0,D2BTYP
JSR 7,02A
TYPE
M8
TST (%);READ ROM ADDRESS
BR ,=2 ;LOOP
PRG2A: TSTR FKS ;DID KB INTR?
BMI 46 ;YES, GET INFO
BIS %2,FKS
BIS %101,FKS
RTI
46: JSR %5,RECD ;NO - EXIT
PRG2B: 0 ;GO GET ADDR &
;PUT IT HERE

TEST DZBMK VT20 BOOTSTRAP LOADER
DZBMK.SRC

MACY11.624 21-JAN-74 10:05 PAGE 2-1

002444	016700	177772		MOV	PRG2B,80	
002450	000004			TYPE		
002452	003414			MB		ICR/LF
002454	026727	177762	173000	CMP	PRG2B,#173000	
002462	002415			BLT	PRER	
002464	026727	177752	173100	CMP	PRG2B,#173100	
002472	002011			BGE	PRER	
002474	012737	002412	000320	PRERN: MOV	#PRG2A,#FKVEC	
002502	022626			CMP	(6)+,(6)+	RESET STACK POINTER
002504	000167	177656		JMP	PRG20	
002510	104400			PRG2C: HLT		ERROR! DID YOU TYPE AN ODD ADDRESS?
002512	000167	177726		JMP	PRG2B+2	TRY ADDRESS AGAIN
002516	000004			PRER: TYPE		
002520	003632			WA		
002522	000167	177746		JMP	PRERN	

```

;ROUTINE TO RECEIVE DATA TYPED IN ON THE KEYBOARD. THE DATA IS PLACED IN
;THE ADDRESS FOLLOWING THE JSR CALL:
;
;      JSP      5,RECD  ;CALL RECEIVE DATA ROUTINE
;      0          ;DATA IS PLACED HERE
002526 012767 002572 175564 RECD:  MOV      #RECD1,FKVEC
002534 005015                CLP      (5)
002536 005067 000104                CLR      DONF
002542 052767 000002 165564                BIS      #2,FKS
002550 052767 000101 165556                BIS      #101,FKS
002556 005067 175214                CLR      PSW
002562 005767 000060 RECD1:  TST      DONF
002566 001775                BEQ      RECD1
002570 000205                RTS      R5
002572 105737 170334 RECD1:  TSTB     #FKS          ;TEST KEYBOARD FLAG
002576 100063                BPL      REX          ;AND WAIT FOR CHARACTER
002600 113746 170336                MOVB     #FKB,-(SP) ;GET CHARACTER
002604 042716 177700                BIC      #177700,(SP) ;STRIP PARITY BIT
002610 122716 000015                CMPB     #15,(SP) ;CHECK IF CARRIAGE RETURN
002614 001015                BNE      DONF+2        ;BRANCH IF NOT CARRIAGE RETURN
002616 000004                TYPE
002620 003414                MB
002622 022526                CMP      (R5)+,(SP)+ ;ADJUST R5 AND THE STACK PTR
002624 005267 000016                INC      DONF ;RETURN TO CALLER
002630 052767 000002 165476                BIS      #2,FKS
002636 052767 000101 165470                BIS      #101,FKS
002644 000002                RTI
002646 000000                DONF:  0
002650 022716 000003                CMP      #3,(SP)
002654 001002                BNE      ,+6
002656 000137 000200                JMP      #200
002662 022716 000077                CMP      #77,(SP) ;DID OPERATOR TYPE RUBOUT?
002666 001012                BNE      28 ;NO-CONTINUE
002670 112744 000040                MOVB     #40,-(4) ;YES-REPLACE LAST CHARACTER
002674 000241                CLC
002676 006015                ROR      (5) ;WITH A SPACE AND
002700 000241                CLC ;RIGHT JUSTIFY CURRENT NUMBER
002702 006015                ROP      (5)
002704 000241                CLC
002706 006015                ROP      (5)
002710 005726                TST      (6)+
002712 000415                BR      REX

002714 011667 000214 28:  MOV      (SP),D2BTYP ;ECHO CHARACTER
002720 042767 177400 000206 BIC      #177400,D2BTYP ;STRIP WORD
002726 000004                TYPE ;ECHO CHARACTER
002730 003134                D2BTYP
002732 042716 177770 38:  BIC      #177770,(SP) ;STRIP AWAY ALL BUT 3 LSB
002736 006315                ASL      (5) ;ROTATE
002740 006315                ASL      (5) ;PREVIOUS
002742 006315                ASL      (5) ;DATA
002744 052615                BIS      (SP)+,(5) ;AND INSERT CHARACTER
002746 052767 000002 165360 REX:  BIS      #2,FKS ;GET NEXT CHARACTER
002754 052767 000101 165352                BIS      #101,FKS

```

002762 000002

RTI

```

002764 032737 040000 177570 ;SCOPE ROUTINE. THIS ROUTINE IS ENTERED AT THE END OF EACH SUBTEST.
002772 001030 ;SCOPE: BIT 040000,00SWP ;TEST SR FOR SCOPE
002774 000411 BNE A28 ;YES SCOPE
002776 013746 000004 BR A38 ;NOP IF FOR XOR
003002 012737 003064 000004 MOV 004,-(06)
003010 005737 177060 MOV 0XOR,004
003014 012637 000004 TST 00177060
003020 032737 004000 177570 A38: BIT 04000,00SWP ;TEST FOR ITERATION
003026 001006 BNE A18 ;INHIBIT ITERATION
003030 005267 176246 INC ITCNT ;INCREMENT ITERATION COUNT
003034 026767 176242 000020 CMP ITCNT,ICOUNT ;ITERATION COMPLETE
003042 003004 BGT A28 ;BRANCH IF ITERATIONS NOT COMPLETE
003044 005067 176232 A18: CLP ITCNT ;CLEAR ITERATION COUNT
003050 011667 176230 MOV (SP),LASTPC ;GET ADDRESS OF NEXT TEST
003054 016716 176224 A28: MOV LASTPC,(SP)
003060 000002 RTI ;EXIT
003062 000005 ICOUNT: 5
003064 012626 XOR: MOV (06)+,(06)+
003066 012637 000004 MOV (06)+,004
003072 000770 BR A28

```

```

003074 033727 177570 020000 ;ERROR ROUTINE. THIS ROUTINE IS ENTERED WHEN AN ERROR IS DETECTED.
003102 001401 ;HLT: BIT 00SWR,020000 ;INHIBIT PRINTOUT?
003104 000002 BEQ ,+4 ;BRANCH IF ERROR PRINT OUT
003106 000004 RTI ;RETURN TO TEST
003110 003356 TYPE
003112 011667 000016 ERRORM ;PC=
003116 004767 000014 MOV (6),D2BTYP ;TYPE PROGRAM COUNTER
003122 005737 177570 JSP 7,02A
003126 100001 TST 00SWR ;HALT ON ERROR?
003130 000000 BPL ,+4 ;
003132 000002 HALT ;YES HALT
RTI ;RETURN TO TEST

```

```
003134 000000
003136 010246
003140 010146
003142 010046
003144 016700 177764
003150 012701 000006
003154 005002
003156 006100
003160 006102
003162 062702 000260
003166 042702 177700
003172 010267 177736
003176 000004
003200 003134
003202 005002
003204 006100
003206 006102
003210 006100
003212 006102
003214 006100
003216 006102
003220 005301
003222 001357
003224 012600
003226 012601
003230 012602
003232 000207
```

```
;THIS ROUTINE CONVERTS AN OCTAL NUMBER TO ASCII AND TYPES IT ON THE TTY.
D2BTYP: 0
02A:  MOV    R2,=(6)      ;SAVE R2
      MOV    R1,=(6)      ;SAVE R1
      MOV    R0,=(6)      ;SAVE R0
      MOV    D2BTYP,R0    ;GET DATA TO BE TYPED
      MOV    R6,R1        ;GET COUNTER
      CLF    R2           ;CLEAR WORKING REGISTER
      ROL    R0           ;MOV FIRST BIT (MSB) INTO
                          ;R2
16:   ADD    R2,R2,R2      ;FORM ASCII CODE+STOP CODE (31)
      BIC    R2,R2,R2
      MOV    R2,D2BTYP
      TYPE   D2BTYP
      CLF    R2           ;CLEAR WORKING REGISTER
      ROL    R0           ;ROTATE THE
                          ;NEXT
      ROL    R2           ;OCTAL CHARACTER
                          ;INTO
                          ;REGISTER
      DEC    R6           ;DECREMENT COUNTER
      BNE    R6,R6,R6     ;GO TO 02AA IF NOT 0
      MOV    R6,R6,R6     ;FINISHED. RESTORE REGISTERS
      RTS    7           ;AND EXIT
```

```
003234 017667 000000 000056
003242 117724 000052
003246 001420
003250 121427 000012
003254 001004
003256 005267 000072
003262 100401
003264 000405
003266 005267 000026
003272 020427 005022
003276 002761
003300 004767 000016
003304 000167 177724

003310 105744
003312 062716 000002
003316 000002
003320 000000
003322 012704 004100
003326 112724 000031
003332 020427 005023
003336 001373
```

```
;THIS ROUTINE SENDS MESSAGES TO
;TUBE 0
VTOUT:  MOV    R(6),OUTT
VTOUT1: MOVH   R(OUTT,(4)+
      BEQ    VTOUTE
      CMPB   (4),R12
      BNE    16
      INC    R12
      BMI    18
      BR     28
16:   INC    OUTT
      CMP    R4,R4,R4     ;PBE
      BLT    VTOUT1
28:   JSP    R7,RESBF
      JMP    VTOUT

VTOUTE: TSTB   R(4)
      ADD    R2,R2,R2
      RTI

OUTT:  0
RESBF: MOV     R4,R4,R4   ;PBUFF,R4
16:   MOVH    R31,(4)+
      CMP     R4,R4,R4+1
      BNE    18

;THIS ROUTINE RESETS PRINTOUT
;AREA TO ALL EOS
```

TEST DZMK VT20 BOOTSTRAP LOADER
DZMK.SPC

MACY11.624 21-JAN-74 10:05 PAGE 2-5

003340 012704 004100
003344 012767 177762 000002
003352 000207

MOV 8PRUFF,R4
MOV 8-14.,RETCNT
RIS 87

003354 177762

RETCNT: -14.

003356	005015	041520	020075		ASCII MESSAGES
003364	000				ERROR: .ASCIZ <15><12>'PC= '
003365	015	173012	051120	M6:	.ASCIZ <15><12><366>'PRG='<360>
003372	021507	170075	000		
003377	015	051012	046517	M7:	.ASCIZ <15><12>'ROM DATA'<15><12>
003404	042040	052101	006501		
003412	000012				
003414	005015	000		M8:	.ASCIZ <15><12>
003417	015	051012	046517	M9:	.ASCIZ <15><12>'ROM ADDRESS/IMAGE ADDRESS ROM DATA+IMAGE DATA'<15><12>
003424	040440	042104	042522		
003432	051523	044457	040515		
003440	042507	040440	042104		
003446	042522	051523	051040		
003454	046517	042040	052101		
003462	025101	046511	043501		
003470	020105	040504	040524		
003476	005015	000			
003501	057	000		M10:	.ASCIZ ' / '
003503	040	000		M11:	.ASCIZ ' ' '
003505	052	000		M12:	.ASCIZ ' . '
003507	015	042412	042116	MBELLI:	.ASCII <15><12>/END PASS /
003514	050040	051501	020123		
003522	040				
003523	040	040	040		.BYTE 40,40,40,40,40,40,40,40,40,40,40,40
003526	040	040	040		
003531	040	040	040		
003534	040	040	040		
003537	040	040	040		.BYTE 40,40,40,40,40,40,40,40,40,15,12,0
003542	040	040	040		
003545	040	040	040		
003550	015	012	000		
003553	015	005012	046764	MHED:	.ASCII <15><12><12><364>/MD-11-DZBMK-B /
003560	026504	030461	042055		
003566	041132	045515	041055		
003574	040				
003575	374	052126	030062		.ASCIZ <374>/VT20 BOOTSTRAP LOADER TEST/<360>
003602	041040	047517	051524		
003610	051124	050101	046040		
003616	040517	042504	020122		
003624	042524	052123	000360		
003632	005015	047362	052117	WAI:	.ASCII <15><12><362>/NOT/<40><374>
003640	176040				
003642	020101	047522	020115		.ASCIZ /A ROM ADDRESS/<360><12><15>
003650	042101	051104	051505		
003656	170123	006412	000		
003663	015	051012	040505	MCYC:	.ASCIZ <15><12>/READING DATA FROM ADDRESS: /
003670	044504	043516	042040		
003676	052101	020101	051106		
003704	046517	040440	042104		
003712	042522	051523	020072		
003720	000				
003776					.=3776

TEST DZBMK VT20 ROOTSTRAP LOADER
DZBMK.SPC

MACY11.624 21-JAN-74 10:05 PAGE 3-1

003776	000000				
004000	012701	160000	012702		
004006	000006				
004010	012703	173100	005012		
004016	010742				
004020	110706	014304	005714		
004026	100775				
004030	010712	012706	000024		
004036	010441				
004040	040601	010111	011102		
004046	005214				
004050	105714	100376	116412		
004056	000002				
004060	005211	120227	000375		
004066	001366				
004070	105222	000142	177560		
004076	175610				
004100	000000				
	005022				
005022	031	031	031		
005025	031				
	000001				

WORD
DATA CUT INTO THE M792-YK
012701,160000,012702,000006
012703,173100,005012,010742
110706,014304,005714,100775
010712,012706,000024,010441
040601,010111,011102,005214
105714,100376,116412,000002
005211,120227,000375,001366
105222,000142,177560,175610
PBUFF: 0
M,+720
PBE: .BYTE 31,31,31,31
END

A1S	003044	A28	003054	A38	003020	RPTVEC	= 000014
DISPLA	= 177570	DONE	002134	DONE1	002174	DONE	002646
D2RIYE	003134	EMTVEC	= 000030	END	002114	EPC	001306
ERRFLG	001310	ERRORM	003356	ERRPR1	001536	ERROR2	001604
ERRVEC	= 000004	FIXED	001372	FKR	= 170336	FKS	= 170334
FKVEC	= 000320	FPEVEC	= 000244	HLT	= 104400	ICNT	= 001300
ICOUNT	003062	IMAGE	001322	INCSR	001314	INDAT	001316
IOTVEC	= 000020	ITCNT	001302	LASTPC	001304	MBELL	003507
MCYC	003663	MHED	003553	MMVEC	= 000250	M10	003501
M11	003503	M12	003505	M6	003365	M7	003377
M8	003414	M9	003417	QUIT	003320	O2A	003136
PARVEC	= 000114	PBE	005022	PBUFF	004100	PC	= 0000007
PCNT	002200	PFVEC	= 000024	PIRQ	= 177772	PIRVEC	= 000240
PPER	002516	PRERN	002474	PRGNUM	001406	PRGTAB	001330
PRGO	001442	PRGOR	001446	PRG1	002202	PRG1A	002234
PRG1B	002244	PRG1C	002260	PRG1D	002316	PRG2	002322
PRG2A	002412	PRG2B	002442	PRG2C	002510	PRG20	002366
PRMTRS	001336	PSW	= 177776	RECD	002526	RECD1	002572
RECD1	002562	RESBF	003322	RESTAR	001424	RESVEC	= 000010
PETCNT	003354	REX	002746	ROMADD	001326	R0	= 0000000
R1	= 0000001	R10	= 0000000	R11	= 0000001	R12	= 0000002
R13	= 0000003	R14	= 0000004	R15	= 0000005	R2	= 0000002
R3	= 0000003	R4	= 0000004	R5	= 0000005	SCOPE	= 104000
SCPBLK	001300	SLR	= 177774	SP	= 0000006	START1	000200
START3	000210	STKPTR	= 000500	SWR	= 177570	TBITVE	= 000014
TEMP	001324	TICKS	001312	TKB	= 177562	TKS	= 177560
TKVEC	= 000060	TPB	= 177566	TPS	= 177564	TPVEC	= 000064
TRAPVE	= 000034	TRTVEC	= 000014	TYPE	= 000004	T1	001462
T1A	001504	T1B	001544	T2	001546	T2A	001564
T2B	001610	T2C	001622	T2D	001632	T2E	001642
T3	001652	T3A	001674	T3AA	001666	T3B	001702
T3C	001712	T3D	001720	T3E	001730	T3F	001740
T4	001760	T4B	002000	T4C	002004	T4D	002014
T4E	002112	UBREAK	= 177770	VIC	= 170304	VTOUT	003234
VTOUTE	003310	VTOUT1	003242	VIS	= 170302	WA	003632
WORDS	001320	XOR	003064	.HLT	003074	.SCOPE	002764
.	= 005026						

ERRORS DETECTED: 0